

Mobility Lab ML306643

Mobility Lab ML306643 Wireless Smart TV Keyboard User Manual

Model: ML306643

INTRODUCTION

This user manual provides detailed instructions for the Mobility Lab ML306643 Wireless Smart TV Keyboard. It covers essential information regarding setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device. Please read this manual thoroughly before using the keyboard.

PACKAGE CONTENTS

- Mobility Lab ML306643 Wireless Smart TV Keyboard
- USB Wireless Receiver
- AAA Batteries (2x, *not included*)

PRODUCT OVERVIEW

The Mobility Lab ML306643 is a slim and elegant wireless keyboard designed for seamless integration with your Smart TV or Windows computer. It features an AZERTY layout and an integrated touchpad for convenient navigation without an additional mouse.



Figure 1: Top-down view of the keyboard, highlighting the AZERTY layout and integrated touchpad.



Figure 2: Angled view demonstrating the keyboard's sleek design.



Figure 3: Detailed view of the integrated touchpad for mouse functionality.



Figure 4: Key features of the Mobility Lab ML306643 keyboard.

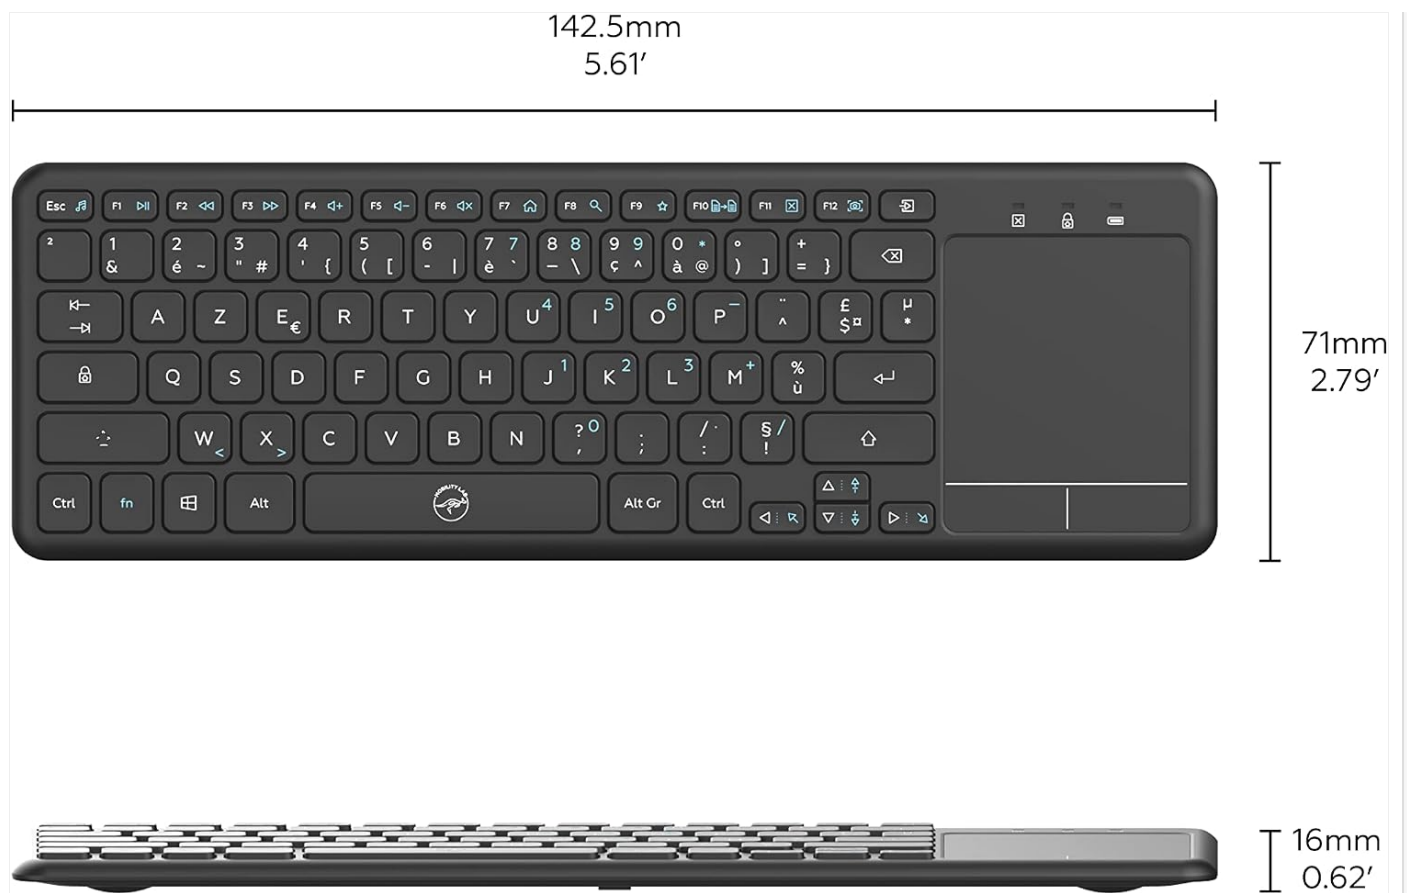


Figure 5: Keyboard dimensions for reference.



Figure 6: Keyboard in a typical usage environment.

Key Features:

- **Wireless Connectivity:** 2.4GHz wireless connection via USB receiver.
- **Integrated Touchpad:** Navigate with ease, eliminating the need for a separate mouse.
- **AZERTY Layout:** Standard French keyboard layout.
- **Slim and Elegant Design:** Blends seamlessly into modern home or office environments.
- **Durable Construction:** Designed to withstand minor drops and splashes.
- **Wide Compatibility:** Works with Smart TVs and Windows computers.
- **Responsive Keys:** Flat and reactive keys for optimal typing comfort.

SETUP GUIDE

1. **Insert Batteries:** Locate the battery compartment on the back of the keyboard. Insert two (2) AAA batteries, ensuring correct polarity (+/-).

- 2. **Connect USB Receiver:** Plug the small USB wireless receiver into an available USB port on your Smart TV or Windows computer.
- 3. **Power On:** Turn on the keyboard using the power switch, usually located on the side or back of the device.
- 4. **Automatic Connection:** The keyboard should automatically connect to the receiver. No additional drivers or software are typically required.
- 5. **Test Functionality:** Open a text editor or browser on your connected device and test typing and touchpad functionality to ensure proper operation.

OPERATING INSTRUCTIONS

Keyboard Usage:

- **Typing:** Use the standard AZERTY keys for text input.
- **Function Keys (F1-F12):** These keys often have secondary functions (e.g., volume control, media playback, brightness) accessible by pressing the **Fn** key simultaneously. Refer to your device's manual for specific function key mappings.
- **Special Keys:** The keyboard includes dedicated keys for Smart TV functions (e.g., Home, Search, Volume) and Windows shortcuts.

Touchpad Usage:

- **Cursor Movement:** Slide your finger across the touchpad surface to move the cursor on the screen.
- **Left Click:** Tap once on the touchpad surface or press the left button below the touchpad.
- **Right Click:** Tap with two fingers on the touchpad surface or press the right button below the touchpad.
- **Scrolling:** Slide two fingers up or down on the touchpad to scroll through documents or web pages.
- **Zoom (if supported):** Pinch in or out with two fingers to zoom in or out.

MAINTENANCE

- **Cleaning:**
 - To clean the keyboard, gently wipe the surface with a soft, slightly damp cloth.
 - Do not use harsh chemicals, abrasive cleaners, or solvents, as these may damage the surface.
 - Ensure no liquid enters the keyboard.
- **Battery Replacement:**
 - When the keyboard's performance degrades or it stops responding, replace the AAA batteries.
 - Always replace both batteries at the same time with new ones.
 - Dispose of used batteries according to local regulations.
- **Storage:**
 - Store the keyboard in a cool, dry place away from direct sunlight and extreme temperatures.
 - If storing for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Keyboard not responding	Low batteries; USB receiver not connected; Keyboard not powered on; Out of range.	Replace batteries; Ensure USB receiver is firmly plugged in; Turn on keyboard; Move keyboard closer to the receiver (within 10 meters).
Keys are sticky or unresponsive	Dirt or debris under keys; Worn out keys.	Clean the keyboard surface and around keys; If keys are physically damaged, contact support.
Touchpad not working correctly	Dirty touchpad surface; Software issue on connected device; Interference.	Clean the touchpad surface; Restart your Smart TV/computer; Ensure no other wireless devices are causing interference.
Intermittent connection or lag	Distance from receiver; Wireless interference; Low batteries.	Move closer to the receiver; Avoid placing the receiver near other electronic devices (e.g., Wi-Fi routers, cordless phones); Replace batteries.

SPECIFICATIONS

Brand	Mobility Lab
Model Number	ML306643
Connectivity Technology	2.4GHz Wireless
Compatible Devices	Smart TV, Windows Computer
Keyboard Description	Wireless, AZERTY Layout
Number of Keys	105
Color	Black
Power Source	2 x AAA Batteries (not included)
Product Dimensions (L x W x H)	36.7 cm x 12.1 cm x 1.8 cm (14.45 in x 4.76 in x 0.71 in)
Manufacturer	MOBILITY
Country of Origin	China

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or visit the official Mobility Lab website. Keep your proof of purchase for warranty claims.

Note: Information regarding spare parts availability is not provided by the manufacturer.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B34MZT7Z>

More documents and user manuals: <https://manuals.plus/>