

[Manuals.plus](#) /

› [Ericson Manufacturing](#) /

› Ericson Manufacturing 1001 Series Wide Area Task Light Instruction Manual

Ericson Manufacturing 1005-14380-250-1

Ericson Manufacturing 1001 Series Wide Area Task Light Instruction Manual

Model: 1005-14380-250-1

1. PRODUCT OVERVIEW

The Ericson Manufacturing 1001 Series Wide Area Task Light is a robust 25W LED luminaire designed for illuminating large work areas. It features a durable metal construction, an integrated switch for easy operation, and a 6-foot 16/3 SOW power cable for reliable power connection. This task light is suitable for various demanding environments, including fleet and plant maintenance applications.



Image 1.1: The Ericson Manufacturing 1001 Series Wide Area Task Light, showcasing its protective metal cage and robust design.



Image 1.2: The official logo for Ericson Manufacturing.

2. SAFETY INFORMATION

Please read and understand all safety instructions before installing or operating this product. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Electrical Safety:** Ensure the power source matches the voltage requirements of the luminaire. Do not operate with damaged cords or plugs. Always disconnect power before servicing or cleaning.
- **Installation:** Install the luminaire securely according to the mounting instructions. Do not mount on unstable surfaces.
- **Environment:** This product is rated for outdoor usage. However, avoid direct exposure to extreme weather conditions unless specifically designed for such. Keep away from flammable materials.
- **Maintenance:** Only qualified personnel should perform repairs. Do not attempt to modify the luminaire.
- **Proposition 65 Warning:** This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.

3. PACKAGE CONTENTS

Verify that all items are present upon unpacking:

- Ericson Manufacturing 1001 Series Wide Area Task Light (Model: 1005-14380-250-1)
- Integrated 6-foot 16/3 SOW power cable with switch

4. SETUP

1. **Unpacking:** Carefully remove the task light from its packaging. Inspect for any signs of damage during transit.
2. **Mounting:** The luminaire is designed for wall mounting.
 - Identify a suitable, stable wall surface capable of supporting the weight of the luminaire.
 - Use appropriate fasteners (not included) for your wall type to securely attach the luminaire's mounting bracket.
 - Ensure the light is positioned to provide optimal illumination for the desired work area.
3. **Power Connection:**
 - Ensure the integrated switch on the power cable is in the "OFF" position.
 - Plug the 6-foot 16/3 SOW power cable into a compatible 120V AC grounded electrical outlet.

5. OPERATION

Operating the Ericson Manufacturing 1001 Series Task Light is straightforward:

1. **Turning On:** Once properly connected to power, locate the integrated switch on the power cable. Flip the switch to the "ON" position to illuminate the LED luminaire.
2. **Turning Off:** To turn off the light, flip the integrated switch to the "OFF" position.

Note: The luminaire features an integrated LED light source and does not require bulb replacement.

6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your task light.

- **Cleaning:** Disconnect power before cleaning. Use a soft, damp cloth to wipe down the exterior of the luminaire. Do not use abrasive cleaners or solvents.
- **Inspection:** Periodically inspect the power cable, plug, and luminaire housing for any signs of wear, damage, or loose connections. If damage is found, discontinue use and contact a qualified electrician or Ericson Manufacturing for assistance.
- **LEDs:** The LED light source is designed for long life and is not user-replaceable.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	No power to the outlet. Power cable or plug is damaged. Switch is in the "OFF" position.	Check the circuit breaker or try a different outlet. Inspect the cable and plug. If damaged, discontinue use and seek professional repair. Ensure the switch is in the "ON" position.
Light flickers or dims.	Loose connection. Voltage fluctuation.	Ensure the plug is securely seated in the outlet. Consult an electrician to check the electrical supply.

8. SPECIFICATIONS

Brand	Ericson Manufacturing
Model Name	1001 Series Wide Area Task Light
Part Number	1005-14380-250-1
Light Source Type	LED
Power	25W
Cable Length	6 feet (16/3 SOW Cab)
Control Method	Integrated Switch
Material	Metal
Color	Black
Mounting Type	Wall Mount
Indoor/Outdoor Usage	Outdoor
Item Weight	1 pound
UPC	782862904176

9. WARRANTY AND SUPPORT

For warranty information or technical support, please contact Ericson Manufacturing directly. Refer to their official website or product packaging for the most current contact details and warranty terms.

Website: www.ericson.com

Customer Service: Refer to the manufacturer's website for contact numbers or email support.

© 2023 Ericson Manufacturing. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question