

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [DOSS](#) /
- › [DOSS Extreme Boom Bluetooth Outdoor Speaker User Manual](#)

DOSS Extreme Boom

DOSS Extreme Boom Bluetooth Outdoor Speaker User Manual

Model: Extreme Boom | Brand: DOSS

INTRODUCTION

The DOSS Extreme Boom Bluetooth Outdoor Speaker is designed to deliver powerful, immersive audio for all your outdoor adventures. Featuring 60W of mighty sound, deep bass, and a robust IPX6 waterproof rating, this speaker is built to withstand the elements while providing up to 30 hours of continuous playtime. Its portable design with a built-in handle and flexible strap makes it easy to carry wherever your music takes you.



Figure 1: DOSS Extreme Boom Bluetooth Outdoor Speaker in Orange. This image shows the speaker from a front-angle view, highlighting its robust design and integrated handle.

WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- 1 x DOSS Extreme Boom Bluetooth Outdoor Speaker
- 1 x USB-C charging cable
- 1 x Portable Strap
- 1 x User Manual

SETUP GUIDE

1. Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB-C charging cable to the speaker's DC IN port

(located under the protective flap on the back) and the other end to a USB power adapter (not included). The battery indicator lights on the top panel will show charging progress. A full charge takes approximately 6 hours.



Figure 2: Rear view of the DOSS Extreme Boom speaker, showing the protective flap covering the USB-C charging port, USB-A output, AUX-in, and TF card slot.

2. Powering On/Off

Press and hold the **Power button** (🔌) on the top panel for 2-3 seconds to turn the speaker on or off. A sound prompt will indicate the power status.

3. Bluetooth Pairing

1. Turn on the DOSS Extreme Boom speaker. The Bluetooth indicator light will flash blue, indicating it's in pairing mode.
2. Enable Bluetooth on your smartphone, tablet, or other Bluetooth-enabled device.
3. Search for "DOSS Extreme Boom" in your device's Bluetooth list and select it to connect.
4. Once successfully paired, the Bluetooth indicator light will turn solid blue, and you will hear a confirmation sound.

OPERATING INSTRUCTIONS

Button Functions

Button	Function
Power 	Press and hold for 2-3 seconds to power on/off.
BASS	Press to toggle Deep Bass Booster on/off.
- / +	Short press for volume down/up. Long press for previous/next track.
Play/Pause 	Press to play or pause music.
M (Mode)	Press to switch between Bluetooth, AUX, and TF Card modes.
TWS 	Press and hold to activate True Wireless Stereo (TWS) pairing.

True Wireless Stereo (TWS) Pairing

For an enhanced stereo experience, you can pair two DOSS Extreme Boom speakers together:

1. Ensure both DOSS Extreme Boom speakers are powered on and not connected to any other Bluetooth device.
2. On one speaker (this will be your primary speaker), press and hold the **TWS button**  for 2-3 seconds. You will hear a pairing prompt.
3. The primary speaker will automatically search for the second speaker. Once connected, you will hear a confirmation sound, and both speakers will play in stereo.
4. Now, connect your Bluetooth device to the primary speaker as usual.



Figure 3: Two DOSS Extreme Boom speakers paired for an immersive stereo sound experience, shown with a group of people enjoying music by a lake.

Using the Power Bank Feature

The DOSS Extreme Boom speaker features an integrated USB-A port (labeled "USB OUT" under the protective flap) that allows you to charge your phone or other devices on the go. Simply connect your device's charging cable to this port.

Your browser does not support the video tag.

Video 1: Official product video demonstrating the DOSS Extreme Boom Bluetooth Speaker's features, including its portability, sound, and extra bass. This video is provided by the seller, Wonders Tech.

MAINTENANCE AND CARE

Water Resistance (IPX6)

The DOSS Extreme Boom speaker is IPX6 waterproof, meaning it can withstand powerful water jets from any direction. This makes it suitable for outdoor use and protection against rain or splashes. **Important: Do not**

submerge the speaker in water. Ensure the protective flap covering the ports on the back is securely closed before exposing the speaker to water.

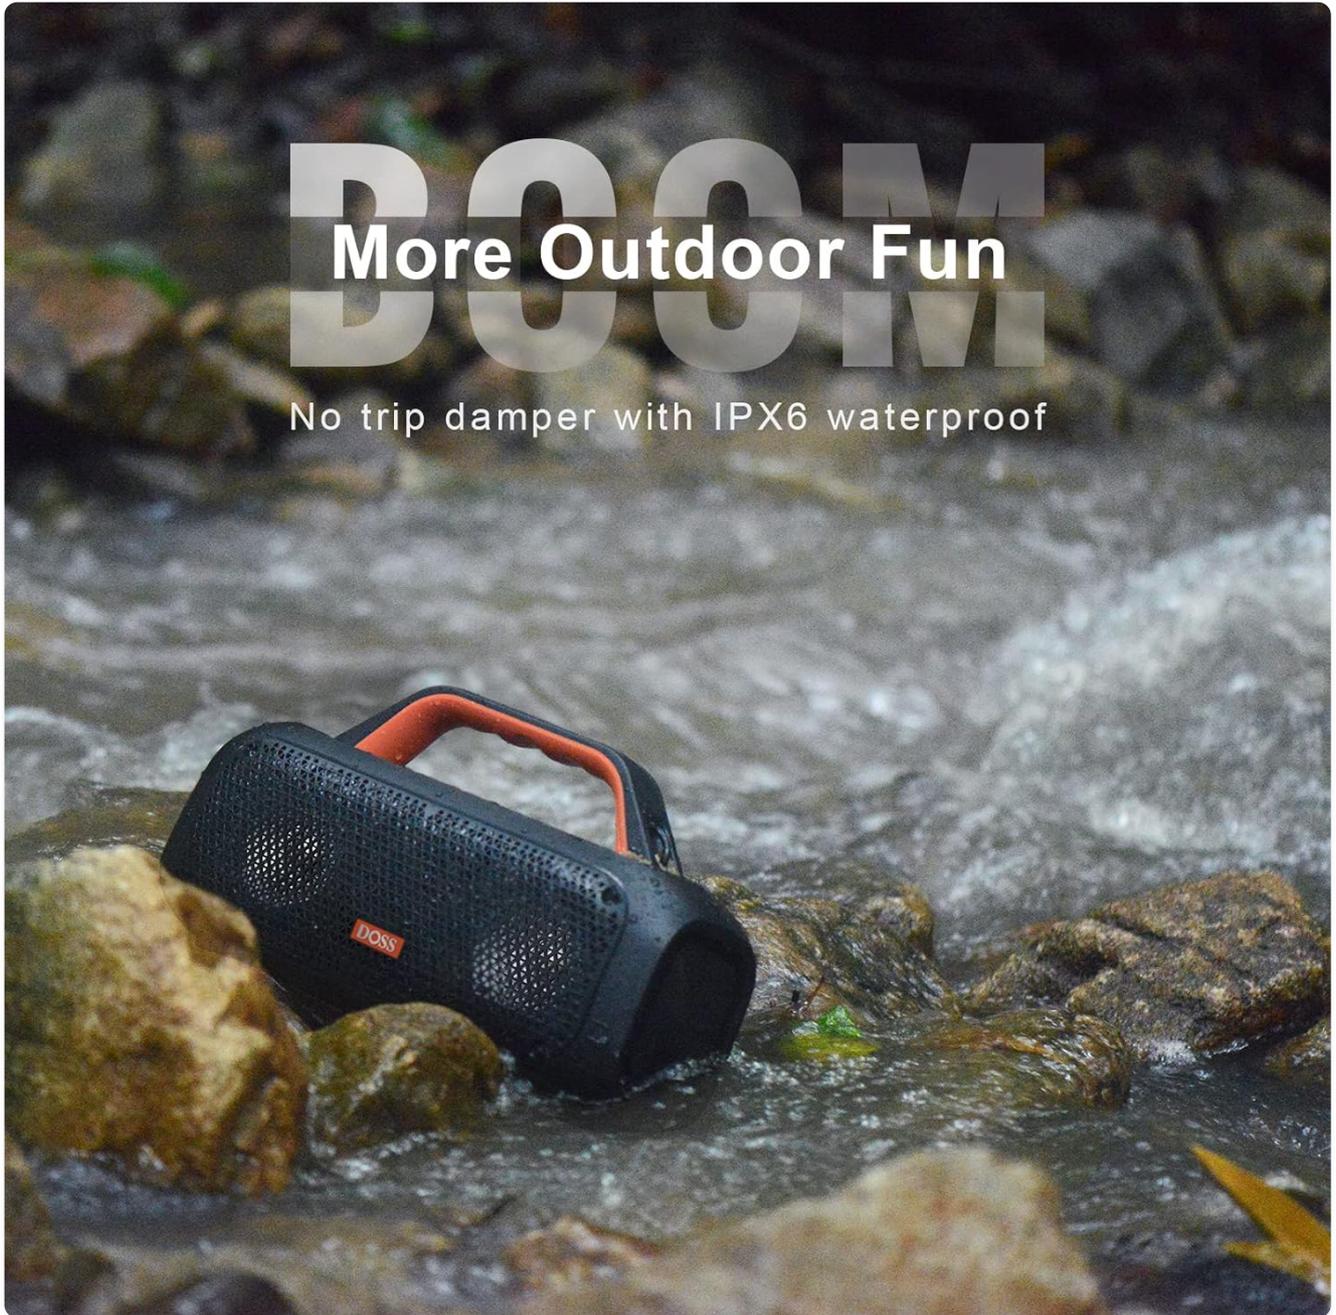


Figure 4: The DOSS Extreme Boom speaker positioned in a shallow stream, demonstrating its IPX6 waterproof capability for outdoor use.

Cleaning and Storage

- Clean the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- If not used for extended periods, charge the battery periodically to maintain its lifespan.

TROUBLESHOOTING

Problem	Solution
Speaker does not power on.	Ensure the battery is charged. Connect the speaker to a power source using the USB-C cable.

Problem	Solution
Cannot pair with Bluetooth device.	<p>Ensure the speaker is in Bluetooth pairing mode (flashing blue light).</p> <p>Make sure Bluetooth is enabled on your device and it's within 10 meters of the speaker.</p> <p>Forget "DOSS Extreme Boom" from your device's Bluetooth list and try pairing again.</p> <p>Restart both the speaker and your device.</p>
No sound or low volume.	<p>Increase the volume on both the speaker and your connected device.</p> <p>Ensure the speaker is in the correct input mode (Bluetooth, AUX, TF Card).</p> <p>Check if the speaker is successfully paired (solid blue light).</p>
Poor sound quality.	<p>Move the speaker closer to your Bluetooth device to avoid interference.</p> <p>Ensure there are no obstacles between the speaker and your device.</p> <p>Try playing different audio sources to rule out file quality issues.</p>

SPECIFICATIONS

Feature	Detail
Model Name	Extreme Boom
Speaker Type	Outdoor Bluetooth Speaker
Speaker Maximum Output Power	60 Watts
Connectivity Technology	Bluetooth, Auxiliary, TF Card
Bluetooth Version	5.3
Bluetooth Range	10 Meters
Water Resistance Level	IPX6 Waterproof
Battery Life	Up to 30 Hours (at 50% volume)
Battery Capacity	10400 mAh
Charging Time	6 Hours
Power Source	Battery Powered
Product Dimensions	12.7"D x 4.8"W x 7.3"H
Item Weight	5.59 Pounds
Special Features	Deep Bass Booster, TWS Expandable Sound, Built-In Powerbank



Figure 5: Dimensions of the DOSS Extreme Boom speaker, showing its length, width, and height for reference.

WARRANTY AND SUPPORT

One-Year Warranty

Our products are backed by a 12-month warranty, starting from the date of purchase, covering any quality-related concerns.

Customer Support

If you have any issues with the product, please feel free to contact us. We are committed to providing you with 24-hour prompt assistance and support!

Phone: 1-833-275-3677

Email: support@dossav.com



Figure 6: DOSS customer support details, including phone number and email address, for assistance with product inquiries.

