



[Manuals.plus](#) /

› [FRIDEKO HOME](#) /

› FRIDEKO HOME Rattan Pendant Light Fixture L02159-02-US User Manual

## FRIDEKO HOME L02159-02-US

# FRIDEKO HOME Rattan Pendant Light Fixture L02159-02-US User Manual

Model: L02159-02-US

## 1. INTRODUCTION

---

Thank you for choosing the FRIDEKO HOME Rattan Pendant Light Fixture. This manual provides essential information for the safe and efficient installation, operation, and maintenance of your new lighting fixture. Please read these instructions carefully before installation and retain them for future reference.



Image: FRIDEKO HOME Rattan Pendant Light Fixture installed in a living room setting.

This hand-woven rattan pendant light is designed to provide both targeted and ambient light, creating a warm and inviting atmosphere. Its natural bamboo and wicker construction makes it a versatile addition to various interior styles, including farmhouse, bohemian, coastal, and minimalist.

## 2. SAFETY INFORMATION

---

- **WARNING:** Risk of electric shock. Disconnect power at the fuse box or circuit breaker before installation or servicing.
- All electrical connections must be in accordance with local codes, ordinances, or the National Electric Code (NEC). Consult a qualified electrician if you are unfamiliar with proper electrical wiring connections.
- Use only the recommended bulb type and wattage (E26 base, MAX 60W). Exceeding the maximum wattage may cause overheating and fire.
- Do not install this fixture in wet or damp locations. This product is intended for indoor use only.
- Ensure the fixture is securely mounted to a structural element of the ceiling.
- Do not touch the bulb directly when the fixture is on or immediately after turning it off, as it will be hot.

### 3. PACKAGE CONTENTS

---

Verify that all components are present before beginning installation:

- Rattan Lampshade
- Wood Canopy
- Adjustable Rope Cord with E26 Lamp Socket
- Mounting Hardware (screws, wire nuts, mounting bracket)

*Note: Bulb is NOT included.*

### 4. PRODUCT FEATURES

---

- **Hand-Woven Rattan Design:** Crafted from natural rattan, providing a unique bohemian and farmhouse aesthetic.
- **Adjustable Cord Length:** The hanging cord can be adjusted up to 47.2 inches (120 cm) to suit your desired height.
- **Standard E26 Socket:** Compatible with various E26 base bulbs, including incandescent, Edison, CFL, and LED (max 60W).
- **Wood Canopy:** Features a 4.7-inch diameter wooden canopy for a cohesive and natural look.
- **Open-Air Lampshade:** Maximizes light emission and creates beautiful patterns on surrounding surfaces.

## PRODUCT DETAILS



*Natural Rope Cord*



*Hand-woven Craft*



*E26 Lamp Socket*



*Wood Ceiling Plate*

Image: Detailed view of the pendant light's components and craftsmanship.

## 5. SETUP AND INSTALLATION

This rattan pendant light is designed for quick and easy installation on flat, vaulted, or sloped ceilings. All necessary mounting hardware is included.

### 5.1 Before You Begin

- **Turn off power:** Ensure the power supply to the installation area is completely off at the circuit breaker or fuse box.
- **Gather tools:** You may need a screwdriver, wire strippers, electrical tape, and a ladder.

### 5.2 Installation Steps

1. **Attach Mounting Bracket:** Secure the mounting bracket to your ceiling junction box using the provided screws.
2. **Adjust Cord Length:** Determine the desired hanging length for your pendant light. The rope cord can be adjusted by loosening the screw on the wood canopy, pulling the cord to the desired length, and then tightening the screw to secure it.
3. **Make Electrical Connections:** Connect the fixture's wires to your household wiring. Typically, connect the black wire from the fixture to the black wire from the junction box, the white wire from the

fixture to the white wire from the junction box, and the ground wire from the fixture to the ground wire from the junction box. Use wire nuts to secure connections.

4. **Mount Canopy:** Carefully push the wood canopy up to the ceiling, aligning the holes in the canopy with the screws on the mounting bracket. Secure the canopy in place with the decorative nuts or screws.
5. **Install Bulb:** Screw an E26 base bulb (not included, max 60W) into the lamp socket.



Image: Product dimensions for planning installation.

Video: Official product video demonstrating the Rattan Handwoven Pendant Light. This video showcases the light's design and how it appears in various settings, providing a visual guide to its aesthetic and potential applications.

## 6. OPERATING INSTRUCTIONS

---

After successful installation and bulb insertion:

1. **Restore Power:** Turn on the power supply at the circuit breaker or fuse box.
2. **Activate Light:** Operate the light using your wall switch or the control method connected to your electrical circuit.

### 6.1 Bulb Compatibility

The fixture is designed for E26 base bulbs with a maximum wattage of 60W. Compatible bulb types include:

- Incandescent bulbs
- Edison bulbs
- CFL bulbs
- LED bulbs



60W

60W MAX  
Bulb



E26 Base



120V/AC

### Compatible with E26 Bulbs

 
(Bulb Not Included)



Halogen



LED



Tube



CFL



RGB

Image: Compatible E26 bulb types for the pendant light.

## 7. MAINTENANCE

To maintain the appearance and functionality of your pendant light:

- **Cleaning:** Always disconnect power before cleaning. Wipe the rattan shade and wood canopy with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the finish.
- **Bulb Replacement:** Ensure power is off and the bulb has cooled before replacing. Screw in a new E26 bulb (max 60W).
- **Inspection:** Periodically check all connections and mounting hardware to ensure they remain secure.

## 8. TROUBLESHOOTING

---

If your pendant light is not functioning correctly, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Light does not turn on	<ol style="list-style-type: none"><li>1. Power is off</li><li>2. Loose wiring connection</li><li>3. Faulty bulb</li></ol>	<ol style="list-style-type: none"><li>1. Check circuit breaker/fuse box</li><li>2. Verify all wire connections are secure (with power off)</li><li>3. Replace bulb with a new, working E26 bulb (max 60W)</li></ol>
Light flickers	<ol style="list-style-type: none"><li>1. Loose bulb</li><li>2. Incompatible dimmer switch</li><li>3. Loose wiring</li></ol>	<ol style="list-style-type: none"><li>1. Tighten bulb</li><li>2. Ensure dimmer switch is compatible with your bulb type</li><li>3. Check wiring connections (with power off)</li></ol>

## 9. SPECIFICATIONS

---

Feature	Detail
Brand	FRIDEKO HOME
Model Number	L02159-02-US
Material	Rattan
Color	Beige / Brown
Product Dimensions	7.48"L x 7.36"W x 8.27"H
Adjustable Cord Length	Up to 47.2 inches (120 cm)
Wood Canopy Diameter	4.7 inches
Bulb Base	E26
Max Wattage	60 Watts
Voltage	110V-240V (AC)
Indoor/Outdoor Usage	Indoor
Item Weight	1.3 Pounds
Assembly Required	No

## 10. WARRANTY AND SUPPORT

---

FRIDEKO HOME is committed to customer satisfaction. If you encounter any issues or have questions regarding your rattan pendant light fixture, please contact us directly via the Amazon message box. We aim to respond within 24 hours to provide assistance and resolve any concerns.

Please retain your proof of purchase for any warranty claims.

