

[Manuals.plus](#) /

› [Newhai](#) /

› Newhai Upgraded Vegetable Slicer & Shredder Blade Instruction Manual

Newhai B0B3D2B29N

Newhai Upgraded Vegetable Slicer & Shredder Blade Instruction Manual

Model: B0B3D2B29N

[Introduction](#) [Safety Instructions](#) [Package Contents](#) [Setup](#) [Operating](#)
[Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for purchasing the Newhai Upgraded Electric Vegetable Slicer and Shredder Blade. This versatile kitchen appliance is designed to simplify your food preparation tasks, allowing you to quickly and efficiently slice or shred various vegetables. Please read this manual thoroughly before operating the device to ensure safe and optimal performance.



Image 1.1: Newhai Upgraded Electric Vegetable Slicer. This image displays the main unit of the electric vegetable slicer, shown with various fresh vegetables such as cabbage, lemons, celery, and ginger, indicating its intended use for processing produce.

2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Keep hands and utensils away from moving blades during operation to prevent injury.
- Ensure the appliance is unplugged before assembling, disassembling, or cleaning.
- Do not immerse the motor unit in water or other liquids.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Supervise children to ensure they do not play with the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only attachments recommended or sold by the manufacturer.
- Do not use outdoors.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x Newhai Electric Slicer Machine (Main Unit)
- 1 x Slicer Blade (Pre-installed or separate)
- 1 x 3x3mm Shredder Blade
- 1 x User Manual

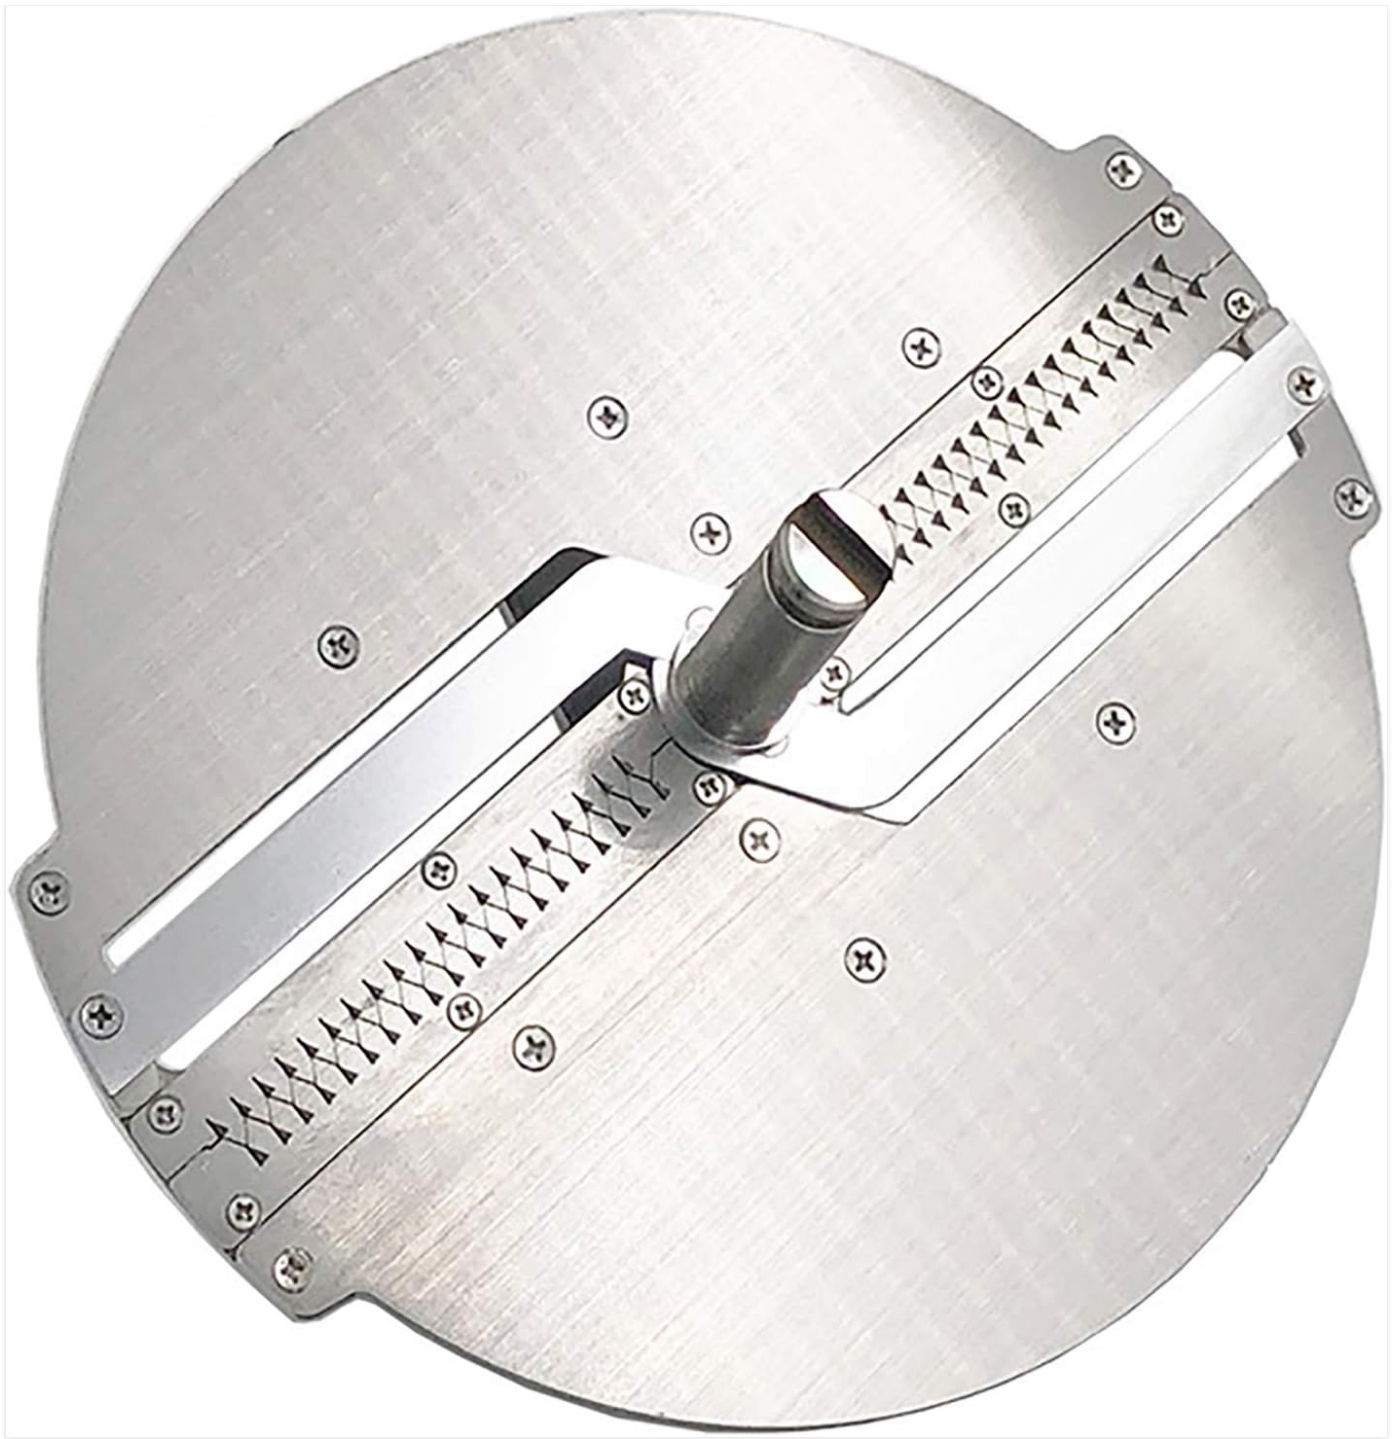


Image 3.1: Newhai 3x3mm Shredder Blade. This image shows a detailed view of the stainless steel shredder blade, highlighting its circular design and sharp cutting surfaces for fine shredding.

4. SETUP AND BLADE INSTALLATION

1. **Unpack the Unit:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Clean Components:** Before first use, clean all parts that will come into contact with food. Refer to the "Maintenance and Cleaning" section for detailed instructions.
3. **Place the Slicer:** Position the main slicer unit on a stable, flat, and dry surface. Ensure there is adequate space around the unit for safe operation.
4. **Install/Change Blade:**
 - Ensure the appliance is unplugged from the power outlet.
 - Open the blade compartment cover.

- Carefully align the desired blade (slicer or shredder) with the central shaft and guide slots.
- Push the blade firmly until it clicks into place. Ensure it is securely seated.
- Close the blade compartment cover.
- *Caution: Blades are extremely sharp. Handle with care.*



Image 4.1: Newhai Electric Vegetable Slicer (Side View). This image provides a side view of the electric vegetable slicer, illustrating the feeding chute where vegetables are inserted and the output tray where processed food exits.

5. OPERATING INSTRUCTIONS

This appliance is designed for automatic operation, making vegetable preparation efficient.

1. **Prepare Vegetables:** Wash and peel vegetables as needed. Cut larger vegetables into pieces that fit comfortably into the feeding chute.
2. **Select Blade:** Ensure the correct blade (slicer or shredder) is installed for your desired task. Refer to Section 4 for blade installation.

3. **Position Container:** Place a suitable container under the output chute to collect the sliced or shredded vegetables.
4. **Power On:** Plug the appliance into a grounded electrical outlet. Turn on the power switch (if applicable).
5. **Feed Vegetables:** Carefully place vegetables into the feeding chute. Use the food pusher to guide the vegetables towards the rotating blade. *Never use your fingers or other utensils to push food.*
6. **Process:** The machine will automatically process the vegetables. Continue feeding until all vegetables are processed.
7. **Power Off:** Once finished, turn off the power switch and unplug the appliance from the outlet.

Note: The Newhai Slicer is specifically designed for processing vegetables. Do not attempt to process hard items like bones, frozen foods, or nuts, as this may damage the blades or motor.

6. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your Newhai Vegetable Slicer.

- **Always Unplug:** Ensure the appliance is unplugged from the power source before cleaning.
- **Disassemble:** Carefully remove the blade and any other removable parts.
- **Hand Wash Only:** All removable parts, including blades, should be hand washed with warm, soapy water. Rinse thoroughly and dry immediately to prevent rust. *Do not wash in a dishwasher.*
- **Wipe Main Unit:** The main motor unit should be wiped clean with a damp cloth. Do not immerse the main unit in water or spray it with water.
- **Dry Thoroughly:** Ensure all parts are completely dry before reassembling or storing the appliance.
- **Storage:** Store the appliance and its accessories in a clean, dry place, out of reach of children.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power switch off; power outage.	Ensure plug is securely in outlet; turn power switch on; check household circuit breaker.
Blades not rotating or rotating slowly.	Blade not installed correctly; food jammed; motor overheating.	Unplug and re-install blade securely; unplug, clear any food blockage, then restart; allow motor to cool down for 30 minutes.
Poor slicing/shredding performance.	Dull blade; incorrect blade for task; improper food preparation.	Inspect blade for damage (replace if necessary); ensure correct blade is used; cut vegetables to appropriate size.
Loud noise during operation.	Blade not seated properly; foreign object in unit; motor issue.	Unplug and re-seat blade; unplug and inspect for foreign objects; if problem persists, contact customer support.

8. PRODUCT SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	Newhai
Model	B0B3D2B29N
Material	Stainless Steel
Color	Silver
Special Feature	Electric
Recommended Uses	Vegetable
Product Care	Hand Wash Only
Blade Material	Stainless Steel
Blade Shape	Round
Operation Mode	Automatic

9. WARRANTY AND CUSTOMER SUPPORT

Newhai products are manufactured to high-quality standards. For warranty information, technical support, or customer service inquiries, please refer to the contact information provided on your product packaging or visit the official Newhai website.

Please have your model number (B0B3D2B29N) and purchase date ready when contacting support.

