



[Manuals.plus](#) /

> [HEYSONG](#) /

> HEYSONG Waterproof Shower Bluetooth Speaker Model B18L Instruction Manual

HEYSONG B18L

HEYSONG Waterproof Shower Bluetooth Speaker Model B18L Instruction Manual

Your guide to setting up and using your HEYSONG Waterproof Shower Bluetooth Speaker.

1. INTRODUCTION

Thank you for choosing the HEYSONG Waterproof Shower Bluetooth Speaker, Model B18L. This durable and portable speaker is designed to provide clear audio in various environments, including showers, pools, beaches, and during outdoor activities. This manual will guide you through the setup, operation, and maintenance of your new speaker.

2. WHAT'S IN THE BOX

- HEYSONG Speaker
- Portable Hook (Carabiner)
- Charger (USB cable)
- Instruction Manual



Image: The HEYSONG Waterproof Shower Bluetooth Speaker, showing its compact design and included carabiner.

3. PRODUCT OVERVIEW AND FEATURES

The HEYSONG B18L speaker combines robust design with advanced audio technology for an enjoyable listening experience in challenging environments.

Key Features:

- **IPX7 Waterproof Rating:** Fully submersible up to 1 meter for 30 minutes, making it ideal for wet conditions. It also floats.
- **Bluetooth 5.0 Connectivity:** Ensures stable and efficient wireless connection up to 66 feet.
- **Dynamic LED Lights:** Multicolor LED lights enhance the listening experience, especially in low-light conditions.
- **Portable Design:** Compact and lightweight (7.7 ounces) with an integrated carabiner for easy transport.
- **Long Battery Life:** Provides extended playtime on a single charge.
- **True Wireless Stereo (TWS) Function:** Allows pairing two speakers for a stereo sound experience.



Image: The HEYSONG speaker showcasing its dynamic LED lighting effects.

4. SETUP INSTRUCTIONS

4.1 Charging the Speaker

1. Locate the charging port on the speaker, usually protected by a rubber gasket.
2. Gently peel back the rubber gasket to expose the Micro USB port.
3. Connect the provided USB charging cable to the speaker and a power source (e.g., USB wall adapter, computer USB port).
4. The LED indicator will show charging status. A full charge typically takes 2.5 hours.
5. Once fully charged, securely close the rubber gasket to maintain waterproof integrity.

4.2 Powering On/Off

- To power on, press and hold the power button (usually marked with a universal power symbol) for a few seconds until you hear an audible prompt and the LED lights activate.
- To power off, press and hold the power button again until the speaker powers down.

4.3 Bluetooth Pairing

1. Ensure the speaker is powered on and in pairing mode (LED indicator may flash).
2. On your device (smartphone, tablet, etc.), go to Bluetooth settings.
3. Search for available devices and select "HEYSONG BUBBLE" from the list.
4. Once connected, you will hear a confirmation tone, and the LED indicator will change to a steady light.

4.4 True Wireless Stereo (TWS) Pairing (Optional)

To pair two HEYSONG B18L speakers for stereo sound:

1. Ensure both speakers are powered off.
2. Power on both speakers simultaneously. They will enter pairing mode.
3. On one of the speakers, double-press the power button. It will search for the other speaker.
4. Once connected, you will hear a confirmation tone, and the speakers will function as a stereo pair.
5. Connect your device to one of the paired speakers via Bluetooth as described in section 4.3.

5. OPERATING INSTRUCTIONS

5.1 Music Playback

- **Play/Pause:** Press the Play/Pause button (often integrated with the power button or a dedicated button).
- **Next Track:** Press and hold the "+" button.
- **Previous Track:** Press and hold the "-" button.

5.2 Volume Control

- **Increase Volume:** Short press the "+" button.
- **Decrease Volume:** Short press the "-" button.

5.3 LED Light Control

The speaker features dynamic LED lights. Specific controls for changing light modes or turning them off may vary. Refer to the physical buttons on your speaker for light control options, often a dedicated light button or a long press on a volume button.

Rugged and Durable

Designed to withstand water and dust



Image: Close-up of the HEYSONG speaker, showing the control buttons for power, volume, and light functions.

6. WATERPROOF INFORMATION (IPX7)

Your HEYSONG B18L speaker is rated IPX7, meaning it can be submerged in water up to 1 meter (3 feet) for 30 minutes. It is designed to float, making it suitable for use in pools, baths, and other water environments.

Important Considerations:

- Ensure the charging port's rubber gasket is securely closed before exposing the speaker to water.
- Avoid prolonged submersion beyond the specified depth and time.
- Rinse the speaker with fresh water after use in saltwater or chlorinated water to prevent corrosion.
- Do not charge the speaker if it is wet. Ensure all ports are completely dry before charging.

Grateful Hearts, Thoughtful Gifts



Image: The HEYSONG speaker floating on the surface of water, demonstrating its waterproof capability.

Your browser does not support the video tag.

Video: A demonstration of the HEYSONG speaker's waterproof capabilities and flashing lights while in a pool. A child is also seen in the pool, indicating its suitability for family use.

7. MAINTENANCE

- Clean the speaker with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Store the speaker in a cool, dry place when not in use.
- Avoid exposing the speaker to extreme temperatures.
- Regularly check the charging port gasket for wear and tear to ensure waterproof integrity.

8. TROUBLESHOOTING

Problem	Possible Solution
---------	-------------------

Problem	Possible Solution
Speaker won't turn on.	Ensure the speaker is charged. Connect to a power source and try again.
Cannot pair via Bluetooth.	Make sure the speaker is in pairing mode. Check your device's Bluetooth settings and ensure it's discoverable. Try restarting both devices.
Poor sound quality or no sound.	Check the volume levels on both the speaker and your connected device. Ensure the speaker is within Bluetooth range. Disconnect and re-pair the device.
LED lights not working.	Check if the light function is turned off. Refer to operating instructions for light control.
Speaker not floating or leaking.	Ensure the charging port gasket is securely closed. Inspect the speaker for any visible damage.

9. SPECIFICATIONS

Feature	Detail
Model Name	Bubble (B18L)
Brand	HEYSONG
Material	Plastic and Durable silicone
Water Resistance Level	IPX7 (Waterproof)
Wireless Communication Technology	Bluetooth 5.0
Maximum Range	66 Feet (Bluetooth Range: 30 Feet)
Speaker Maximum Output Power	5 Watts
Power Source	Battery Powered (1 Lithium Ion battery included)
Charging Time	2.5 Hours
Item Weight	7.7 ounces
Product Dimensions	4.33"D x 4.13"W x 1.97"H
Control Method	Touch
Audio Output Mode	Mono, Stereo (with TWS)

10. WARRANTY & SUPPORT

The HEYSONG Waterproof Shower Bluetooth Speaker comes with a one-year warranty. For any questions, concerns, or support needs, please contact HEYSONG customer service. Refer to the product packaging or the official HEYSONG website for contact details.

