

[Manuals.plus](#) /

› [CCLIFE](#) /

› CCLIFE Plastic Baby Playpen Instruction Manual

CCLIFE DLFGT006A0000blu

CCLIFE Plastic Baby Playpen Instruction Manual

Model: DLFGT006A0000blu

Brand: CCLIFE

INTRODUCTION

Thank you for choosing the CCLIFE Plastic Baby Playpen. This manual provides essential information for the safe assembly, operation, and maintenance of your playpen. Designed with your child's safety and development in mind, this playpen offers a secure and engaging environment for play and learning.

This product is manufactured and tested according to the latest European safety standards (EN 71), ensuring high quality and safety for your child.

SAFETY INFORMATION

WARNING: Failure to follow these safety instructions could result in serious injury or death.

- Always supervise your child when they are in the playpen. Never leave a child unattended.
- Ensure all panels and connectors are securely fastened before placing a child inside. Regularly check for loose parts.
- Do not use the playpen if any parts are broken, torn, or missing. Contact customer support for replacement parts.
- Keep the playpen away from heat sources, open flames, and electrical outlets.
- Do not place toys or objects with long strings or cords inside the playpen to prevent strangulation hazards.
- The playpen is designed for indoor and outdoor use. When used outdoors, ensure it is on a flat, stable surface and protected from extreme weather conditions.
- Do not allow children to climb on the playpen, as this may cause it to tip over.
- The plastic material is non-toxic and safe, with no sharp edges or corners.
- Ensure the safety lock door is properly secured when the child is inside.

COMPONENTS LIST

Please verify that all components are present before beginning assembly.

- Playpen Panels (8 pieces for this model)

- Door Panel (1 piece)
- Play Panel (1 piece)
- Connectors/Hinges
- Suction Cups (pre-attached or separate)



Image: Overview of playpen components, including individual panel dimensions and overall assembled size (148cm x 148cm x 60cm).

ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your CCLIFE Plastic Baby Playpen.

1. **Unpack Components:** Carefully remove all panels and connectors from the packaging. Inspect all parts for any damage.
2. **Connect Panels:**
 - Identify the standard playpen panels, the door panel, and the play panel.
 - Align the connectors on the sides of two panels. Push them together firmly until they click into place. Ensure the connection is secure.

- Repeat this process to connect all 8 panels (including the door and play panel) to form your desired shape (e.g., square, rectangle, octagon).



Image: Illustrates various possible configurations (triangle, pentagon, square, L-shape) and close-ups of the panel connection mechanism and suction cups.

3. **Secure Suction Cups:** If your playpen includes separate suction cups, attach them to the bottom of each panel. Press down firmly on each panel to ensure the suction cups adhere to a smooth, clean floor surface, providing additional stability.
4. **Verify Stability:** Once all panels are connected and suction cups are engaged, gently push on the playpen to ensure it is stable and all connections are firm.



Image: A fully assembled CCLIFE playpen in a square configuration, demonstrating its overall appearance and size.

OPERATING INSTRUCTIONS

- **Using the Safety Lock Door:** The playpen features a door panel with a safety lock. To open, slide the lock mechanism and pull the door open. To close, push the door shut and engage the lock until it clicks securely. Always ensure the door is locked when a child is inside.



Image: A baby interacting with the playpen door, highlighting the accessibility and design of the door panel.

- **Engaging the Play Panel:** The dedicated play panel includes interactive elements designed to stimulate your child's senses and encourage learning through play. Encourage your child to interact with these features.
- **Adjusting Playpen Size and Shape:** The modular design allows you to easily add or remove panels to change the playpen's size or shape. Simply unclip panels to reduce the size or add more panels (sold separately if needed) to expand the play area. This flexibility allows for square, rectangular, hexagonal, or octagonal configurations.
- **Space-Saving Storage:** When not in use, the panels can be easily disassembled and stacked for compact storage, making it convenient for transport or when space is limited.



Image: Demonstrates how the 8-piece playpen can be compactly stored when disassembled, alongside an image of the assembled playpen.

MAINTENANCE AND CARE

- **Cleaning:** Wipe down the playpen panels with a damp cloth and mild soap. Rinse thoroughly with clean water and dry completely before use or storage. Do not use abrasive cleaners or harsh chemicals.
- **Inspection:** Regularly inspect all parts for wear, damage, or loose connections. Pay close attention to hinges, connectors, and the door lock mechanism.
- **Storage:** Store the playpen in a cool, dry place away from direct sunlight and extreme temperatures to prevent material degradation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Playpen feels unstable or wobbly.	Panels not fully connected; suction cups not adhering; uneven surface.	Ensure all panel connectors are fully engaged. Press down firmly on each panel to activate suction cups on a clean, smooth floor. Move the playpen to a flat, level surface.
Plastic connectors loosen or detach.	Insufficient tightening during assembly; child pushing against panels.	Regularly check and re-secure all plastic connectors. Ensure they are twisted tightly. If connectors frequently loosen or break, contact customer support for assistance or replacement parts.
Door does not lock securely.	Lock mechanism obstructed or damaged.	Check for any debris obstructing the lock. Ensure the door is fully closed before attempting to engage the lock. If damaged, do not use and contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	DLFGT006A0000blu
Material	Polyethylene (PE) Plastic
Color	Blue & White
Number of Panels	8 pieces (including 1 door panel, 1 play panel)
Assembled Square Dimensions (approx.)	148 cm (L) x 148 cm (W) x 60 cm (H)
Individual Panel Dimensions (approx.)	60 cm (H) x 75 cm (W) x 3.5 cm (Thickness)
Product Weight	9.2 Kilograms
Safety Standard	EN 71

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact CCLIFE customer service directly. Keep your purchase receipt for warranty claims.

For further assistance, you may visit the CCLIFE store on Amazon:[CCLIFE Amazon Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question