

Panasonic EH-NA9J-N825

Panasonic NA9J-N825 Hair Dryer User Manual

[Overview](#) [Safety](#) [Components](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#)

1. PRODUCT OVERVIEW

The Panasonic NA9J-N825 hair dryer incorporates advanced Nanoe and Double Mineral technologies to promote healthier hair and enhance resistance to UV damage. Designed for versatility, it features multiple speed and mode settings to suit various styling needs. Its compact, foldable design ensures convenient storage and portability.

This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your Panasonic NA9J-N825 hair dryer.



Image: Microscopic view of hair strands, illustrating the reduction of split ends by up to 50% with Nanoe and Double Mineral technology.

2. IMPORTANT SAFEGUARDS

To reduce the risk of electric shock, burns, fire, or injury, always follow these basic safety precautions when using electrical appliances, especially when children are present.

- **Water Hazard:** Do not use this appliance near water, such as bathtubs, showers, basins, or other vessels containing water.
- **Heated Surfaces:** Avoid using the appliance near heated surfaces.
- **Bathroom Use:** Do not use the hair dryer while bathing or showering.
- **Unplug After Use:** Always unplug the appliance immediately after use.
- **Supervision:** Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
- **Power Cord:** Do not pull, twist, or wrap the power cord around the appliance. Keep the cord away from heated surfaces.
- **Storage:** Store the appliance in a dry place.

3. PRODUCT COMPONENTS

Familiarize yourself with the main parts of your Panasonic NA9J-N825 hair dryer:

- Main Unit (Hair Dryer Body)
- Handle (Foldable)
- Power Cord
- Quick Dry Nozzle
- Styling Nozzle
- Diffuser Attachment
- Air Inlet Filter
- Mode Selector Switch (HOT, COLD, SCALP, SKIN)
- Speed Settings (3 levels)



Image: The Panasonic NA9J-N825 hair dryer shown with its quick dry nozzle, styling nozzle, and diffuser attachment on a wooden surface.

4. SETUP AND INITIAL USE

1. **Unpacking:** Carefully remove the hair dryer and all accessories from the packaging. Retain packaging for future storage or transport.
2. **Unfolding the Handle:** If the handle is folded, gently unfold it until it clicks into place. Ensure it is securely locked before use.
3. **Attaching Nozzles:** Select the desired attachment (Quick Dry Nozzle, Styling Nozzle, or Diffuser) and firmly attach it to the front of the hair dryer until it clicks into position.
4. **Power Connection:** Plug the power cord into a suitable electrical outlet. Ensure the voltage matches the specifications of the appliance.



Image: Illustration demonstrating the foldable handle design for compact storage.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off and Speed Settings

To turn on the hair dryer, slide the power switch to your desired speed setting. The appliance offers three speed levels:

- **Low:** For gentle drying or styling.
- **Medium:** For regular drying.
- **High:** For fast drying.

To turn off the hair dryer, slide the power switch to the "OFF" position.

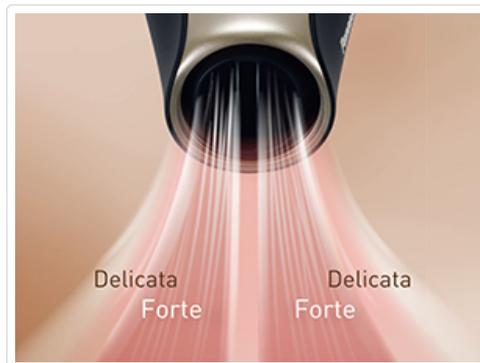


Image: Diagram illustrating the quick dry airflow pattern with strong and soft air streams.

5.2 Mode Selection (Nanoe & Double Mineral Technology)

The NA9J-N825 features a mode selector switch to optimize your drying experience:

- **HOT Mode:** Provides warm air for standard drying.
- **COLD Mode:** Delivers cool air to set hairstyles and reduce frizz. This mode alternates between hot and cold air, inspired by professional salon techniques.
- **SCALP Mode:** Uses a gentle temperature to dry the scalp, promoting a healthy scalp environment.
- **SKIN Mode:** Emits a gentle airflow with Nanoe particles to help moisturize facial skin. Hold the dryer approximately 20 cm from your face for about one minute after drying your hair.



Image: Diagram illustrating the intelligent temperature control feature of the hair dryer, adjusting temperature based on ambient conditions.



Image: Visual representation of the alternating hot and cold airflow for styling and frizz reduction.

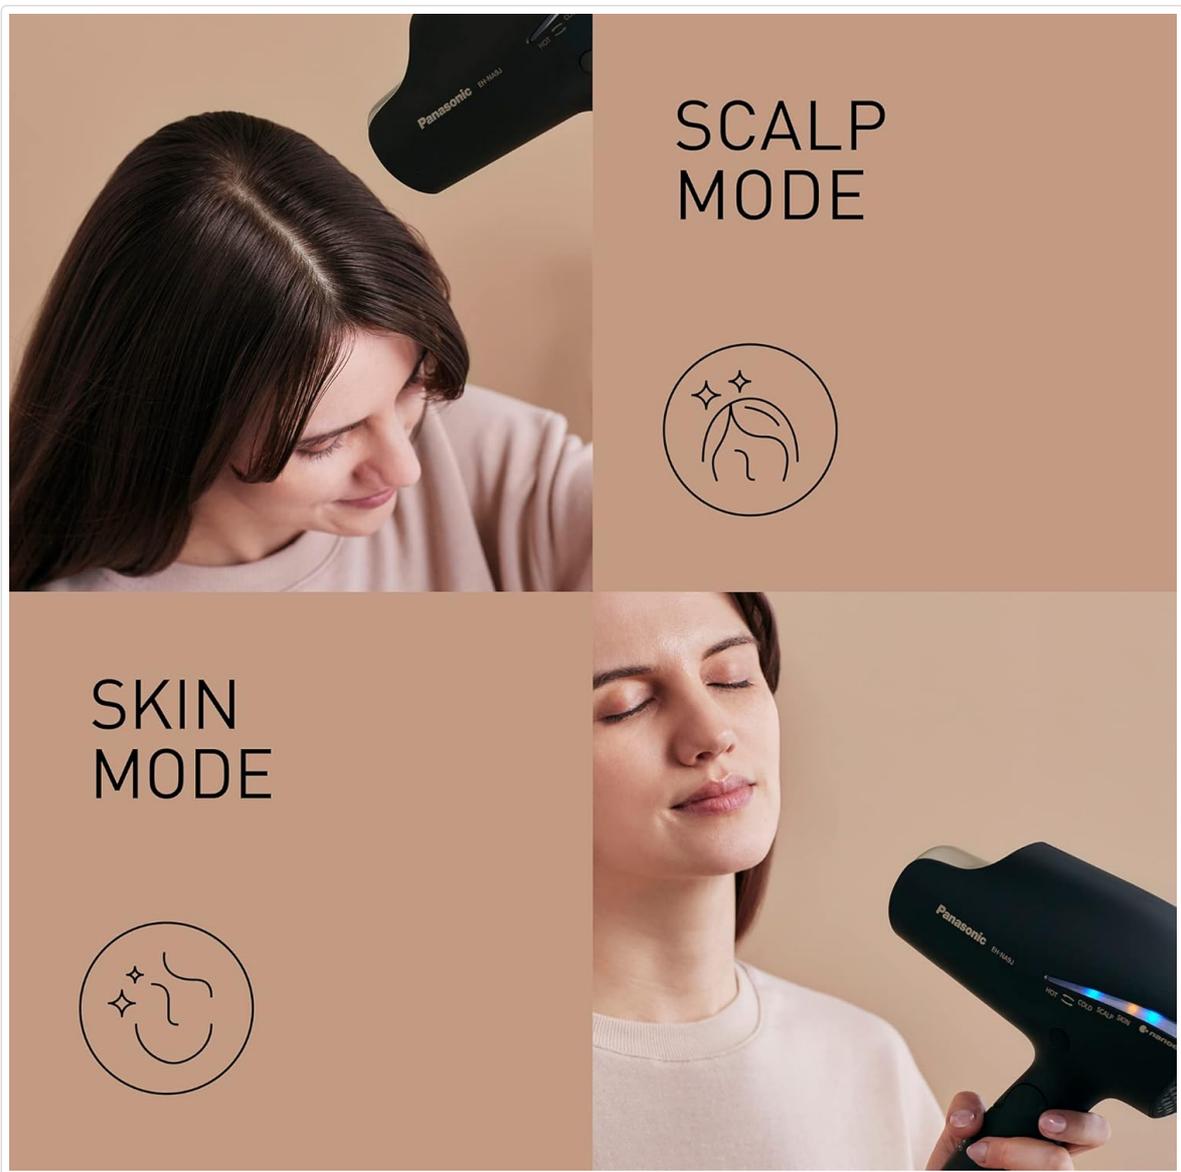



Image: Illustrations depicting the Scalp Mode for gentle scalp drying and Skin Mode for facial moisturizing.

5.3 Using Attachments

- **Quick Dry Nozzle:** Designed for rapid drying. Direct the airflow over sections of hair.
- **Styling Nozzle:** Concentrates airflow for precise styling. Use with a brush to shape hair.
- **Diffuser:** Ideal for enhancing natural curls and waves. Attach the diffuser and gently cup sections of hair, lifting towards the scalp.




OTTIMO PER I
TUOI CAPELLI

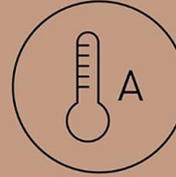

Controllo
intelligente della
temperatura

FISSA LA PIEGA,
DOMA L'EFFETTO
CRESCO

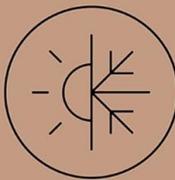

Alterna aria
calda e fredda



Image: A woman using the diffuser attachment to dry and define her curly hair.



Image: A woman using the styling nozzle with a round brush to smooth and style her hair.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your hair dryer.

1. **Before Cleaning:** Always unplug the hair dryer from the power outlet and allow it to cool completely.
2. **Cleaning the Air Inlet Filter:** The air inlet filter at the back of the dryer can accumulate dust and hair. Gently remove the filter cover and clean any debris using a soft brush or cloth. Ensure the filter is completely dry before reattaching.
3. **Cleaning the Main Unit:** Wipe the exterior of the hair dryer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
4. **Storage:** When not in use, store the hair dryer in a dry place, away from direct sunlight and moisture. The foldable handle allows for compact storage.

7. TROUBLESHOOTING

If you encounter any issues with your hair dryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Hair dryer does not turn on.	Not plugged in; power outlet malfunction; internal fault.	Ensure the power cord is securely plugged in. Test the outlet with another appliance. If the problem persists, contact customer support.
Weak airflow.	Blocked air inlet filter.	Unplug the dryer and clean the air inlet filter as described in the Maintenance section.
Unusual noise or smell.	Internal debris; motor issue.	Immediately unplug the dryer. Do not use it. Contact customer support for assistance.
Hair feels dry or frizzy.	Incorrect mode selection; improper technique.	Ensure Nanoe and Double Mineral technologies are active (e.g., using COLD mode). Use appropriate styling techniques and products.

8. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	EH-NA9J-N825
Brand	Panasonic
Power Consumption	1800W
Power Source	Corded Electric
Product Dimensions	19 x 25 x 34 cm
Weight	1.39 kg
Color	Black/Gold
Technology	Nanoe & Double Mineral
Speed Settings	3
Operating Modes	HOT, COLD, SCALP, SKIN
Included Attachments	Quick Dry Nozzle, Styling Nozzle, Diffuser

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Panasonic website for your region. Keep your purchase receipt as proof of purchase.

Online Support: www.panasonic.com