

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Rowenta](#) /

› [Rowenta Tefal ZD012M090090EU Battery Charger Instruction Manual for Xtouch Vacuum Cleaners](#)

Rowenta ZD012M090090EU

Rowenta Tefal ZD012M090090EU Battery Charger Instruction Manual

For Xtouch Handheld Vacuum Cleaners (Models AC9736, TX9736)

INTRODUCTION

This document provides comprehensive instructions for the safe and effective use of the Rowenta Tefal ZD012M090090EU battery charger. This charger is an original replacement power transformer specifically designed for Rowenta Xtouch handheld vacuum cleaners, including models AC9736 and TX9736. Please read this manual carefully before using the product.

PRODUCT OVERVIEW

The Rowenta Tefal ZD012M090090EU is a compact and efficient power adapter designed to recharge the battery of compatible Rowenta Xtouch vacuum cleaners. It features a standard European plug and a DC output connector.



Image 1: Overview of the Rowenta Tefal ZD012M090090EU battery charger, showing the main unit, power cable, and DC output plug.





Image 2: Close-up view of the product label on the Rowenta Tefal ZD012M090090EU charger, displaying model number,

SETUP

1. **Unpack the Charger:** Carefully remove the charger from its packaging. Inspect it for any signs of damage. Do not use if damaged.
2. **Verify Compatibility:** Ensure that the charger's model number (ZD012M090090EU) and specifications match the requirements of your Rowenta Xtouch vacuum cleaner. Refer to your vacuum cleaner's manual or its nameplate for compatibility information. Compatible vacuum models include AC9736 and TX9736.
3. **Connect to Power Outlet:** Plug the charger's main power plug into a suitable wall socket (100-240V AC, 50/60Hz).
4. **Connect to Vacuum Cleaner:** Insert the DC output plug (5.5mm x 2.1mm) into the charging port of your Rowenta Xtouch handheld vacuum cleaner. Ensure a secure connection.

The charging process should begin automatically. Refer to your vacuum cleaner's manual for specific charging indicators.

OPERATING INSTRUCTIONS

This charger is designed for simple plug-and-play operation. Once connected correctly, it will supply power to recharge your vacuum cleaner's battery.

- **Charging:** Connect the charger to the vacuum cleaner and a power outlet as described in the "Setup" section. The vacuum cleaner's charging indicator (if present) will typically illuminate or change state to show that charging is in progress.
- **Charging Time:** The time required for a full charge depends on the vacuum cleaner's battery capacity and its current charge level. Consult your vacuum cleaner's manual for estimated charging times.
- **Disconnection:** Once the vacuum cleaner is fully charged, or if you need to use it, disconnect the charger from the vacuum cleaner first, then from the wall outlet.

Safety Precautions

- Use the charger only with compatible Rowenta Xtouch vacuum cleaners.
- Do not expose the charger to water or excessive moisture.
- Do not attempt to open or modify the charger.
- Keep the charger away from heat sources and direct sunlight.
- Always unplug the charger from the wall outlet when not in use or during electrical storms.
- Ensure proper ventilation around the charger during operation.

MAINTENANCE

- **Cleaning:** Disconnect the charger from the power outlet and the vacuum cleaner before cleaning. Wipe the exterior with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the charger in a cool, dry place when not in use. Avoid wrapping the cable too tightly around the charger to prevent damage.
- **Cable Inspection:** Periodically inspect the power cable and DC output cable for any cuts, fraying, or damage. If any damage is observed, discontinue use and replace the charger.

TROUBLESHOOTING

If you encounter issues with your charger, please refer to the following common problems and solutions:

- **Charger Not Supplying Power:**
 - Ensure the charger is securely plugged into a working wall outlet. Test the outlet with another device.
 - Verify that the DC output plug is fully inserted into the vacuum cleaner's charging port.
 - Check the charger's cable for any visible damage. If damaged, the charger must be replaced.
- **Vacuum Cleaner Not Charging:**
 - Confirm that the charger model ZD012M090090EU is indeed compatible with your specific Rowenta Xtouch vacuum cleaner model (e.g., AC9736, TX9736).
 - Refer to your vacuum cleaner's instruction manual for troubleshooting steps related to its battery or charging system. The issue might be with the vacuum cleaner itself, not the charger.

If problems persist after following these steps, please contact customer support.

SPECIFICATIONS

Model Number	ZD012M090090EU
Input Voltage	100-240V ~ 50/60Hz 0.5A
Output Voltage/Current	9.0V 0.9A
Output Power	8.1W
Plug Type	5.5mm x 2.1mm DC plug
IP Rating	IP20
Compatible Vacuum Models	Rowenta Xtouch AC9736, TX9736, AC9736WO / AM0, TX9736WO / AM0
Dimensions (L x W x H)	Approximately 0.8 x 0.32 x 0.1 cm (Note: This dimension might refer to the plug or a component, not the full adapter body.)
Weight	90 grams
Manufacturer	Rowenta
Country of Origin	Italy

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided with your original purchase or contact the seller directly. As this is a replacement part, warranty terms may vary.

If you require technical assistance or have questions regarding the charger, please contact Rowenta customer support or the retailer from whom you purchased the product. You can visit the official Rowenta store for more information: [Rowenta Store](#).

