

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ANPABO](#) /

› [ANPABO Licensed Mercedes-Benz G63 Car for Kids Instruction Manual](#)

## ANPABO AMG G 63

# ANPABO Licensed Mercedes-Benz G63 Car for Kids

Model: AMG G 63

## INTRODUCTION

Thank you for choosing the ANPABO Licensed Mercedes-Benz G63 Ride-on Car. This electric vehicle is designed to provide a fun and safe driving experience for children, featuring realistic details, parent remote control, and multimedia functions. Please read this manual thoroughly before assembly and operation to ensure proper use and maintenance.

## IMPORTANT SAFETY INFORMATION

- Adult supervision is required at all times when the vehicle is in use.
- Recommended for children aged 3 years and up.
- Maximum weight capacity: 66 lbs. Do not exceed this limit.
- Always ensure the safety belt is securely fastened before operation.
- Do not operate the vehicle near stairs, steep inclines, swimming pools, or public roads.
- Only use the provided charger and battery. Do not use other chargers or batteries.
- Keep hands, hair, and clothing away from moving parts.
- Ensure the vehicle is fully stopped before changing direction or speed.

## PACKAGE CONTENTS

Please check the package contents to ensure all parts are present:

- 1 x ANPABO 12V Licensed Mercedes-Benz G63 Car
- 1 x Charger
- 1 x Remote Control
- 1 x Screw Pack
- 1 x User Manual

## ASSEMBLY INSTRUCTIONS

Assembly of the ANPABO Mercedes-Benz G63 requires adult supervision and typically takes less than an

hour. Please follow the steps carefully.



Image: Front view of the ANPABO Licensed Mercedes-Benz G63 Car, illustrating its design and features.

## Step-by-Step Assembly

1. Unpack all components and verify against the package contents list.
2. Attach the wheels to the axles, ensuring they are securely fastened with the provided hardware.
3. Connect the battery terminals. Refer to the battery compartment for correct polarity.
4. Install the steering wheel, ensuring it clicks into place or is secured with screws.
5. Attach any remaining accessories such as mirrors or windshield.
6. Perform an initial charge of the battery before first use.

## OPERATING INSTRUCTIONS

### Manual Driving Mode

To operate the car manually, ensure the power switch is ON. The child can control the vehicle using the foot pedal for acceleration and the steering wheel for direction. The car features a soft start design for smooth acceleration, preventing sudden jolts.

### Parent Remote Control Mode

For younger children or for safety, parents can control the vehicle using the included remote control. The remote allows for steering, forward/reverse movement, speed adjustment, and an emergency brake function.

# Parent Remote Control



Image: A child seated in the ride-on car, with an illustration of the parent remote control and its functions, including variable speeds and emergency brake.

## Music Player and Connectivity

The car is equipped with a built-in music player. It supports USB and Bluetooth connectivity, allowing you to play your child's favorite songs from a connected device. The car also features realistic startup sounds and a horn.

# Soft Start, Smooth Acceleration

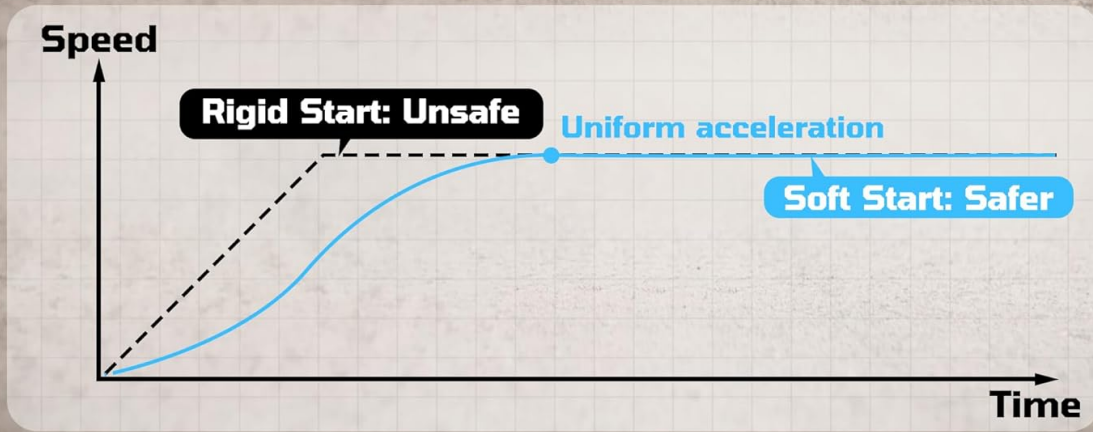


Image: A child smiling while sitting in the car, with icons indicating USB, Bluetooth, startup sound, and music features, highlighting the entertainment options.

## Soft Start Feature

The soft start feature ensures a gradual increase in speed when the car begins to move, preventing sudden jerks that might startle the child. This provides a more comfortable and safer riding experience.

## UNIQUE BATTERY INDICATOR



Image: A graph comparing 'Rigid Start' (unsafe) with 'Soft Start' (safer) acceleration over time, demonstrating the smooth, uniform acceleration provided by the soft start feature.

### BATTERY AND CHARGING

The vehicle is powered by a 12V rechargeable battery. For optimal performance and battery life, ensure the battery is fully charged before each use. The initial charge should be 8-12 hours, and subsequent charges should be 8-10 hours. Do not charge for more than 12 hours.

# Rechargeable Battery



12V 7Ah Battery



Speed:1.8-3.1 Mph



Image: An illustration showing the 12V 7Ah rechargeable battery and the car's speed range of 1.8-3.1 Mph, indicating power and performance.

## Low Battery Prompt

The upgraded music board includes a battery indicator. When the battery level drops significantly, a voice prompt will alert you that the car needs to be charged. This feature helps prevent unexpected power loss during playtime.

# Drive with Fun



**USB**



**Bluetooth**



**Startup Sound**



**Music**



Image: A close-up of the car's dashboard showing the unique battery indicator, which displays the current battery level and provides a low battery voice prompt.

## MAINTENANCE AND CARE

- Regularly inspect the vehicle for loose parts, damaged wiring, or worn components.
- Clean the vehicle with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Store the vehicle in a dry, cool place away from direct sunlight and moisture.
- If storing for an extended period, charge the battery fully every 30 days to prolong its lifespan.
- Keep the charging port free from dust and debris.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Car does not start	Battery not connected; Battery low/dead; Power switch off; Loose wiring	Check battery connection; Charge battery fully; Turn power switch ON; Inspect and secure wiring

Problem	Possible Cause	Solution
Remote control not working	Remote batteries dead; Remote not paired; Interference	Replace remote batteries; Re-pair remote with car (refer to remote manual); Move away from other electronic devices
Short battery life	Battery not fully charged; Overloaded vehicle; Old battery	Ensure full charge before use; Do not exceed weight limit; Consider battery replacement if old
No sound from music player	Volume too low; Device not connected properly; Corrupt audio file	Increase volume; Reconnect USB/Bluetooth device; Try different audio files

## PRODUCT SPECIFICATIONS

Feature	Detail
Product Dimensions	43 x 27 x 22 inches
Item Weight	39 pounds
Model Number	AMG G 63
Manufacturer Recommended Age	3 years and up
Battery	12V Rechargeable
Speed	Up to 3 mph
Max Weight Capacity	66 lbs

## WARRANTY AND SUPPORT

ANPABO products are manufactured to high-quality standards. For warranty information, technical support, or assistance with parts, please contact ANPABO customer service. Keep your purchase receipt as proof of purchase.

For further assistance, please visit the official ANPABO store or contact their customer support channels.