

[Manuals.plus](#) /

› [NEEWER](#) /

› NEEWER 10101042 Quick Release Plate with Clamp Adapter Set Instruction Manual

NEEWER 10101042

NEEWER 10101042 Quick Release Plate with Clamp Adapter Set Instruction Manual

Brand: NEEWER | Model: 10101042

INTRODUCTION

This manual provides comprehensive instructions for the NEEWER 10101042 Quick Release Plate with Clamp Adapter Set. This versatile accessory is designed to enhance your photography and videography workflow by providing a secure and efficient mounting solution for your camera or camcorder on various support systems. Crafted from durable aluminum alloy, it offers robust performance and precise adjustments for optimal composition.

Scratch-Free Mounting

With 6 rubber pads, the quick release plate will never scratch your camera and camcorder and keep them securely attached without slip.



Dual Safety Screws

Both sides feature a safety screw to secure your camera in place and avoid falling.

Aluminum Alloy Build

Engineered with black anodized aluminum alloy, the unit is robust, lightweight, and portable—perfect for outdoor shooting under any circumstance.

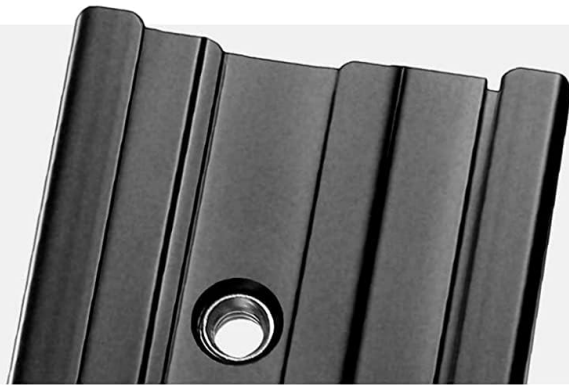 


Image: The NEEWER Quick Release Plate with Clamp Adapter Set, showcasing its black aluminum construction and quick release mechanism.

KEY FEATURES

- **Standard Quick Release Plate:** Compatible with Arca-Swiss standard quick release plates (e.g., PU-50/PU-60/PU-70/PU-100/PU-120/PU-150/PU-200). The clamp features a sliding range of 38-45mm, allowing secure attachment of Arca-compatible devices.
- **Adjustable Positioning:** The quick release plate can slide forward and backward up to 40mm on the clamp, enabling precise balancing for DSLR cameras, telephoto lenses, and telescopes. A dedicated locking knob ensures the plate is secured quickly.
- **Scratch-Free Mounting:** Equipped with 6 rubber pads to prevent scratching your camera or camcorder and maintain a secure, non-slip grip. Includes 1/4"-20 and 3/8"-16 mounting screws for broad device compatibility.
- **Integrated Bubble Level:** A bubble level is embedded in the locking knob to assist in achieving straight horizons and precise compositions.
- **Aluminum Alloy Build:** Constructed from black anodized aluminum alloy, ensuring the unit is

robust, lightweight, and portable, suitable for various shooting conditions.

Compatibility

1/4" -20 and 3/8" -16 mounting screws are compatible with a wide variety of devices.

Mirrorless camera

DSLR camera

3/8" Screw

Camcorder

Camera slider

Note: Only the QR plate is included.

Image: Close-up view of the quick release plate and clamp, highlighting the scratch-free rubber pads, dual safety screws, and the durable aluminum alloy construction.

PACKAGE CONTENTS

Please verify that all items are present in your package:

- 1 x NEEWER 120mm Quick Release Plate
- 1 x Clamp Adapter
- 1 x 3/8" to 1/4" Screw Adapter
- 1 x Allen Key (for tightening screws)

SETUP AND INSTALLATION

1. Attaching the Quick Release Plate to Your Camera/Device

1. Locate the 1/4"-20 or 3/8"-16 mounting screw on the quick release plate.
2. Align the screw with the tripod socket on the bottom of your camera or camcorder.
3. Tighten the screw securely using the integrated D-ring or the provided Allen key until the plate is firmly attached to your device. Ensure the rubber pads are in contact with your device to prevent scratches and provide a secure grip.

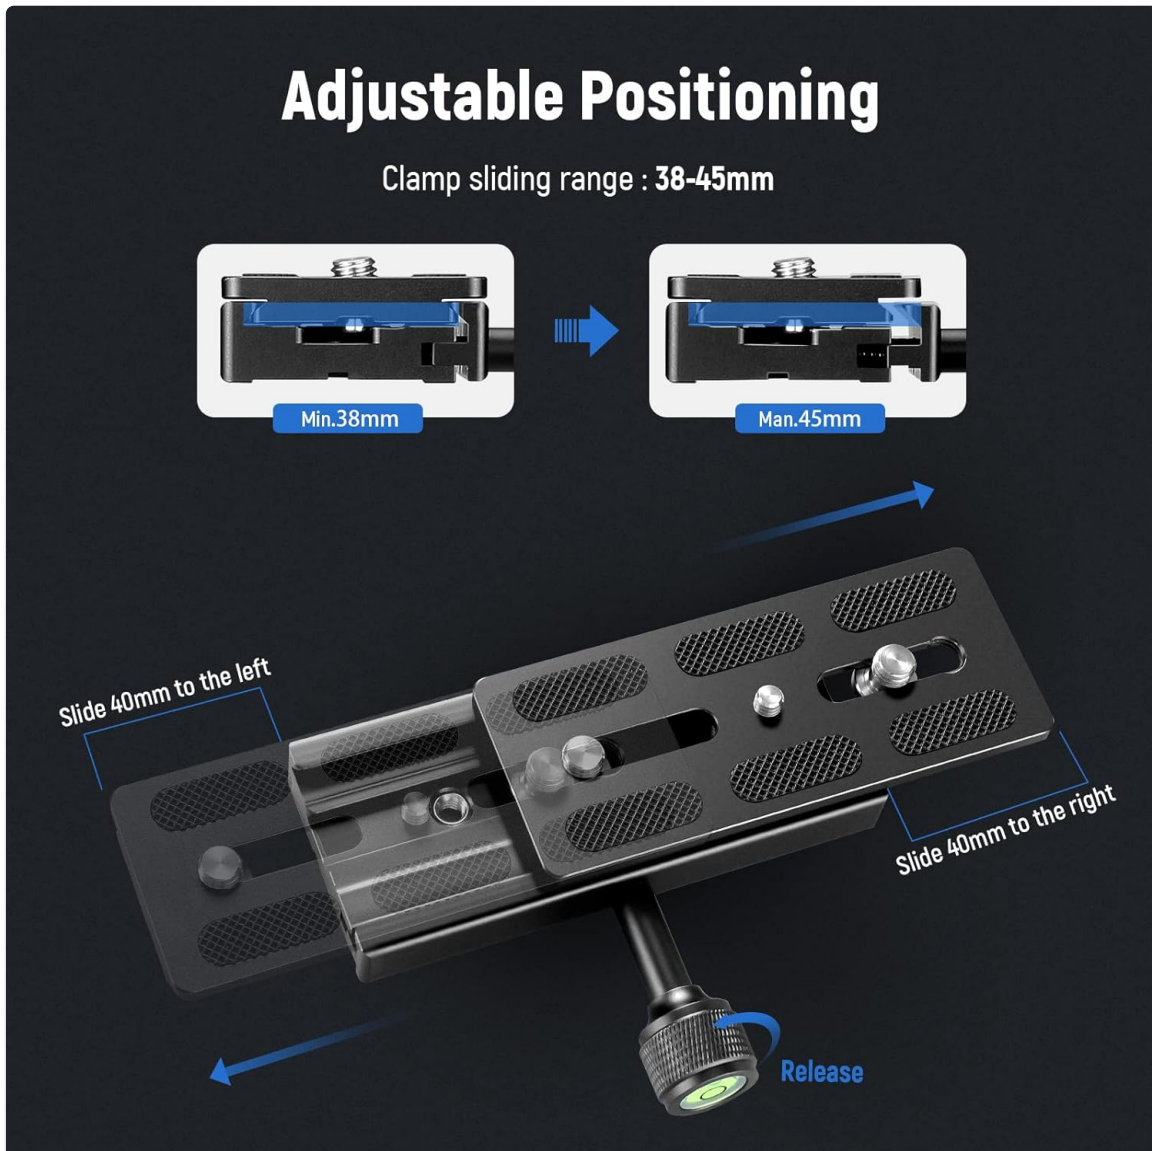 


Image: The quick release plate demonstrating compatibility with various devices using 1/4" and 3/8" screws.

2. Mounting the Clamp Adapter to Your Tripod/Monopod/Ball Head

1. Identify the 3/8" threaded hole on the bottom of the clamp adapter.
2. If your tripod or monopod uses a 1/4" screw, insert the included 3/8" to 1/4" screw adapter into the clamp's 3/8" threaded hole.
3. Screw the clamp adapter onto your tripod, monopod, or ball head until it is tight and stable.

Move 40mm Left

Intermediate

Move 40mm Right



Image: The clamp adapter illustrating its 3/8" screw hole and the 3/8" to 1/4" adapter for versatile mounting options.

3. Attaching Your Camera/Device (with QR Plate) to the Clamp Adapter

1. Ensure the locking knob on the clamp adapter is loosened sufficiently to allow the quick release plate to slide in.
2. Slide the quick release plate (with your camera attached) into the clamp adapter's dovetail groove.
3. Once the plate is in position, tighten the locking knob firmly to secure your camera. The dual safety screws on the clamp provide additional security against accidental release.

OPERATING INSTRUCTIONS

1. Using the Quick Release Mechanism

To quickly attach or detach your camera, simply loosen the locking knob on the clamp adapter, slide the quick release plate in or out, and then tighten the knob to secure it. The design allows for rapid transitions between handheld and mounted setups.

2. Adjusting Positioning

The quick release plate can slide up to 40mm forward or backward within the clamp. This feature is useful for fine-tuning the balance of your camera setup, especially when using different lenses or accessories. Loosen the locking knob slightly, adjust the plate to the desired position, and then re-tighten the knob.

Bottom 3/8" Screw Hole & 3/8" to 1/4" Screw Adapter

Can be installed on a panoramic head, light stand, ball head, tripod, monopod, and more.


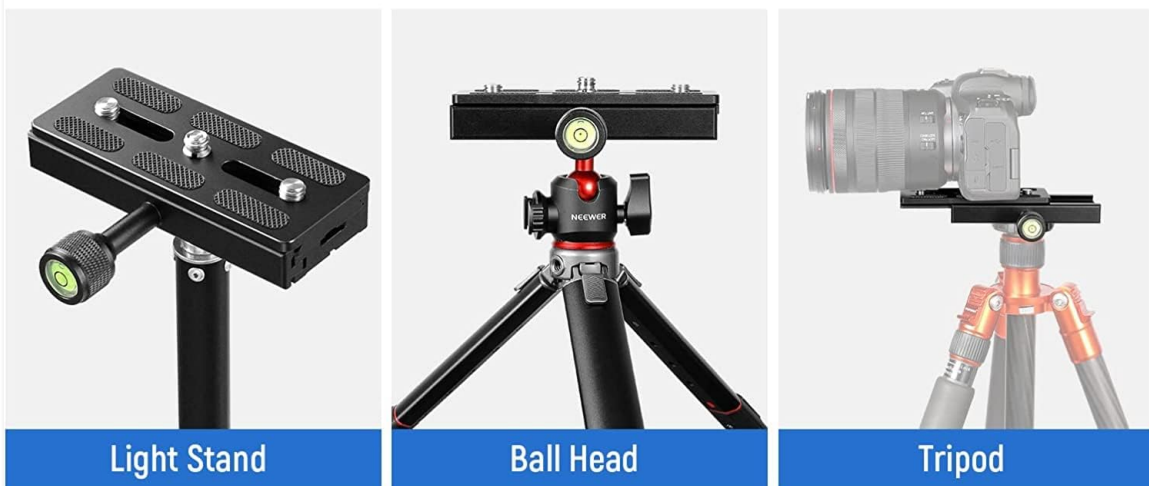


Image: Diagram illustrating the 40mm adjustable sliding range of the quick release plate on the clamp for precise balancing.

3. Utilizing the Integrated Bubble Level

The bubble level located on the locking knob helps ensure your camera is perfectly level. Observe the bubble to confirm it is centered within the indicator lines, allowing you to achieve straight horizons and accurate compositions in your shots.

Specifications

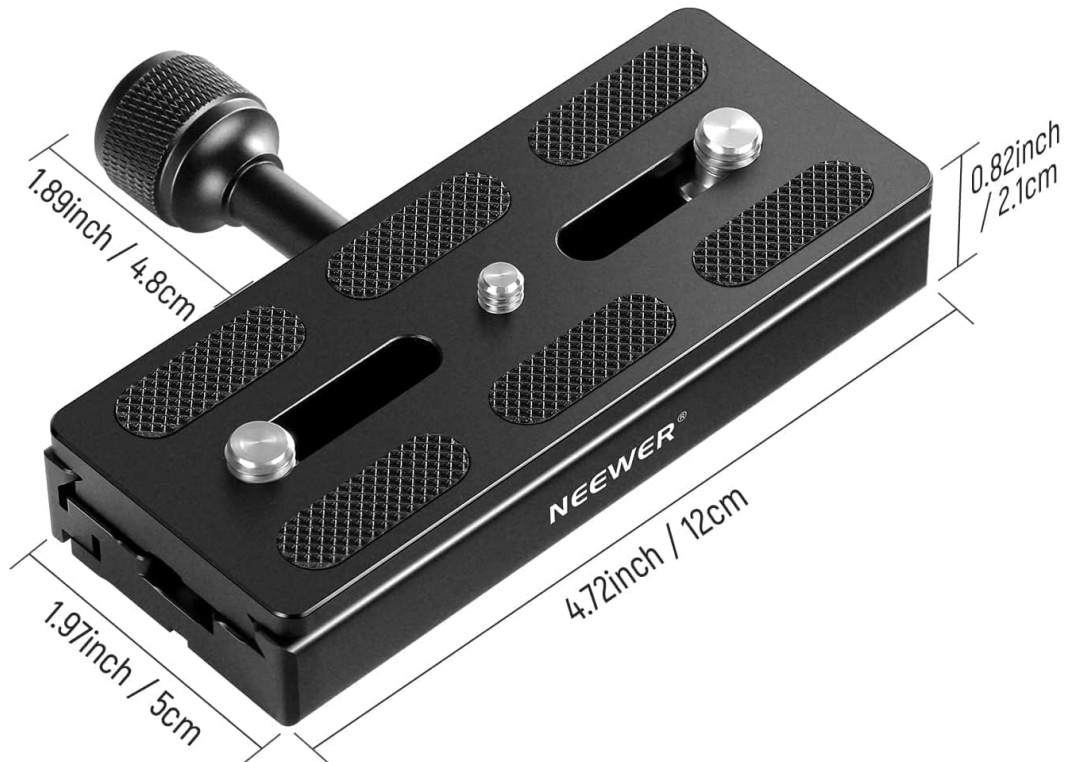

- Materials : Aluminum alloy
- Dimensions : 4.72" x 3.82" x 0.82" / 12cm x 9.8cm x 2.1cm
- Weight : 0.64lb / 0.29kg

Image: Close-up of the integrated bubble level on the locking knob, indicating horizontal and non-horizontal states.

MAINTENANCE

- **Cleaning:** Wipe the quick release plate and clamp with a soft, dry cloth after each use to remove dust and debris. Avoid using harsh chemicals or abrasive materials that could damage the finish or rubber pads.
- **Storage:** Store the set in a dry, dust-free environment when not in use.
- **Inspection:** Periodically check all screws and moving parts to ensure they are secure and functioning correctly.


TROUBLESHOOTING

- **Quick Release Plate Not Securing:** Ensure the locking knob is fully tightened. Check that the quick release plate is correctly seated within the clamp's dovetail groove and not obstructed by any debris.
- **Device Slipping:** Verify that the mounting screw attaching the plate to your camera is tight. Ensure the rubber pads on the plate are clean and intact to provide maximum grip.
- **Bubble Level Inaccurate:** Confirm that the surface your tripod or monopod is resting on is stable and level. If the issue persists, ensure the clamp adapter is securely mounted to your support system.

SPECIFICATIONS

Feature	Detail
Product Dimensions	3.86 x 4.72 x 0.83 inches (12cm x 9.8cm x 2.1cm)
Item Weight	11.6 ounces (0.33 Kilograms)
Material	Aluminum Alloy
Color	Black
Mounting Screws	1/4"-20, 3/8"-16
Clamp Sliding Range	38-45mm
Plate Sliding Range	40mm (forward/backward)
Compatibility	Arca-Swiss Standard, Tripods, Monopods, Ball Heads, Light Stands

Specifications

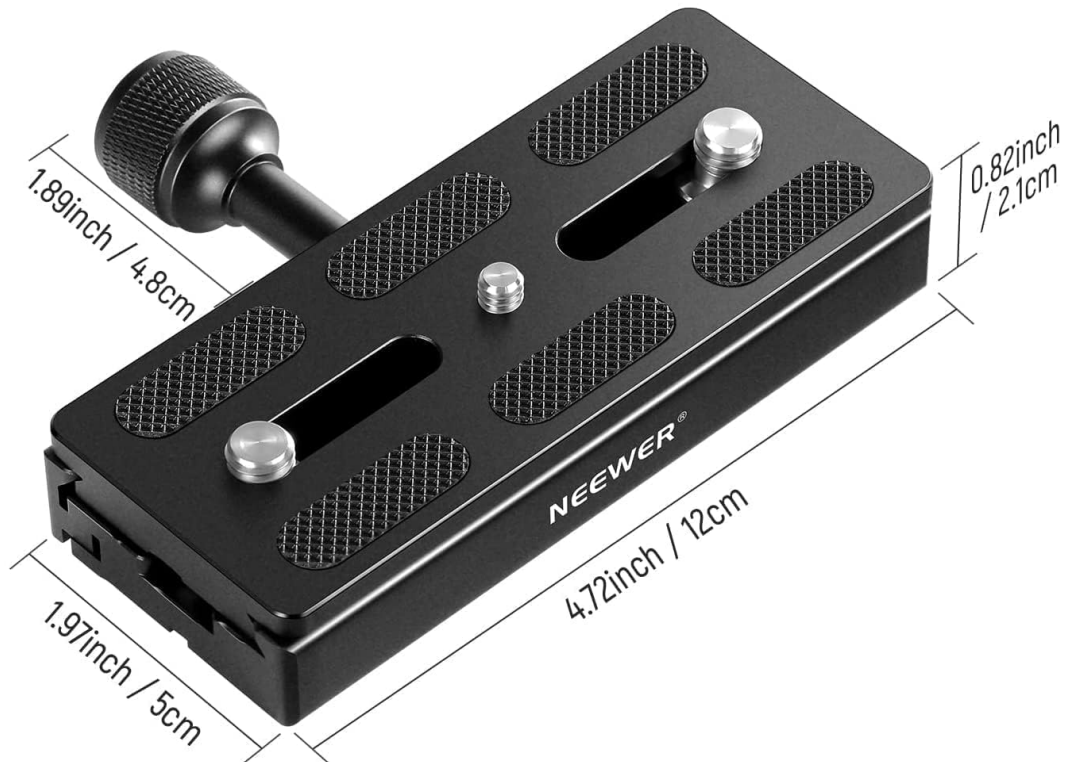

- Materials : Aluminum alloy
- Dimensions : 4.72" x 3.82" x 0.82" / 12cm x 9.8cm x 2.1cm
- Weight : 0.64lb / 0.29kg

Image: Visual representation of the product dimensions.

WARRANTY AND SUPPORT

Warranty and support information for this product is not available in the provided data. Please refer to the product packaging or the manufacturer's official website for details regarding warranty coverage and customer support contacts.

OFFICIAL PRODUCT VIDEOS

No relevant official product videos from the seller are available in the provided data for this specific product.

