

ARREGUI KEYPRO PLPRO44

ARREGUI KEYPRO PLPRO44 Electronic Key Cabinet User Manual

Model: KEYPRO PLPRO44 (PLPRO44-E)

1. INTRODUCTION

This manual provides essential instructions for the proper installation, operation, and maintenance of your ARREGUI KEYPRO PLPRO44 Electronic Key Cabinet. Please read this manual thoroughly before using the product to ensure safe and efficient operation. Keep this manual for future reference.

2. SAFETY INFORMATION

- Do not expose the key cabinet to extreme temperatures or high humidity.
- Ensure the cabinet is securely mounted to a stable surface to prevent accidental falls.
- Keep batteries out of reach of children. Dispose of used batteries responsibly.
- Do not attempt to force the lock if it is jammed. Refer to the troubleshooting section.
- Only use the specified battery type (4 x 1.5V AA alkaline batteries).

3. PRODUCT OVERVIEW

The ARREGUI KEYPRO PLPRO44 is a robust electronic key cabinet designed for secure key storage. It features an electronic combination lock with a touch display and fixed numbered hooks for up to 44 keys.

3.1 Components

- Key Cabinet Body (Alloy Steel)
- Electronic Lock with Touch Display
- Numbered Key Hooks (44 capacity)
- Micro USB Port for Emergency Power
- Battery Compartment
- Mounting Hardware

- Key Rings with Label Holders



Figure 1: Front view of the ARREGUI KEYPRO PLPRO44 Electronic Key Cabinet. This image shows the charcoal-colored steel cabinet with the electronic touch display lock visible on the right side of the door.



Figure 2: Interior view of the ARREGUI KEYPRO LP44 Electronic Key Cabinet with the door open. The image displays the numbered key hooks, some with keys attached, and the battery compartment cover on the inside of the door.

4. SETUP

4.1 Unpacking and Inspection

Carefully remove all components from the packaging. Inspect the cabinet for any signs of damage. Ensure all included items are present: key cabinet, key rings with label holders, instruction manual, and mounting material.

4.2 Battery Installation

1. Locate the battery compartment on the inside of the cabinet door.
2. Open the battery compartment cover.
3. Insert 4 x 1.5V AA alkaline batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover. The lock should emit a confirmation sound or light.

4.3 Mounting the Key Cabinet

The key cabinet is designed for surface mounting. Three pre-drilled holes are located on the rear of the cabinet.

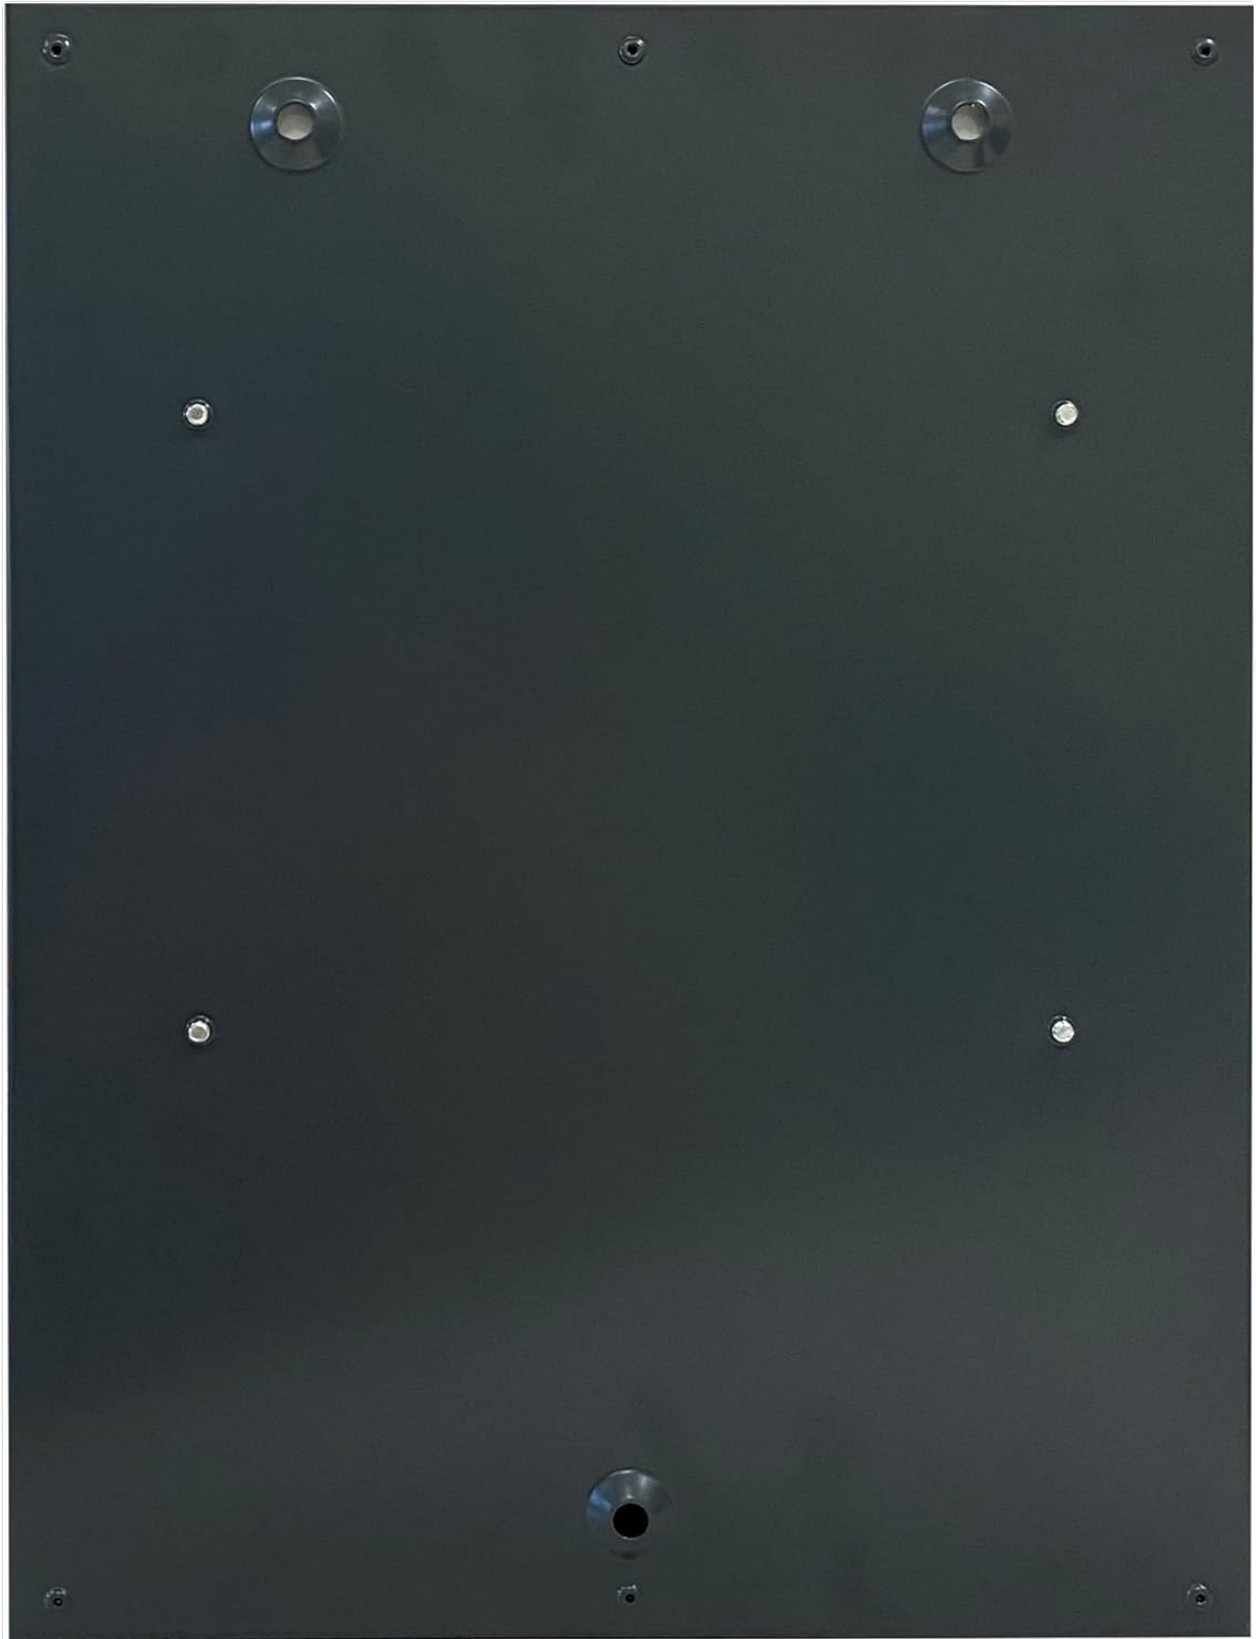


Figure 3: Back view of the ARREGUI KEYPRO PLPRO44 Electronic Key Cabinet. This image shows the rear panel of the cabinet with the pre-drilled mounting holes visible, indicating where the cabinet should be secured to a wall.

1. Choose a suitable, stable wall location for installation.
2. Mark the positions for the mounting holes on the wall using the cabinet as a template.
3. Drill holes at the marked positions. Use an appropriate drill bit for your wall type.

4. Insert wall anchors (if necessary, depending on wall material).
5. Align the cabinet with the drilled holes and secure it to the wall using the provided mounting screws. Ensure the cabinet is firmly attached.

5. OPERATING INSTRUCTIONS

5.1 Initial Code Setup

The electronic lock allows for programming of **1 Master Code** and **1 User Code**, each 4 to 15 digits long. Refer to the specific instructions provided with the lock mechanism for detailed steps on setting these codes. Typically, this involves pressing a program button, entering the default code, then entering your new code twice.

5.2 Opening the Cabinet

1. Activate the touch display by touching it.
2. Enter your programmed Master Code or User Code.
3. Press the 'OK' or '#' button (refer to lock display for exact symbol).
4. The lock will disengage, and the door can be opened.

5.3 Closing the Cabinet

Simply close the cabinet door. The electronic lock will automatically engage, securing the cabinet.

5.4 Temporary Lockout Feature

If an incorrect code is entered 4 consecutive times, the key cabinet will activate a temporary lockout. During this period (typically 1 minute), the lock will not respond to any input, and an audible warning signal may sound. Wait for the lockout period to expire before attempting to enter the code again.

5.5 Emergency Opening (Empty Batteries)

In the event of completely depleted batteries, the cabinet can be opened using the micro USB connection:

1. Locate the micro USB port on the electronic lock panel.
2. Connect a micro USB cable (e.g., from a power bank or USB charger) to the port.
3. This will temporarily power the lock, allowing you to enter your code and open the cabinet.
4. Once opened, replace the batteries immediately. Stored codes will not be deleted when batteries are empty.

6. MAINTENANCE

6.1 Battery Replacement

The electronic lock features a battery change indicator. When this indicator activates, replace all 4 AA batteries promptly to ensure continuous operation. Follow the steps in Section 4.2.

6.2 Cleaning

Clean the exterior of the cabinet with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these can damage the finish or the electronic components.

7. TROUBLESHOOTING






Problem	Possible Cause	Solution
Cabinet does not open after entering code.	Incorrect code entered; Batteries are low or dead; Lockout period active.	Verify the code and re-enter; Replace batteries; Wait for lockout period to expire.
Display is not responding.	Batteries are completely dead.	Use micro USB for emergency power (Section 5.5) and replace batteries.
Audible alarm sounds during operation.	Incorrect code entered multiple times (lockout).	Wait for the lockout period to end before re-attempting.
Door does not close properly.	Obstruction in the door frame; Misalignment.	Check for any obstructions; Ensure cabinet is mounted level.

8. SPECIFICATIONS


- **Model Name:** KEYPRO PLPRO44
- **Item Model Number:** PLPRO44-E
- **Dimensions (H x W x D):** 15.75" x 11.81" x 3.94" (40 x 30 x 10 cm)
- **Material:** Alloy Steel (Painted)
- **Color:** Charcoal
- **Key Capacity:** 44 hooks
- **Lock Type:** Electronic Combination Lock with Touch Display
- **Code Length:** 4 to 15 digits (1 Master, 1 User)
- **Power Source:** 4 x 1.5V AA Alkaline Batteries
- **Emergency Power:** Micro USB connection
- **Impact Resistance:** IK09 Tested Lock
- **Item Weight:** 10.56 pounds (approx. 4.79 kg)

9. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the documentation provided at the time of purchase or contact ARREGUI customer service directly. Contact details can typically be found on the manufacturer's official website or on the product packaging.

<div data-bbox="140 114 287 331"><p>CLASS</p><p>ES/ Electrónico + pánico IT/ Elettronico + panico PT/ Electrónico + pânico GR/ Ηλεκτρονικό + άσθετο FR/ Electronique + panique EL/ Ηλεκτρονικός + πανικός DE/ Elektronisch + Panik</p><p>ARREGUI</p></div>	<p>ARREGUI Class Electronic Safe: User Manual and Warranty Information</p> <p>Comprehensive user manual and warranty details for the ARREGUI Class electronic safe, covering operation, installation, maintenance, and security features. Available in multiple languages including English, Spanish, Italian, Portuguese, French, Greek, and German.</p>
<div data-bbox="127 412 300 658"><p>SUMA</p><p>ES/ Caja fuerte electrónica IT/ Cassetto elettronico PT/ Caixa eletrônica GR/ Ηλεκτρονική τράπεζα FR/ Coffre électronique EL/ Ηλεκτρονικός θάλαμος DE/ Elektronische Kasse</p><p>ARREGUI</p></div>	<p>Arregui SUMA Electronic Safe: User Manual and Warranty Information</p> <p>Detailed instructions for operating and maintaining the Arregui SUMA electronic safe, including setup, security features, battery management, and warranty information. Features multilingual support with English as the primary language.</p>
<div data-bbox="140 734 287 952"><p>COVER</p><p>ES/ Caja fuerte electrónica con llave IT/ Cassetto elettronico con chiave PT/ Caixa eletrônica com chave GR/ Ηλεκτρονική τράπεζα με κλειδί FR/ Coffre électronique avec clé EL/ Ηλεκτρονικός θάλαμος με κλειδί DE/ Elektronische Kasse mit Schlüssel</p><p>ARREGUI</p></div>	<p>Arregui Electronic Safe with Key - User Manual and Warranty</p> <p>Comprehensive guide for the Arregui electronic safe with key, covering installation, programming, operation, troubleshooting, and warranty information. Includes multilingual instructions.</p>
<div data-bbox="140 1041 287 1258"><p>STYLO</p><p>ES/ Caja fuerte electrónica con llave IT/ Cassetto elettronico con chiave PT/ Caixa eletrônica com chave GR/ Ηλεκτρονική τράπεζα με κλειδί FR/ Coffre électronique avec clé EL/ Ηλεκτρονικός θάλαμος με κλειδί DE/ Elektronische Kasse mit Schlüssel</p><p>ARREGUI</p></div>	<p>Arregui STYLO Electronic Safe with Key - User Manual and Warranty</p> <p>Comprehensive user manual and warranty information for the Arregui STYLO electronic safe with key, covering installation, operation, programming, maintenance, and warranty details.</p>
<div data-bbox="140 1348 287 1565"><p>SUPRA</p><p>ES/ Caja fuerte electrónica con llave IT/ Cassetto elettronico con chiave PT/ Caixa eletrônica com chave GR/ Ηλεκτρονική τράπεζα με κλειδί FR/ Coffre électronique avec clé EL/ Ηλεκτρονικός θάλαμος με κλειδί DE/ Elektronische Kasse mit Schlüssel</p><p>ARREGUI</p></div>	<p>Arregui SUPRA Electronic Safe User Manual and Guarantee</p> <p>Comprehensive user manual and guarantee certificate for the Arregui SUPRA electronic safe, covering installation, operation, programming, maintenance, and warranty information.</p>

SUPRA

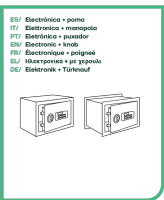

ARREGUI

[Arregui SUPRA Electronic Safe: User Manual and Warranty Information](#)

Comprehensive guide for the Arregui SUPRA electronic safe, covering installation, programming of opening codes, operation, security features, maintenance, and warranty details. Includes instructions in multiple languages.