

[manuals.plus](#) /

› [CANMORE](#) /

› [CANMORE H300 Handheld GPS Golf Device Instruction Manual](#)

CANMORE H300

CANMORE H300 Handheld GPS Golf Device Instruction Manual

Model: H300

1. INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your CANMORE H300 Handheld GPS Golf Device. Please read these instructions carefully to ensure optimal performance and longevity of your device.



Image: The CANMORE H300 device showing a golf score and distances to the green.

2. PRODUCT OVERVIEW

The CANMORE H300 is a compact GPS device designed for golfers, offering key features to assist during play.

Key Features:

- **Worldwide Course Data:** Preloaded with over 41,000 golf courses globally. Course data updates are available.
- **Essential Golf Functions:** Provides distance to green (Front/Middle/Back), hazard distances, shot distance measurement, and a digital scorecard. Automatically switches holes.
- **Magnetic Clip:** Features a powerful magnet for secure attachment to belts, pants pockets, or metal surfaces like golf cart uprights.
- **High Contrast Display:** White-on-black monochrome display ensures readability even in bright sunlight.
- **Waterproof Rating:** IPX7 rated for water resistance.



Image: Four screens of the CANMORE H300 showing accurate distances (back, center, front), hazard distances, a shot distance calculator, and a digital scorecard.

High Visibility Under Sunlight



Image: The CANMORE H300 display shown with high visibility under bright sunlight conditions.

Powerful Magnetic



Image: The CANMORE H300 device magnetically

attaching to the frame of a golf cart.

Attach to



Golf bag



Belt

Image: The CANMORE H300 device shown attached to a golf bag and clipped onto a belt.

3. SETUP

- Initial Charging:** Before first use, fully charge the device using the provided charging cable. Ensure the charging port is clean. Only use a 5V USB power source for charging to prevent battery damage.



Image: The CANMORE H300 displaying the time and date, with an illustration of its battery life.

- Course Data Updates:** To ensure the most accurate course data, regularly update the course maps from the official CANMORE website. Refer to the product's Quick Start Guide for specific instructions and links. Course data is updated every two weeks.
- GPS Signal Acquisition:** For initial GPS signal acquisition, ensure the device is in an open area with no obstructions. Avoid covering the GPS receiver during location.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

Press and hold the power button (refer to device diagram in Quick Start Guide) to turn the device on or off.

4.2 Golf Mode

Once powered on and a GPS signal is acquired, the device will automatically detect the golf course and display relevant information.

- **Distance to Green:** The display shows distances to the front (F), middle (M), and back (B) of the green.
- **Hazard Distances:** Navigate through the device's menu to view distances to various course hazards.
- **Shot Distance Measurement:** Use this function to measure the distance of your shots. Activate the feature at your starting point and walk to your ball.
- **Digital Scorecard:** The device includes a digital scorecard feature. Input your scores after each hole. Note that the device automatically advances to the next hole, so record scores promptly.
- **Automatic Hole Switching:** The device automatically detects and switches to the current hole as you progress through the course.



Image: A close-up of the CANMORE H300 screen showing the digital scorecard with current score and hole number.



Image: A close-up of the CANMORE H300 screen showing the shot distance measurement feature with a distance of 120 units.



Image: A close-up of the CANMORE H300 screen showing distances to the front, middle, and back of the green.

various hazards on the golf course.

4.3 Unit Settings

The default display unit is yards. To change the unit to meters, navigate to "Setting > Unit" on the device and select your preferred option.

5. MAINTENANCE

- **Cleaning:** Regularly clean the charging connectors with brushes and a soft cloth to remove sweat and dirt, which can affect charging performance.
- **Storage:** Although the device is IPX7 waterproof, for best performance and longevity, store it in a cool, dry place. Clean the watch after exposure to sweat and dirt.
- **Charging:** Always charge the device with a 5V USB power source. Higher voltages may damage the internal battery.

6. TROUBLESHOOTING

- **--- Display for Distance:** If the distance measurement displays "---" instead of figures, connect the device to power and recharge it. A low battery level initiates a power reserve mode, which reduces GPS range and can prevent position location.
- **"Incorrect Hole" Message:** Golf course layouts can change over time. If the device displays "Incorrect Hole," a course update is required. Visit the CANMORE website for the latest updates.
- **GPS Signal Issues:** Ensure the GPS receiver is not covered and the device is in an open area for optimal signal acquisition.
- **Device Freezing/Unresponsive:** If the device becomes unresponsive, attempt a soft reset by holding the power button for an extended period (e.g., 10-15 seconds). If issues persist, contact CANMORE support.

7. SPECIFICATIONS

Feature	Detail
Model Name	H300
Item Weight	1.41 ounces
Product Dimensions	1.57 x 0.59 x 2.19 inches
Batteries	1 Lithium Polymer battery (included)
Display Size	1.5 Inches
Special Feature	Waterproof (IPX7)
Connectivity Technology	USB
Map Type	Worldwide
Included Components	H300 device, Charging cable, Clip, Magnet
Memory Storage Capacity	64 MB

8. WARRANTY AND SUPPORT

The CANMORE H300 comes with a 6-month warranty. CANMORE offers lifetime service, including free weekly course updates and troubleshooting assistance for GPS connection, charging, shutdown, and other issues. Regular firmware updates are also provided.

For support, please visit the official CANMORE website. Refer to the product's Quick Start Guide for specific contact methods or support links.

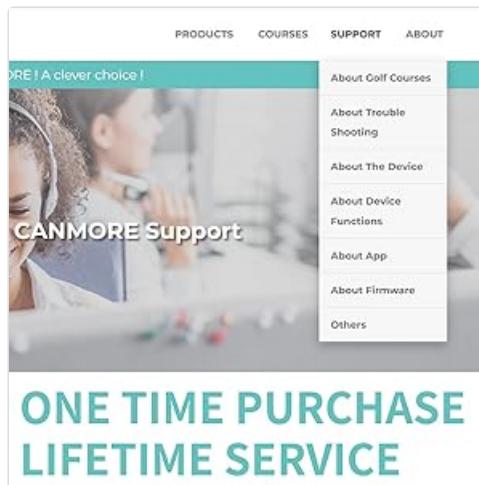
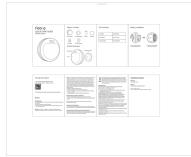
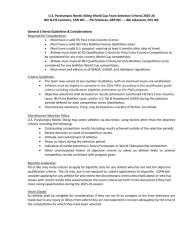


Image: A screenshot showing the support menu on the CANMORE website, with options for golf courses, troubleshooting, device functions, and firmware.

Related Documents - H300

 A thumbnail image of the Noorio Motion Sensor Quick Start Guide, showing a white page with several small, rectangular diagrams or icons.	<p>Noorio Motion Sensor Quick Start Guide</p> <p>A quick start guide for the Noorio Motion Sensor, covering what's included, LED indications, battery installation, setup instructions, and customer service information.</p>
 A thumbnail image of the Hydraloop H300 Recycle Ready Guide, showing a page with text and small diagrams related to plumbing and system requirements.	<p>Hydraloop H300 Recycle Ready Guide: Plumbing and System Requirements</p> <p>A comprehensive guide to preparing your building's plumbing for Hydraloop H300 greywater recycling, covering system requirements, installation, and operation.</p>
 A thumbnail image of the Hydraloop H300 Recycle Ready Guide, showing a page with a table of contents and various sections of the guide.	<p>Hydraloop H300 Recycle Ready Guide</p> <p>This guide provides essential information for preparing your building for the Hydraloop H300 graywater recycling system. It covers system requirements, plumbing schematics, connection details, specifications, and a glossary of terms to ensure a successful installation and operation.</p>

 <p>LiGrip H300 Handheld Rotating Laser Scanner</p>	<p>LiGrip H300 Handheld Rotating Laser Scanner: Features, Specifications, and Applications</p> <p>Explore the GreenValley LiGrip H300, a high-precision handheld rotating laser scanner. Discover its 300m range, 640,000 pts/s scanning rate, versatile mapping methods (SLAM, RTK-SLAM, PPK-SLAM), and multi-platform compatibility for diverse surveying and mapping applications.</p>
 <p>U.S. Paralympics Nordic Skiing World Cup Team Selection Criteria 2025-26</p> <p>Official selection criteria for the U.S. Paralympics Nordic Skiing World Cup Team for the 2025-26 season, detailing general requirements, specific event qualifications for World Cup events in Canmore, Finsterau, and Jakuszyce, and funding information.</p>	
 <p>Dräger Accessory Catalogue 2021</p> <p>Comprehensive catalog of original Dräger accessories for ventilation, monitoring, neonatal care, and other medical applications. Discover high-quality, compatible, and innovative solutions designed to enhance patient safety and optimize hospital workflows.</p>	

Documents - CANMORE – H300

CANMORE Golf GPS User Guide



WARNING
Use only USB chargers with 5V output that comply with the CE/FCC standard. Using non-standard USB chargers will void the warranty.

82-361G-01020

[\[pdf\] User Manual Instructions Guide Warranty Accessories](#)


TW361 User Manual CANMORE H300 Handheld GPS Golf Device Case 40000 Free Worldwide

Preloaded Courses Bag and Belt Orange H300 O CA CANMORE B08BZ7PPR7 B09PYQY496

B09PYQTY7Q B07ZP7DS25 B07ZP7VFHS B07ZP82KQG B09PYHWT1V B1y0ewCfsOS m media
amazon images | |||

CANMORE Golf GPS User Guide WARNING Use only USB chargers with 5V output that comply with the CE/FCC standard. Using non-standard USB chargers will void the warranty. 82-361G-01020 MAGNETIC ACCESSORY The device equipped with a powerful magnet in the rear center of its housing. It allows the device...

lang:en score:27 filesize: 3.69 M page_count: 12 document date: 2021-08-20

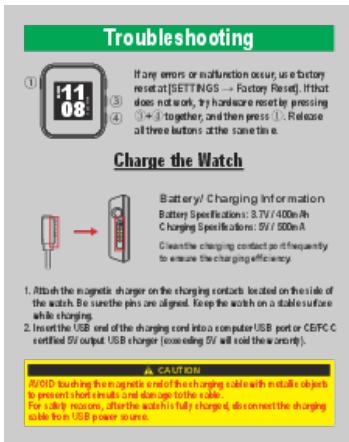

Troubleshooting



If any errors or malfunction occur, use factory reset at [SETTINGS → Factory Reset]. If that does not work, try hardware reset by pressing **③ + ④** together, and then press **①**. Release all three buttons at the same time.

Charge the Watch



Battery/ Charging Information
Battery Specifications: 3.7V / 400mAh
Charging Specifications: 5V / 200mA
Charge the charging contact port frequently
to ensure the charging efficiency

1. Attach the magnetic charger on the charging contacts located on the side of the watch. Be sure the pins are aligned. Rest the watch on a stable surface while charging.
2. Insert the USB end of the charging cord into a computer USB port or CEFC-C certified 5V output USB charger (exceeding 5V will void the warranty).

CAUTION
Avoid touching the magnetic end of the charging cable with metallic objects to prevent short circuits and damage to the cable.
For safety reasons, after the watch is fully charged, disconnect the charging cable from USB power source.

[pdf] Troubleshooting Guide Specifications Guide Warranty

Troubleshooting H300 CANMORE Handheld GPS Device Case 40000 Free Worldwide Preloaded Courses Bag and Belt Orange H300 O CA Guide CANMORE B08BZ7PPR7 B09PYQY496 B09PYQTY7Q B07ZP7DS25 B07ZP7VFHS B07ZP82KQG B09PYHWT1V 71gJyd BcoL m media amazon images I |||

Troubleshooting If any errors or malfunction occur, use factory 11 08 SUN OCT 11 reset at SETTINGS Factory Reset . If that does not work, try hardware reset by pressing together, and then press . Release all three buttons at the same time. Charge the Watch Battery/ Charging Information...

lang:en score:24 filesize: 158.42 K page_count: 1 document date: 2021-09-14

CANMORE

TW-353 / H300 GPS Golf

Guide de l'Utilisateur

AVERTISSEMENT

Utilisez uniquement des chargeurs USB avec une sortie de 5V qui respectent la norme CE. L'utilisation de chargeurs USB non-standard annulera la garantie.



[pdf] User Manual Guide

TW410 User Manual Pour recevoir le meilleur signal GPS trouvez un espace ouvert Le récepteur est situé au milieu de la montre NE couvrez PAS récepteur B1 LOhu275Sm media amazon images I B1 LOhu275S |||

TW-353 / H300 GPS Golf Guide de l'Utilisateur AVERTISSEMENT Utilisez uniquement des chargeurs USB avec une sortie de 5V qui respectent la norme CE. L'utilisation de chargeurs USB non-standard annulera la garantie. **TW-353 / H300 TW-353 Conseils pour utiliser le GPS** Pour recevoir le meilleur sig...

lang:fr score:20 filesize: 3.55 M page_count: 14 document date: 2021-09-09



[pdf] Specifications

Specification Sheet H300 CANMORE Handheld GPS Device Case 40000 Free Worldwide Preloaded Courses Bag and Belt Orange H300 O CA CANMORE B08BZ7PPR7 B09PYQY496 B09PYQTY7Q B07ZP7DS25 B07ZP7VFHS B07ZP82KQG B09PYHWT1V 61eSbEGfPML m media amazon images I |||

LCD LCD Size **Resolution** **Waterproof** **Backlight** **Operating temperature** **Voltage**
LCD 23.04 x 23.04 H x W in mm 128 x 128 Pixels IPX7 Single level 0°-40°C DC 5V
Battery **Battery life** **Interface** **Charger** **Size** **Weight**
Chargeable 400mAh lithium battery Golf Mode = up to 32 hours / Time Mode = up to 60 days USB Interface, 300mA, 3 hours completed 55.5 x 40.0 x 9.0 (L x W x H in mm) 40g

lang:fr score:14 filesize: 76.51 K page_count: 1 document date: 2021-09-13



[pdf]

Cura e Decoro di Casa Giardino Shop Online Biastore BIA Home Garden Bia magazine Natale 2023 v 1699871421 cdn shopify s files 1 0029 9361 8989 |||

Progetto grafico e art direction: Zenit - Fotografia: Paolo Bassanini - Si ringrazia per l'ospitalità ... te ELEGANT in PVC H120 x 74 cm H150 x 93 cm H180 x 114 cm H210 x 137 cm H240 x 157 cm H270 x 177 cm **H300** x 201 cm H360 x 241 cm 49,90 79,90 109,00 149,00 219,00 329,00 499,00 749,00 2. Abete...

lang:it score:12 filesize: 7.47 M page_count: 24 document date: 2023-11-08