

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [KIWI](#) /

› [KIWI K-Baby 85 Baby Food Maker Instruction Manual](#)

KIWI K-Baby 85

KIWI K-Baby 85 Baby Food Maker Instruction Manual

Model: K-Baby 85

INTRODUCTION

The KIWI K-Baby 85 Baby Food Maker is designed to simplify the preparation of healthy, homemade meals for infants. This versatile appliance combines steaming and blending functions, allowing you to create nutritious baby food quickly and efficiently. Please read this manual thoroughly before first use to ensure safe and optimal operation.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions carefully before operating the appliance.
- Do not immerse the motor unit, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- This appliance has a safety lock feature. Ensure all parts are correctly assembled before operation.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your KIWI K-Baby 85 Baby Food Maker:

- Main Unit (Motor Base)
- Water Tank
- Steaming Basket
- Blender Jar with Lid
- Blades
- Control Knob
- Water Level Indicator



Image 1: The KIWI K-Baby 85 Baby Food Maker, showing the main unit with the control knob, water level indicator, and the blending jar attached. The appliance is white with grey accents.

SETUP AND FIRST USE

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Wash the blending jar, lid, steaming basket, and blades with warm soapy water. Rinse thoroughly and dry. Wipe the main unit with a damp cloth.
3. **Assemble:** Ensure the blades are securely attached to the blending jar. Place the blending jar onto the main unit, twisting until it locks into place.

4. **Add Water:** Open the water tank lid on the main unit. Fill the water tank with clean, distilled water up to the desired level for steaming. Do not exceed the maximum fill line.



Image 2: Illustrates the process of adding water to the appliance's water tank. Also shows chopped vegetables ready for steaming and

pureed food in the blending jar, demonstrating the device's capabilities.

OPERATING INSTRUCTIONS

Steaming Food

1. Prepare ingredients by washing, peeling, and chopping them into small, uniform pieces suitable for steaming.
2. Place the chopped ingredients into the steaming basket.
3. Insert the steaming basket into the blending jar.
4. Ensure the blending jar lid is securely closed.
5. Fill the water tank with the appropriate amount of water for the desired steaming time (refer to the water level indicator for guidance).
6. Plug in the appliance.
7. Turn the control knob to the steaming function (usually indicated by a steam icon or a timer setting). The appliance will begin steaming.
8. Once steaming is complete, the appliance may beep or automatically switch off. Carefully remove the blending jar (use oven mitts if hot).
9. Carefully remove the steaming basket and transfer the steamed food to the blending jar for pureeing, or serve as finger food.

Blending/Pureeing Food

1. After steaming, or with pre-cooked soft ingredients, place the food directly into the blending jar.
2. Ensure the blades are correctly installed and the lid is securely fastened.
3. Plug in the appliance.
4. Turn the control knob to the blending function (usually indicated by a blade icon).
5. Blend in short pulses until the desired consistency is achieved. For smoother purees, you may add a small amount of breast milk, formula, or water.
6. Do not over-blend, as this can overheat the motor. Allow the motor to rest between blending cycles if necessary.
7. Once blending is complete, turn the control knob to the "off" position and unplug the appliance.
8. Carefully remove the blending jar and serve the freshly prepared baby food.



Image 3: The KIWI K-Baby 85 Baby Food Maker positioned on a kitchen counter next to a potted plant, illustrating its compact size and suitability for kitchen environments.

CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygienic operation of your baby food maker.

- Always unplug the appliance before cleaning.
- **Blending Jar, Lid, Steaming Basket, Blades:** These parts are generally dishwasher-safe (top rack only) or can be washed by hand with warm soapy water. Use a brush to clean around the blades carefully. Rinse thoroughly and allow to air dry.
- **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
- **Descaling the Water Tank:** Over time, mineral deposits (limescale) may build up in the water tank, especially if tap water is used. To descale:
 - a. Mix 50ml of white vinegar with 100ml of water.
 - b. Pour the solution into the water tank.
 - c. Run a steaming cycle without food for 10-15 minutes.
 - d. Empty the tank and rinse thoroughly with clean water. Repeat with clean water if any vinegar smell persists.
 - e. Perform descaling regularly (e.g., once a month or every 20 uses) to prevent significant buildup.
- Store the appliance in a clean, dry place when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; safety lock not engaged; power outage.	Ensure the power cord is securely plugged into a working outlet. Check that the blending jar and lid are correctly assembled and locked into place. Verify power supply.
Steaming function not working.	Insufficient water in the tank; limescale buildup.	Check water level and refill if necessary. Perform descaling procedure as described in the "Cleaning and Maintenance" section.
Blending function not working effectively.	Food pieces too large; too much food in the jar; blades not properly installed.	Chop food into smaller pieces. Reduce the amount of food in the jar. Ensure blades are securely attached.
Unusual noise during operation.	Improper assembly; foreign object in the jar.	Turn off and unplug the appliance. Check that all parts are correctly assembled. Inspect the jar for any foreign objects.
Water tank has limescale buildup.	Hard water usage.	Follow the descaling procedure in the "Cleaning and Maintenance" section. Use distilled or filtered water to minimize future buildup.

SPECIFICATIONS

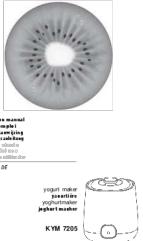
Feature	Detail
Brand	KIWI
Model Number	K-BABY 85
Power/Wattage	150 watts
Material	Plastic
Special Feature	Safety Lock
Product Dimensions	9D x 5G x 18.5Y centimeters
Steaming Capacity	600 ml (steaming pot)

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact KIWI customer service directly. Keep your proof of purchase for warranty claims.

Manufacturer: BMVA ELEKTRONİK SANAYİ VE TİCARET A.Ş.

Related Documents - K-Baby 85

	<p>Kiwi KYM 7205 Yogurt Maker: Instruction Manual</p> <p>Comprehensive instruction manual for the Kiwi KYM 7205 yogurt maker, covering safety, parts description, usage, cleaning, and environmental guidelines. Learn how to make delicious homemade yogurt.</p>
	<p>KIWI Weekly Offers & Promotions - November/December</p> <p>Explore the latest weekly deals and special offers from KIWI supermarket. Find discounts on groceries, fresh produce, meat, seasonal items, and more. Shop smart with KIWI's low prices and Trumf bonus.</p>
	<p>KIWI Kundeavis: Grilltips, Tilbud og Nyheter</p> <p>Utforsk KIWI's kundeavis for uke 28 med et bredt utvalg av grillmat, ferske råvarer, drikkevarer, og personlig pleieprodukter til gode priser. Finn alt for sommerens grillfester og dagligvarer.</p>
	<p>KIWI Kundeavis - Tilbud på dagligvarer, husholdning og mer</p> <p>Utforsk de siste ukentlige tilbudene og rabattene fra KIWI-butikkene i Norge. Finn tilbud på ferske råvarer, kjøtt, fisk, meieriprodukter, bakevarer, drikkevarer, personlig pleie og husholdningsartikler.</p>
	<p>KIWI Kundeavis - Uke 46: Tilbud og Nyheter</p> <p>Utforsk de ukentlige tilbudene fra KIWI, inkludert ferske grønnsaker, kjøttvarer, meieriprodukter, drikke, husholdningsartikler og blomster. Finn gode priser på kjente merkevarer og KIWI's egne merker.</p>
	<p>KIWI Weekly Offers - Fresh Produce, Meat, Groceries & More</p> <p>Explore the latest weekly offers and discounts from KIWI supermarket. Find deals on fresh fruits, vegetables, meat, dairy, pantry staples, and household items. Shop smart with KIWI's low prices.</p>

