

Manuals.plus /
› Luqeeeg /
› Luqeeeg Page Turner Pedal Model 7677596548976 User Manual

Luqeeeg 7677596548976

Luqeeeg Page Turner Pedal User Manual

Model: 7677596548976

INTRODUCTION

Welcome to your new Luqeeeg Page Turner Pedal. This device is designed to simplify page turning for digital sheet music, allowing musicians to focus on their performance without manual intervention. This manual provides essential information for the proper setup, operation, and maintenance of your device.

PRODUCT OVERVIEW

Key Features

- Wireless connectivity compatible with iOS, Android, and OS systems.
- Remote control of digital sheet music page turning via left and right pedals.
- Compact and portable design for ease of transport.
- Constructed from durable ABS material for long-term use.

Components

- Luqeeeg Page Turner Pedal Unit
- User Manual (this document)



Image: The Luqeeq Page Turner Pedal, showcasing its compact design with two foot pedals and a central power button.

SETUP

Battery Installation

The Luqeeq Page Turner Pedal is powered by batteries. Locate the battery compartment on the underside of the device. Insert the appropriate batteries, ensuring correct polarity as indicated inside the compartment. Close the compartment securely.

Pairing with Your Device

1. Turn on the page turner pedal by pressing the central power button. Indicator lights for Android and iOS will illuminate briefly.
2. Activate Bluetooth on your iOS, Android, or OS device (e.g., tablet, smartphone, computer).
3. Search for available Bluetooth devices. The pedal should appear as 'Page Turner' or a similar identifier.
4. Select the Luqeeq Page Turner Pedal from the list to establish a connection. Once connected, the corresponding indicator light (Android or iOS) will remain steadily lit.



Image: A close-up view of the central power button and the 'Android' and 'iOS' indicator lights on the page turner pedal.

OPERATING INSTRUCTIONS

Basic Operation

Once successfully paired with your device, the pedal allows for hands-free navigation of digital sheet music or documents. Press the **left pedal** to move to the previous page or scroll left. Press the **right pedal** to move to the next page or scroll right. This functionality frees your hands, enabling continuous playing during performances.

Compatibility Notes for iOS Users

Due to current system limitations, iOS devices can only operate on locally stored music scores or documents, not online streaming content. Page turning functionality for iOS is limited to left and right scrolling. For optimal use, it is recommended that iOS users download their music scores to their local device albums before use.



Image: A detailed view of one of the foot pedals, showing its textured surface for grip.



Say goodbye to manual page turning and free your hands. Using premium ABS material that is not easy to break and durable. Suitable for weddings, shows, strumming, parties, etc.

Image: The page turner pedal positioned on the floor, ready for use with a digital tablet on a music stand.

MAINTENANCE

To ensure the longevity and optimal performance of your Luqeeq Page Turner Pedal, follow these maintenance guidelines:

- Keep the device clean and dry. Wipe the surface with a soft, dry cloth.
- Avoid exposure to extreme temperatures, direct sunlight, or high humidity.
- Do not immerse the device in water or any other liquids.
- If the device will not be used for an extended period, remove the batteries to prevent potential leakage and damage.

TROUBLESHOOTING

Connection Issues

- **No Power:** Ensure the pedal is powered on and has sufficient battery charge. Replace batteries if necessary.
- **Bluetooth Not Connecting:** Verify that Bluetooth is enabled on your device. Try restarting both the pedal and your device, then attempt pairing again.
- **Out of Range:** Ensure the pedal is within the effective Bluetooth range of your device (typically up to 10 meters or 33 feet).

Page Turning Not Responding

- **Connection Status:** Confirm that the pedal is actively connected to your device via Bluetooth.
- **iOS Specific:** For iOS users, ensure that the music score or document is stored locally on your device and not accessed through an online service.
- **Application Compatibility:** Verify that the application you are using for sheet music supports external page turner devices. Some applications may require specific settings to be enabled.

SPECIFICATIONS

Feature	Detail
Brand	Luqeeg
Model Number	7677596548976
ASIN	B0B3JR3NBZ
Package Dimensions	8.46 x 4.72 x 1.57 inches
Item Weight	4.9 ounces
Material	Acrylonitrile Butadiene Styrene (ABS)
Connectivity Technology	Wireless
Power Source	Battery Powered
Compatible Devices	iOS, Android, OS devices
Color	Black



Image: Top view of the Luqeeq Page Turner Pedal, highlighting its ergonomic shape and pedal placement.



Image: Side view of the Luqeeq Page Turner Pedal, showing its slim profile.

WARRANTY AND SUPPORT

The Luqeeq Page Turner Pedal comes with a satisfaction guarantee. If you encounter any issues with the product or are not satisfied with its performance, please contact Luqeeq customer support for assistance. Contact information can typically be found on the product packaging or through the seller's official channels.

© 2024 Luqeeq. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B3JR3NBZ>

More documents and user manuals: <https://manuals.plus/>