

DELTA 52487-SS-PR

DELTA FAUCET 52487-SS-PR Universal Showerhead Instruction Manual

This manual provides detailed instructions for the installation, operation, and maintenance of your DELTA FAUCET 52487-SS-PR Universal Showerhead with Lumicoat Stainless finish.

1. INTRODUCTION

The DELTA FAUCET 52487-SS-PR Universal Showerhead is designed to enhance your showering experience with innovative features. It incorporates H2Okinetic Technology, which sculpts water into a unique wave pattern, providing the sensation of more water and increased pressure. The UltraSoak Spray mimics dense natural rainfall for a saturating shower, while the Lumicoat Finishes ensure easy cleaning and resistance to mineral buildup and hard water stains.



Image 1: The DELTA FAUCET 52487-SS-PR Universal Showerhead, showcasing its Lumicoat Stainless finish and design.

2. SETUP AND INSTALLATION

Installing your new DELTA showerhead is a straightforward process that typically does not require special tools. You will need standard plumber's tape for a secure, leak-free connection. Ensure the water supply is turned off before beginning installation.

Installation Steps:

1. Remove your existing showerhead by turning it counter-clockwise.
2. Clean any debris from the shower arm threads.
3. Wrap plumber's tape clockwise around the threads of the shower arm.
4. Thread the new DELTA showerhead onto the shower arm by turning it clockwise until hand-tight.
5. Use a wrench to tighten an additional quarter turn, being careful not to overtighten.
6. Turn on the water supply and check for leaks.



Image 2: The DELTA showerhead installed and operating, demonstrating water flow.

3. OPERATING INSTRUCTIONS

Your DELTA showerhead features 7 distinct spray settings, allowing you to customize your showering experience. These settings are easily adjustable by rotating the dial on the showerhead face.

Key Spray Settings:

- **H2Okinetic PowerDrench Spray:** Creates powerful water patterns for an energizing experience,

designed to provide more coverage and intensity.

- **H2Okinetik UltraSoak Spray:** Mimics the sensation of dense natural rainfall, offering an intensely saturating and soothing shower.
- Additional settings provide variations in spray intensity and coverage to suit individual preferences.



H2OKINETIC[®]
TECHNOLOGY

3X

**MORE COVERAGE
THAN A STANDARD
SHOWER HEAD^{*}**

*Coverage measured in accordance with
EPA WaterSense[®] Specification for
shower heads, March 4, 2010

 **DELTA**
see what Delta can do[™]

Image 3: Visual representation of H2Okinetik Technology providing 3X more coverage than a standard showerhead.



see what Delta can do™

H₂OKINETIC® SHOWERS GIVE YOU MORE



Image 4: Comparison illustrating the enhanced coverage, intensity, and warmth delivered by H2Okinesis showers.

4. MAINTENANCE

To maintain the appearance and performance of your DELTA showerhead, regular cleaning is recommended. The Lumicoat Finishes are designed for easy maintenance.

Cleaning Instructions:

- The Lumicoat Finishes allow for easy wiping clean and are guaranteed to resist mineral buildup and hard water stains on the product's most commonly touched areas.
- For general cleaning, use a soft cloth and mild soap and water. Avoid abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the finish.
- Periodically inspect the spray nozzles for any mineral deposits. The Touch-Clean nozzles can often be cleared by gently rubbing them with your finger.

DELTA® LUMICOAT™ FINISHES



see what Delta can do™

REPELS LIQUIDS AND
RESISTS WATER SPOTS

WITH
LUMICOAT™ TECHNOLOGY

WITHOUT
LUMICOAT™ TECHNOLOGY



GUARANTEED TO RESIST MINERAL
BUILDUP AND HARD WATER STAINS

Image 5: Demonstration of Lumicoat Finishes repelling liquids and resisting water spots, compared to a non-Lumicoat surface.

5. TROUBLESHOOTING

If you encounter any issues with your DELTA showerhead, consider the following common troubleshooting steps:

- **Low Water Pressure:** Check if the showerhead nozzles are clogged with mineral deposits. Clean them as described in the Maintenance section. Ensure your home's main water supply valve is fully open.
- **Leaking:** Verify that the showerhead is securely tightened to the shower arm and that plumber's tape was applied correctly. If leaking persists, the washer inside the connection may need replacement.
- **Difficulty Changing Spray Settings:** Ensure the spray selector dial is free of debris. Gently rotate the dial to cycle through settings.

For persistent issues, please refer to the Warranty and Support section for further assistance.

6. SPECIFICATIONS

Feature	Detail
Brand	DELTA
Model Number	52487-SS-PR
Style	With Lumicoat
Shape	Round
Material	Plastic
Finish Type	Stainless
Installation Type	Wall Mounted
Color	Stainless
Product Dimensions	3.44"L x 8.25"W
Number of Settings	7
Number of Jets	1
Efficiency	WaterSense certified (efficient)
Item Weight	1.66 pounds
UPC	195205036814

ADDITIONAL INFORMATION

**NUMBER OF SPRAY
SETTINGS**
4 sprays

SHOWER HEAD DEPTH
3.44 inches

SHOWER ARM
Not included

MATERIALS NEEDED
Plumber's tape

**WATERSENSE® LABELED
PRODUCT**
Yes



DIMENSIONS

SHOWER HEAD WIDTH
8.25 inches



Image 6: Detailed dimensions of the DELTA showerhead, indicating a width of 8.25 inches and depth of 3.44 inches.

7. WARRANTY AND SUPPORT

Your DELTA FAUCET 52487-SS-PR Universal Showerhead is backed by a **Lifetime Faucet and Finish Lifetime Limited Warranty**. This warranty covers defects in material and manufacturing for as long as the original consumer purchaser owns the home in which the product was first installed.

For detailed warranty information, product registration, or to contact customer support, please visit the official DELTA store or contact their customer service department.


Official DELTA Store: [Visit the DELTA Store on Amazon](#)



**LIFETIME
LIMITED WARRANTY**

Image 7: Symbol indicating the product is covered by a Lifetime Limited Warranty.

Related Documents - 52487-SS-PR

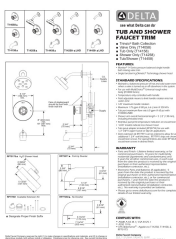

[Delta Trinsic Tub and Shower Faucet Trim Specifications](#)

Comprehensive product specifications, features, warranty, and compliance details for the Delta Trinsic Tub and Shower Faucet Trim collection, including model numbers T14058, T14158, T14258, and T14458.

	<p>Delta Stryke™ Two Handle Wall Mount Lavatory Faucet (T3576LF-WL, T35766LF-WL) - Specifications and Warranty</p> <p>Detailed specifications, features, warranty information, and compliance standards for the Delta Stryke™ two-handle wall-mount lavatory faucet models T3576LF-WL and T35766LF-WL, including dimensions and rough-in requirements.</p>
	<p>Delta Two Handle Widespread Bathroom Faucets Installation Manual</p> <p>Detailed installation guide for Delta Two Handle Widespread Bathroom Faucets, covering end valve and handle installation, spout and lift rod setup, supply line connections, pop-up drain assembly, and maintenance tips. Includes step-by-step instructions and troubleshooting advice.</p>
	<p>Delta In2ition 2-in-1 Shower with H2Okinetic Technology - 7-Spray Hand Shower</p> <p>Detailed specifications and features for the Delta In2ition 2-in-1 shower system, including H2Okinetic Technology, 7 spray settings, Lumicoat™ finish, and warranty information. Model numbers: 58651-▲, 58651-25, 58651-APR, 58651-APR25.</p>
	<p>Delta Monrovia Collection Single Handle Pull-Down Kitchen Faucets - Specifications and Warranty</p> <p>Detailed specifications, features, warranty information, and compliance details for the Delta Monrovia Collection Single Handle Pull-Down Kitchen Faucets, including Touch2O® and DIAMOND Seal® technologies.</p>
	<p>Delta 980T-SS-DST Single Lever Pilar Touch Pull Down Kitchen Faucet Installation Manual & Guide</p> <p>Comprehensive installation guide and troubleshooting manual for the Delta 980T-SS-DST and 980T-SSSD-DST single lever Pilar Touch pull down kitchen faucet. Includes parts list, warranty, and maintenance tips.</p>