

[Manuals.plus](#) /

› [AKOOTE](#) /

› AKOOTE Replacement Remote Control User Manual for Bosch Climate 5000 AC

AKOOTE AAS-009-0CS, AAS-012-0CS

AKOOTE Replacement Remote Control User Manual

For Bosch Climate 5000 AAS-009-0CS / AAS-012-0CS AC Air Conditioners

PRODUCT OVERVIEW

This manual provides instructions for the AKOOTE Replacement Remote Control, designed for use with Bosch Climate 5000 series AC Air Conditioners, specifically models AAS-009-0CS and AAS-012-0CS. This remote operates exclusively in Celsius.



Figure 1: AKOOTE Replacement Remote Control for Bosch Climate 5000 AC Air Conditioner.

SETUP

1. Battery Installation

The remote control requires batteries (not included). To install:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA batteries, ensuring the correct polarity (+ and –) as indicated inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.

Note: Always use new batteries and replace both batteries at the same time. Remove batteries if the remote will not be used for an extended period.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons and their functions for optimal control of your AC unit. The remote operates in Celsius only.

Button Functions:

- **ON/OFF Button** (Yellow): Press to turn the AC unit on or off.
- **MODE Button:** Cycles through operating modes such as Cool, Dry, Fan, Heat (if supported by AC unit), and Auto.
- **FAN Button:** Adjusts the fan speed (Auto, Low, Medium, High).
- **TEMP ▲ / ▼ Buttons:** Increases or decreases the set temperature in Celsius.
- **TIMER ON Button:** Sets a timer for the AC unit to turn on automatically.
- **TIMER OFF Button:** Sets a timer for the AC unit to turn off automatically.
- **SLEEP Button:** Activates sleep mode for quiet operation and energy saving.
- **TURBO Button:** Engages maximum fan speed for rapid cooling or heating.
- **SWING Button:** Controls the vertical louver movement for air direction.
- **LED Button:** Turns the display light on the AC unit on or off.

Display Indicators:

- **SET TEMP:** Shows the currently set temperature in Celsius.
- **AUTO:** Indicates the AC unit is operating in automatic mode.
- **FAN:** Displays the current fan speed setting.

MAINTENANCE

Cleaning the Remote Control

To maintain the remote control's appearance and functionality:

- Wipe the surface with a soft, dry cloth.
- Do not use liquid cleaners, sprays, or chemical solvents, as these may damage the remote.

Battery Care

- Replace batteries when the remote's range decreases or the display becomes dim.
- Dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

- **Remote not responding:** Ensure batteries are correctly installed and not depleted. Replace batteries if necessary. Check for any obstructions between the remote and the AC unit's receiver.
- **Limited range:** Replace batteries. Ensure the remote is pointed directly at the AC unit.
- **Display issues:** If the display is dim or blank, replace the batteries.

SPECIFICATIONS

- **Brand:** AKOOTE
- **Compatible Models:** Bosch Climate 5000 AAS-009-0CS, AAS-012-0CS AC Air Conditioners
- **Power Source:** 2 x AAA Batteries (not included)
- **Connectivity Technology:** Infrared
- **Temperature Unit:** Celsius only
- **Item Model Number (Internal):** 17df4ae5-eb19-4b39-846b-267ce55bcd02
- **Dimensions (Approximate):** 1.97 x 1.18 x 0.39 inches
- **Weight (Approximate):** 0.032 ounces (without batteries)

WARRANTY AND SUPPORT

Specific warranty information for this replacement remote control is not provided in the product details. For support or warranty inquiries, please refer to the retailer or the manufacturer, AKOOTE, directly.