

- Manuals.plus /
- › TOLEBLID /
- › TOLEBLID Biometric Rifle Gun Safe (Model B0B3LNTSFH) Instruction Manual

TOLEBLID B0B3LNTSFH

TOLEBLID Biometric Rifle Gun Safe (Model B0B3LNTSFH) Instruction Manual

Your guide to safe and effective use.

1. PRODUCT OVERVIEW

The TOLEBLID Biometric Rifle Gun Safe (Model B0B3LNTSFH) is designed to provide secure storage for firearms and valuables. Constructed from alloy steel, it features multiple access methods including a biometric fingerprint scanner, a digital keypad, and emergency keys. The safe is equipped with an anti-theft alarm system and includes internal storage options such as a removable shelf and gun rests. Its dimensions are approximately 14.17"D x 17.71"W x 57.08"H, and it weighs around 94.6 pounds.

FIRE RESISTANT RIFLE SAFE



Figure 1: Exterior view of the TOLEBLID Biometric Rifle Gun Safe.

DIMENSIONS



Bolt
Down Kit



CAPACITY:
9-11 Rifles /Shotguns

OVERALL W14" *D17.71" *H57"

Two inside shelves can be removed and can be moved up and down for convenience organizing



Figure 2: Overview of safe dimensions and rifle capacity.

2. SETUP

2.1 Initial Opening and Battery Installation

Upon receiving your safe, it will be in a locked state. To open it for the first time and install batteries, follow these steps:

1. Locate the emergency keyhole cover on the front panel.
2. Use the provided spanner tool to carefully remove the emergency keyhole cover.
3. Insert one of the emergency keys into the keyhole and turn it to unlock the safe.
4. Turn the handle to open the safe door.
5. Inside the door, locate the battery compartment. Install 4 AA batteries (not included) ensuring correct polarity.
6. Close the battery compartment cover.
7. Close the safe door and turn the handle to lock it. Remove the emergency key and replace the keyhole cover.

2.2 Mounting the Safe

For enhanced security, it is recommended to mount the safe to a floor or wall using the provided expansion bolts.

1. Choose a suitable location for the safe, ensuring it is level and stable.
2. Mark the drilling points through the pre-drilled holes at the back or bottom of the safe onto the wall or floor.
3. Drill pilot holes at the marked locations.
4. Align the safe with the drilled holes and secure it using the expansion bolts.
5. Ensure the safe is firmly attached and does not wobble.

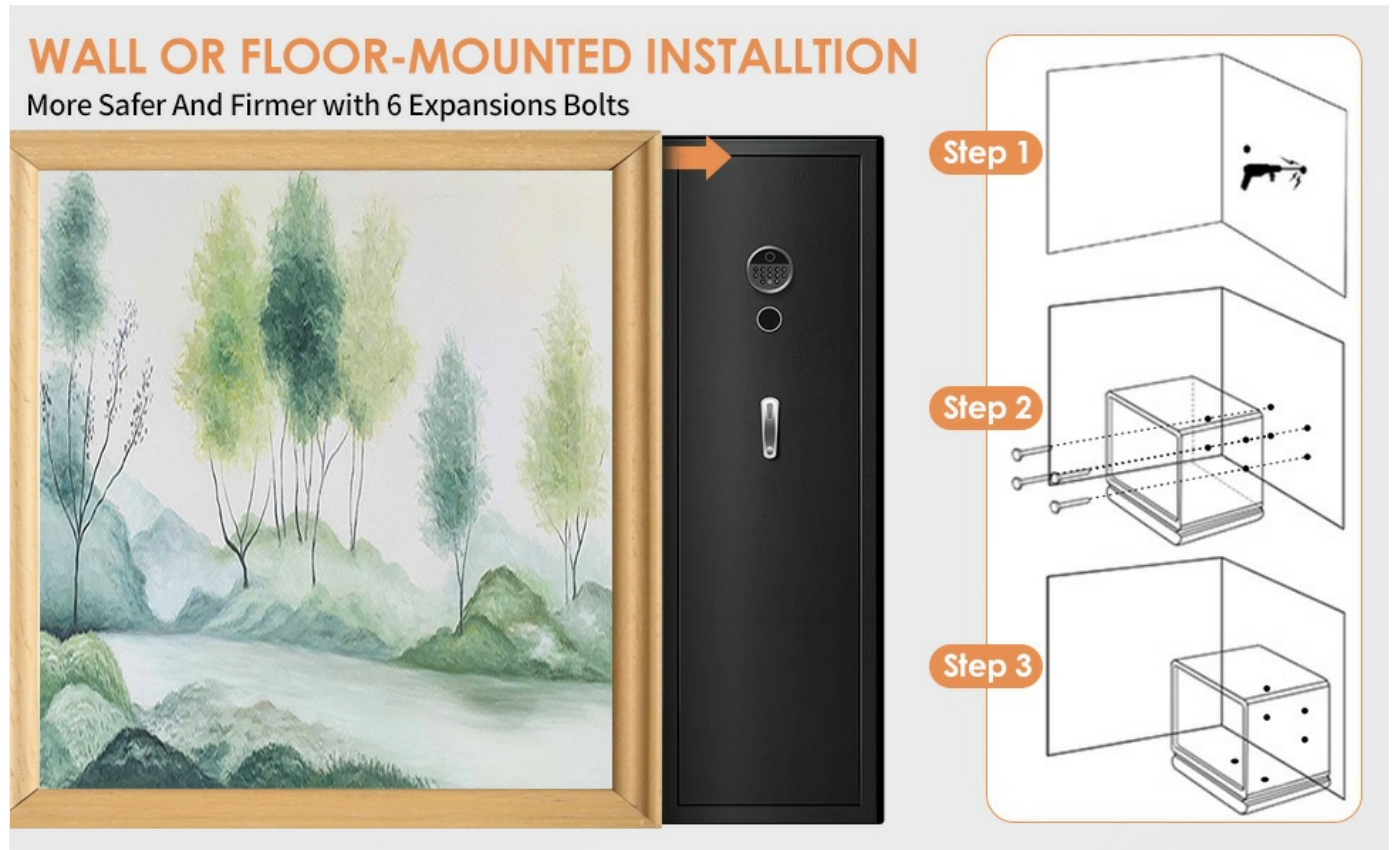


Figure 3: Illustrated steps for wall or floor mounting.

3. OPERATING INSTRUCTIONS

3.1 Opening with Digital Code

The safe comes with a default factory code (e.g., 1-2-3-4). It is highly recommended to change this code immediately after initial setup.

1. Enter your 3-8 digit user code on the keypad.
2. Press the '#' key.
3. If the code is correct, the indicator light will turn green. Turn the handle to open the door.

QUICK ACCESS BIOMETRIC RIFLE SAFE

Three ways to open the door



Figure 4: Overview of the safe's multiple access methods.

Your browser does not support the video tag.

Video 2: Demonstrates opening the safe using a digital code (1:20 - 1:34).

3.2 Changing the User Code

To change the user code, ensure the safe door is open:

1. With the door open, enter the current user code (default is 1-2-3-4).
2. Press the '#' key. The indicator light will turn green.
3. Press the '**' key.
4. Enter your new 3-8 digit code.
5. Press the '#' key to confirm. The indicator light will flash green, indicating successful code change.
6. Test the new code with the door open before closing.

Your browser does not support the video tag.

Video 3: Demonstrates changing the user code (1:35 - 2:41).

3.3 Registering Fingerprints

The safe can store up to 100 fingerprints. To register a new fingerprint, ensure the safe door is open:

1. With the door open, press the red reset button located on the inside of the door (near the hinge).
2. The fingerprint scanner will activate. Place your finger on the scanner.
3. Lift and place your finger repeatedly (typically 3 times) until the indicator light turns green, confirming successful registration.
4. Repeat for additional fingerprints.
5. Test the registered fingerprint with the door open before closing.



Figure 5: Detail of the biometric fingerprint scanner and digital keypad.

Your browser does not support the video tag.

Video 4: Demonstrates registering a fingerprint (2:54 - 3:38).

3.4 Opening with Fingerprint

To open the safe using a registered fingerprint:

1. Place a registered finger on the fingerprint scanner.
2. If the fingerprint is recognized, the indicator light will turn green. Turn the handle to open the door.

4. MAINTENANCE

4.1 Battery Replacement

When the batteries are low, the indicator light may flash red or the keypad may not respond. Replace all 4 AA batteries promptly to ensure continuous operation. Refer to Section 2.1 for battery installation steps.

4.2 General Care

- Clean the exterior of the safe with a soft, damp cloth. Avoid abrasive cleaners.
- Keep the fingerprint scanner clean and free of dirt or moisture for optimal performance.
- Regularly check the locking bolts and hinges for any signs of wear or damage.
- Store emergency keys in a secure location away from the safe.

5. TROUBLESHOOTING

5.1 Anti-Theft Alarm Activation

The safe is equipped with an anti-theft alarm. If an incorrect code is entered 3 times consecutively, the alarm will sound, and the keypad will temporarily lock. To silence the alarm and unlock the keypad, use a correct digital code or a registered fingerprint, or use the emergency key.



Figure 6: Illustration of the smart alarm system.

5.2 Fingerprint Recognition Issues

If the fingerprint scanner fails to recognize a registered fingerprint:

- Ensure your finger is clean and dry.
- Place your finger firmly and completely on the scanner.
- Try different angles or fingers if multiple are registered.
- If issues persist, consider re-registering the fingerprint or using the digital code/emergency key.

5.3 Resetting to Factory Settings

To delete all registered fingerprints and reset the user code to the factory default (1-2-3-4):

1. With the safe door open, press and hold the red reset button on the inside of the door for approximately 5 seconds.
2. The indicator light will flash, confirming that all registered fingerprints have been deleted and the user code has been reset to the factory default.
3. You will need to re-register fingerprints and set a new user code after this process.

Your browser does not support the video tag.

Video 5: Demonstrates resetting the safe to factory settings (3:39 - 4:29).

6. SPECIFICATIONS

Feature	Detail
Brand	TOLEBLID
Product Dimensions	14.17"D x 17.71"W x 57.08"H
Lock Type	Electronic, Key, Fingerprint
Color	Black
Material	Alloy Steel
Special Feature	Adjustable Shelf, Fingerprint Lock, Fire Resistant
Mounting Type	Floor Mount
Included Components	Shelves
Alarm	Anti-theft
Water Resistance Level	Not Water Resistant
Item Weight	94.6 pounds
Size	Large

7. WARRANTY AND SUPPORT

For warranty information, technical support, or any questions regarding your TOLEBLID Biometric Rifle Gun Safe, please refer to the contact information provided at the point of purchase or visit the official TOLEBLID website. Customer support is available to assist with product inquiries and operational guidance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B3LNTSFH>

More documents and user manuals: <https://manuals.plus/>