

Fastrack NR68027PP03

Fastrack Street Line Digital Watch NR68027PP03 User Manual

Model: NR68027PP03

1. PRODUCT OVERVIEW

The Fastrack Street Line Digital Watch NR68027PP03 is a stylish and functional timepiece designed for daily wear. It features a digital display, a comfortable silicone strap, and several useful functions including a pedometer, stopwatch, and alarm. This watch is built to be durable and water-resistant, making it suitable for various activities.



Image 1.1: Front view of the Fastrack Street Line Digital Watch, showcasing its digital display and blue silicone strap.

Key Features:

- **Digital Display:** Easy-to-read multifunction digital screen with bold numerals.
- **Stopwatch Function:** Track your performance or time tasks with precision.
- **Soft Silicone Strap:** Lightweight and comfortable for all-day wear.
- **100M Water Resistant:** Built to withstand splashes, rain, and even swims.
- **Pedometer:** Track your daily steps.
- **Backlight:** For visibility in low-light conditions.

2. SETUP AND INITIAL CONFIGURATION

Before using your watch, it is recommended to set the correct time and date.

2.1 Setting Time and Date:

1. **Identify Buttons:** Locate the "MODE", "RESET", "ST/STP", and "LIGHT" buttons on the watch casing.
2. **Enter Time Setting Mode:** Press the "MODE" button repeatedly until the time display starts flashing.

3. **Adjust Hours:** Use the "ST/STP" button to increase the hour. Use the "RESET" button to cycle through 12-hour or 24-hour format if available.
4. **Adjust Minutes:** Press "MODE" again to move to minutes. Use "ST/STP" to adjust minutes.
5. **Set Date:** Continue pressing "MODE" to cycle through year, month, and day settings. Use "ST/STP" to adjust each value.
6. **Exit Setting Mode:** Press "MODE" one last time to exit the setting mode. The display will stop flashing.



Image 2.1: Angled view of the watch, highlighting the "MODE", "RESET", "ST/STP", and "LIGHT" buttons for configuration.

3. OPERATING INSTRUCTIONS

3.1 Using the Stopwatch:

1. **Enter Stopwatch Mode:** Press the "MODE" button until "ST" or "STOPWATCH" appears on the display.
2. **Start/Stop:** Press the "ST/STP" button to start the stopwatch. Press it again to stop.
3. **Reset:** While the stopwatch is stopped, press the "RESET" button to clear the time to zero.

3.2 Using the Pedometer:

The watch includes a pedometer to track your steps. Ensure the watch is worn securely on your wrist for accurate readings.

1. **Enter Pedometer Mode:** Press the "MODE" button until the pedometer icon (often a running figure) and step count are displayed.
2. **Start Tracking:** The pedometer automatically starts counting steps when movement is detected.
3. **Reset Steps:** To reset the step count, refer to the specific instructions in the full manual, as this often involves a long press of a button or a specific sequence in pedometer mode.



Image 3.1: Close-up of the watch display, showing the digital time and a small icon indicating the pedometer function.

3.3 Using the Backlight:

To illuminate the display in dark conditions, press the "LIGHT" button. The backlight will typically stay on for a few seconds.

4. MAINTENANCE AND CARE

Proper care will ensure the longevity and optimal performance of your Fastrack watch.

- **Cleaning:** Wipe the watch case and strap with a soft, damp cloth. Avoid using harsh chemicals

or abrasive materials.

- **Water Resistance:** This watch is 100M water resistant. This means it is suitable for showering, swimming, and snorkeling. *Do not press any buttons while the watch is submerged in water.*
- **Temperature:** Avoid exposing the watch to extreme temperatures (hot or cold) for extended periods.
- **Impact:** Protect the watch from strong impacts or drops.
- **Battery Replacement:** When the display dims or functions become erratic, it may be time to replace the battery. It is recommended to have this done by an authorized service center to maintain water resistance.



Image 4.1: Side view of the watch, illustrating its profile and button placement, important for understanding water resistance guidelines.

5. TROUBLESHOOTING

If you encounter any issues with your watch, refer to the following common solutions:

- **Display is blank or dim:**
 - The battery may be low. Replace the battery at an authorized service center.
 - Ensure the watch is not exposed to extreme cold, which can temporarily affect LCD performance.

- **Time is incorrect:**
 - Refer to Section 2.1 "Setting Time and Date" to reset the time.
 - If the time consistently loses accuracy, the battery may be weak or the internal module may require service.
- **Buttons are unresponsive:**
 - Ensure the watch is dry. Water or moisture can sometimes interfere with button operation.
 - If the issue persists, contact customer support.
- **Pedometer not counting steps accurately:**
 - Ensure the watch is worn snugly on your wrist. Loose fit can affect accuracy.
 - Pedometer accuracy can vary based on arm movement and stride.

6. SPECIFICATIONS

Feature	Detail
Model Name	NR68027PP03
Display Type	Digital
Movement Type	Quartz
Power Source	Battery Powered
Strap Material	Silicone
Case Material	Plastic
Crystal Material	Mineral Glass
Water Resistance Depth	100 Metres (10 ATM)
Case Diameter	51.3 Millimetres
Case Thickness	12 Millimetres
Band Width	25.65 Millimetres
Item Weight	120 Grams
Special Features	Pedometer, Stopwatch, Backlight, Alarm, Date Display



Image 6.1: Back view of the watch, showing the case back and strap attachment points.

7. WARRANTY AND SUPPORT

Your Fastrack Street Line Digital Watch NR68027PP03 comes with a manufacturer's warranty.

- **Warranty Type:** Manufacturer
- **Manufacturer:** Titan Co Ltd No, Titan Co Ltd No -03 Sipcot Industries Complex Hosur 635126
- For warranty claims or technical support, please contact Fastrack customer service or visit an authorized service center. Keep your purchase receipt as proof of purchase.

For further assistance, please refer to the official Fastrack website or contact their customer support directly.