

Medion LIFE E67005 (MD 43454)

MEDION LIFE E67005 (MD 43454) Record and Cassette Digitalizer Instruction Manual

Model: LIFE E67005 (MD 43454) | Brand: Medion

1. INTRODUCTION

Thank you for choosing the MEDION LIFE E67005 (MD 43454) Record and Cassette Digitalizer. This device allows you to enjoy your vinyl records and cassette tapes, and also convert them directly to MP3 format on a USB stick without the need for a computer. This manual provides essential information for the safe and efficient operation of your digitalizer. Please read it thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

2.1 General Safety

- Keep the device away from water, moisture, and high humidity.
- Ensure proper ventilation around the unit to prevent overheating.
- Do not expose the device to direct sunlight or extreme temperatures.
- Avoid placing heavy objects on the device.
- Do not attempt to open or repair the device yourself. Refer all servicing to qualified personnel.
- Keep out of reach of children.

2.2 Electrical Safety

- Use only the provided power adapter.
- Ensure the power outlet voltage matches the requirements specified on the device.
- Unplug the device from the power outlet during lightning storms or when unused for extended periods.
- Do not handle the power cord or plug with wet hands.

3. PACKAGE CONTENTS

Please check that all items listed below are included in your package:

- MEDION LIFE E67005 Record and Cassette Digitalizer
- Transparent Dust Cover
- Remote Control (batteries not included)
- Power Adapter (AC 100-240V ~ 50/60Hz)
- Software CD (Audacity)
- Instruction Manual
- Warranty Card



Figure 3.1: Remote Control



Figure 3.2: Audacity Software CD

4. PRODUCT OVERVIEW

4.1 Front Panel



Figure 4.1: Front View

1. **LCD Screen with Blue Backlight:** Displays current mode, track number, and other information.
2. **Control Buttons:** Play/Pause, Stop, Skip Forward/Backward, Repeat/Random, Function, Record, Track Separation/Delete.
3. **Volume Knob:** Adjusts the output volume of the built-in speakers and headphone jack.
4. **AUX-In (3.5mm):** Connect external audio devices.
5. **USB Port:** For connecting a USB stick for MP3 conversion and playback.
6. **Headphone Jack (3.5mm):** For private listening.

4.2 Top Panel (Turntable and Cassette Deck)



Figure 4.2: Top View with Turntable

1. **Turntable Platter:** Place your vinyl records here.
2. **Tonearm with Stylus:** Reads the grooves of the record.
3. **Dust Cover:** Protects the turntable from dust.
4. **Speed Selector (33/45/78 rpm):** Adjusts playback speed for different record types.
5. **Auto Stop Switch:** Enables or disables automatic stopping of the platter at the end of a record.
6. **Cassette Deck:** Insert cassette tapes for playback or conversion.

4.3 Rear Panel



Figure 4.3: Rear View

1. **Audio Output (Cinch/RCA):** Connect to external amplifiers or powered speakers.
2. **DC IN:** Power input for the provided AC adapter.

5. SETUP

5.1 Unpacking

1. Carefully remove all components from the packaging.
2. Remove any protective materials or films.
3. Ensure all listed package contents are present and undamaged.

5.2 Placement

- Place the digitalizer on a stable, level surface.
- Ensure there is adequate space around the unit for ventilation.
- Avoid placing it near heat sources or in direct sunlight.

5.3 Power Connection

1. Connect the power adapter to the DC IN port on the rear of the digitalizer.
2. Plug the power adapter into a suitable AC power outlet (100-240V ~ 50/60Hz).

6. OPERATING INSTRUCTIONS

6.1 Playing a Record

1. Open the dust cover.
2. Place a vinyl record on the turntable platter.
3. Select the appropriate speed (33, 45, or 78 rpm) using the speed selector switch.
4. If playing a 45 rpm single, place the included adapter on the spindle.

5. Unlock the tonearm clip and gently lift the tonearm.
6. Position the stylus over the desired starting groove of the record.
7. Gently lower the tonearm onto the record. Playback will begin automatically.
8. Adjust the volume using the volume knob.
9. At the end of the record, if Auto Stop is enabled, the platter will stop rotating. Lift the tonearm and return it to its rest, then secure it with the clip.

6.2 Playing a Cassette

1. Insert a cassette tape into the cassette deck.
2. Press the Play button to start playback.
3. Use the Fast Forward and Rewind buttons as needed.
4. Press the Stop button to end playback.

6.3 Direct MP3 Conversion (Encoding)

This feature allows you to convert audio from records, cassettes, or the AUX input directly to MP3 files on a USB stick. The MP3 conversion speed is 192 kbit/s.

1. Insert a USB stick into the USB port. Ensure the USB stick is formatted correctly and has sufficient free space.
2. Select the desired audio source (Record, Cassette, or AUX) for conversion.
3. Start playback of your chosen audio source (e.g., start playing a record or cassette).
4. Press the **REC** button to begin recording. The LCD screen will indicate recording status.
5. To manually separate tracks during recording, press the **TS/DELETE** button. This will create a new MP3 file for the next track.
6. Press the **REC** button again to stop recording. The recorded MP3 files will be saved to the USB stick.

6.4 Playing MP3 from USB

1. Insert a USB stick containing MP3 files into the USB port.
2. Use the **FUNCTION** button to select the USB playback mode.
3. Use the Play/Pause, Stop, and Skip buttons to control playback.

6.5 Using AUX Input

1. Connect an external audio device (e.g., smartphone, MP3 player) to the **AUX-In (3.5mm)** port using an audio cable (not included).
2. Use the **FUNCTION** button to select AUX mode.
3. Play audio from your external device. The sound will be output through the digitalizer's speakers.

6.6 Using Headphone Output

1. Connect headphones with a 3.5mm jack to the **Headphone Jack** on the front panel.
2. The sound will be routed to the headphones, and the built-in speakers will be muted.

6.7 Using Audio Output (RCA)

1. Connect an RCA audio cable (not included) from the **Audio Output (Cinch/RCA)** ports on the rear panel to the audio input of an external amplifier or powered speakers.
2. Ensure the external audio system is set to the correct input.

7. MAINTENANCE

7.1 Cleaning

- Always unplug the device before cleaning.
- Wipe the exterior surfaces with a soft, dry cloth.
- Do not use abrasive cleaners, waxes, or solvents.

7.2 Stylus Care

- Handle the stylus with extreme care.
- Clean the stylus periodically with a soft brush, brushing from back to front.
- Replace the stylus if it becomes worn or damaged to prevent damage to your records.

7.3 Dust Cover

- Keep the dust cover closed when the device is not in use to protect the turntable.
- Clean the dust cover with a soft, damp cloth.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power adapter not connected or faulty outlet.	Ensure the power adapter is securely connected and the outlet is functional.
No sound from speakers	Volume too low; headphones connected; incorrect source selected.	Increase volume; disconnect headphones; select correct input source.
Record playback speed is incorrect	Incorrect speed selected.	Adjust the speed selector to 33, 45, or 78 rpm as appropriate for the record.
MP3 conversion not working	USB stick not inserted; USB stick full or incompatible; source not playing.	Insert USB stick; check USB stick capacity and format; ensure audio source is playing.
Sound distortion	Dirty or worn stylus; dirty record/cassette; volume too high.	Clean or replace stylus; clean record/cassette; reduce volume.

9. SPECIFICATIONS

- **Brand:** MEDION
- **Model Name:** LIFE E67005 (MD 43454)
- **Power Source:** Electric, Wired (AC 100-240V ~ 50/60Hz)
- **Power Consumption:** 1.5 Watts
- **Turntable Speeds:** 33, 45, 78 RPM
- **MP3 Conversion Speed:** 192 kbit/s
- **Connectivity:** USB, AUX-In (3.5mm), Headphone Jack (3.5mm), Audio Output (RCA)
- **Special Features:** Direct MP3 conversion (encoding), Built-in speakers (2 x 1.5W RMS), Adjustable speed, Manual track separation without PC, LCD screen with blue backlight, Transparent dust cover.
- **Material:** Plastic
- **Dimensions (W x H x D):** 31.5 cm x 14 cm x 28 cm

- **Weight:** 2.32 kg

10. WARRANTY AND SUPPORT

This product comes with a **24-month warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

For technical support, service, or warranty inquiries, please refer to the contact information provided on your warranty card or visit the official Medion website for your region.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question