

AMIR WA33

AMIR Digital Alarm Clock User Manual

Model: WA33

PRODUCT OVERVIEW

The AMIR Digital Alarm Clock is a versatile LED clock designed for various settings such as bedrooms, offices, and homes. It features a large display, adjustable brightness, and multiple functions including time, date, temperature display, and alarm modes. This manual provides detailed instructions for setup, operation, and maintenance of your new alarm clock.



Figure 1: Front view of the AMIR Digital Alarm Clock.

Your browser does not support the video tag.

Video 1: An overview demonstrating the features and functions of the AMIR Digital Alarm Clock, including its large LED display, adjustable brightness, and various modes.

SETUP AND POWER SUPPLY

Your AMIR Digital Alarm Clock offers two primary power supply methods: USB power and 3 AAA batteries. Understanding these options is crucial for optimal performance.

Battery Installation

To install batteries:

1. Locate the battery compartment on the back of the clock.
2. Open the battery cover.
3. Insert 3 AAA batteries, ensuring correct polarity (+/-).
4. Close the battery cover securely.

Note: When powered by batteries, the screen will turn off after 16 seconds to enter power-saving mode. Voice control functionality is only available when using battery power.



Figure 2: Rear view of the alarm clock, highlighting the battery compartment and control buttons.



Figure 3: Illustration of the two power supply methods: AAA battery (for power saving and voice control) and USB power (for continuous display).

USB Power Connection

To power the clock via USB:

1. Connect the provided 1-meter (39.37-inch) USB power cord to the DC 5V port on the back of the clock.
2. Plug the other end of the USB cable into a USB power adapter (not included) or a compatible USB port.

Note: When using USB power, the screen will always remain on. If powered by USB alone, there is no time memory function after power off.

OPERATING INSTRUCTIONS

Setting Time and Display Modes

The clock features clock mode, date mode, temperature mode, night mode, and alarm mode. The "colon" between the hour and minute display flashes continuously.

1. Press and hold the **"MODE"** button to enter time setting.
2. Press **"UP"** or **"DOWN"** to adjust the 12/24 hour format.
3. Press **"MODE"** again, then use **"UP"** or **"DOWN"** to adjust the hour.
4. Press **"MODE"** again, then use **"UP"** or **"DOWN"** to adjust the minute.
5. Press **"MODE"** again to return to the time display.



Figure 4: Step-by-step guide for setting the time on your alarm clock.

The clock can display time, date, and temperature. You can cycle through these displays by pressing the **MODE** button briefly.



Figure 5: The clock's multi-function display showing time, date, and temperature.

Adjustable Brightness and Night Mode

The clock offers 3 levels of brightness (Bright/Medium/Low). Simply press **"UP"** or **"DOWN"** to adjust the brightness.

To set the night mode:

1. Press "**MODE**" to enter the night mode setting.
2. Press "**UP**" or "**DOWN**" to turn night mode ON/OFF (default is OFF).
3. When night mode is ON, the clock automatically dims during 18:00-6:00. You can set a custom period by long pressing "**MODE**" in night mode setting.

To turn off the display completely (e.g., while sleeping), press and hold the **SNOOZE**" button for more than 3 seconds.



Figure 6: Visual representation of the three adjustable brightness levels.

Alarm Modes and Snooze Function

The alarm clock offers three working day modes:

- Monday to Friday (1-5)
- Monday to Saturday (1-6)
- Monday to Sunday (1-7)

To set the alarm:

1. Long press the "**ALARM**" button.
2. Use the "**UP**" and "**DOWN**" buttons to adjust the hour, minute, snooze time (1-60 minutes), and working day mode.
3. Press "**ALARM**" again to confirm each setting.

When the alarm goes off, press the **SNOOZE**" button to get 1-60 minutes of extra sleep. Press any other key to cancel the alarm.

THREE ALARM MODES



1-5 MONDAY TO FRIDAY



1-6 MONDAY TO SATURDAY



1-7 EVERYDAY



Figure 7: The three available alarm modes for customized wake-up schedules.

EASY SNOOZE

SNOOZE FUNCTION ALLOWS YOU TO ASK FOR 1~60 MINUTE EXTRA SLEEP TIME.



Figure 8: The snooze function allows for adjustable extra sleep time.

Voice Control and Power Saving Mode

This feature is available **only when powered by AAA batteries**. You can activate the display by making a noise (like clapping your hands) or tapping the clock.

In power saving mode (battery powered), the LED alarm clock automatically turns off after 16 seconds of no operation. The system continues to keep normal timing and temperature, maintaining previous settings.



Figure 9: Intelligent voice control allows the LED display to be activated by sound or touch when using batteries.

MAINTENANCE

To ensure the longevity and proper functioning of your AMIR Digital Alarm Clock, please follow these maintenance guidelines:

- Clean the clock regularly with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- Keep the clock away from direct sunlight, extreme temperatures, and high humidity.
- If using batteries, replace them when the display becomes dim or unresponsive. Remove batteries if the clock will not be used for an extended period to prevent leakage.
- Ensure the USB cable is not bent or damaged, as this can affect power supply.

TROUBLESHOOTING

If you encounter any issues with your AMIR Digital Alarm Clock, please refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Clock does not light up or display is off.	<ul style="list-style-type: none">• Check if the power plug is working properly or try a different power source.• If using batteries, ensure the 3 AAA batteries are installed correctly with positive and negative terminals aligned.• If in battery power-saving mode, activate the display by clapping hands, tapping the table, or touching the clock.
Time or format resets to 24-hour.	<ul style="list-style-type: none">• This issue may occur if the clock loses power when only using USB. The time memory function requires AAA batteries. Ensure batteries are installed for time memory.• Re-set the time and 12/24H format as per the "Setting Time and Display Modes" section.
Screen is too bright at night.	<ul style="list-style-type: none">• Adjust the brightness level using the 'UP' or "DOWN" buttons.• Enable and configure the "Night Mode" to automatically dim the display during specific hours.• Press and hold the "SNOOZE" button for more than 3 seconds to turn off the display completely.
Voice control does not work.	<ul style="list-style-type: none">• Voice control is only available when the clock is powered by 3 AAA batteries, not when powered by USB.• Ensure the clock is in power-saving mode (display off) for voice control to activate it.

SPECIFICATIONS

- **Brand:** AMIR
- **Model Number:** WA33
- **Color:** Blue Case+white Digit
- **Display Type:** Digital
- **Style:** Modern
- **Special Features:** Adjustable Brightness, Large Display, Snooze, Temperature Display, Voice Control
- **Product Dimensions:** 0.7"W x 6.3"H
- **Power Source:** Battery Powered (3x AAA, not included), Corded Electric (USB)
- **Room Type:** Bedroom
- **Shape:** Rectangular
- **Indoor/Outdoor Usage:** Indoor
- **Frame Material:** Acrylonitrile Butadiene Styrene
- **Item Weight:** 5.6 ounces (0.16 Kilograms)
- **Alarm Clock:** Yes

LARGE DISPLAY

NOTE: Adapter is not included.

Not support wall mountable.



Figure 10: Dimensions of the AMIR Digital Alarm Clock.

WARRANTY AND SUPPORT

For detailed warranty information or further assistance, please refer to the official user guide provided by AMIR. A digital version of the user guide is available:

[Download User Guide \(PDF\)](#)

For any product-related inquiries or support, please contact AMIR customer service through the retailer's platform or their official website.

Documents - AMIR – WA33

no relevant documents