

Hetyue WT001

Hetyue WT001 Kids Walkie Talkies Instruction Manual

Model: WT001

INTRODUCTION

The Hetyue WT001 Kids Walkie Talkies provide a fun and secure way for children to communicate. This manual outlines the features and proper usage of your new walkie-talkies.

Key Features:

- **Secure Communication:** Connects only with other Hetyue walkie-talkies for private conversations.
- **Extended Range:** Up to 0.5 miles in urban areas and 3 miles in open conditions.
- **10 Channels:** Easy channel tuning for clear communication.
- **Adjustable Volume:** Three levels (high, medium, low) for optimal sound.
- **VOX Function:** Voice-activated transmission for hands-free operation.
- **Automatic Squelch:** Reduces interference for clear sound quality.
- **Backlit LCD:** Provides visibility in low-light conditions.
- **Built-in Flashlight:** Useful for outdoor activities and night play.
- **Key Lock Function:** Prevents accidental setting changes.
- **Ergonomic Design:** Compact and lightweight for comfortable child use.
- **Replaceable Shells:** Customize the look of your walkie-talkies.

What's in the Box:

- Walkie Talkies × 4
- Replaceable Shell × 4
- Sling × 4
- Instructions × 1

SETUP

Battery Installation:

1. Press the arrow on the belt buckle to push it upward and remove the belt buckle.
2. Follow the arrow to slide the battery cover downward and remove it.
3. Insert 3 AAA batteries (not included) into each walkie-talkie, ensuring correct positive (+) and negative (-) polarity.
4. Replace the battery cover and belt buckle.



Figure 1: Step-by-step guide for battery installation and shell replacement.

Shell Replacement:

1. From the position below the machine, key up the decorative parts.
2. Remove the appearance of decorative parts.
3. Install the color shell you like.

Attaching the Sling:

Attach the provided sling to the designated loop on the walkie-talkie for easy carrying and to prevent loss.

OPERATING INSTRUCTIONS

Power On/Off:

- To power on, press and hold the **MENU/Power** button until the LCD screen illuminates.
- To power off, press and hold the **MENU/Power** button until the LCD screen turns off.

Channel Selection:

- Press the **MENU** button once. The channel number on the LCD will flash.
- Use the **UP** or **DOWN** buttons to select your desired channel (1-10).
- Press **MENU** again to confirm the channel, or wait a few seconds for it to set automatically.

Push-to-Talk (PTT):

To transmit your voice, press and hold the **TALK** button located on the side of the walkie-talkie. Speak clearly into the microphone. Release the button to listen.

Call Feature:

Press the **Music Note** button to send a call tone to other walkie-talkies on the same channel. There are 10 different call tones available.

Volume Adjustment:

Use the **UP** or **DOWN** buttons to adjust the listening volume to one of three levels (high, medium, low).

Key Lock Function:

To prevent accidental changes to settings, press and hold the **Lamp/Lock** button until a key lock icon appears on the LCD. Repeat the action to unlock.

Flashlight Function:

Press the **Lamp/Lock** button briefly to turn the built-in flashlight on or off.

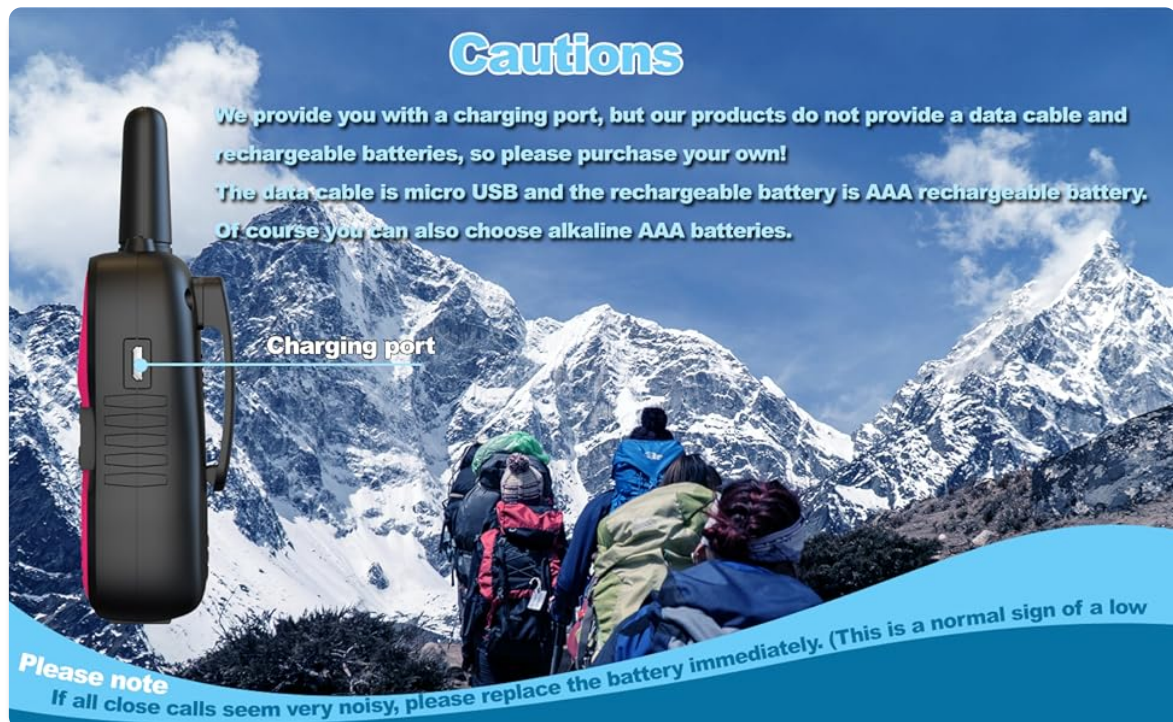


Figure 2: The integrated flashlight provides illumination for nighttime use.

VOX (Voice Activated Transmission):

The VOX function allows for hands-free communication. When activated, the walkie-talkie will transmit automatically when it detects your voice. Refer to the full user guide for detailed activation steps.

Weather Alert (NOAA):

The walkie-talkies include a NOAA weather alert function to keep you informed of severe weather conditions. Consult the full user guide for activation and usage details.

Your browser does not support the video tag.

Video 1: Demonstration of Hetyue Kids Walkie Talkies features, including channel selection, call tones, and weather alert function.

MAINTENANCE

Battery Care:

- Each walkie-talkie requires 3 AAA batteries.
- If using rechargeable batteries (not included), ensure they are AAA rechargeable type and use a micro USB data cable (not included) for charging.
- Remove batteries if the device will not be used for an extended period.
- Replace batteries immediately if calls become noisy, indicating low power.



Figure 3: Charging port for rechargeable batteries (batteries and cable not included).

Cleaning and Storage:

- Wipe the walkie-talkies with a soft, damp cloth. Do not use harsh chemicals.
- Store in a cool, dry place away from direct sunlight and extreme temperatures.
- The device is not water-resistant. Avoid exposure to water.

TROUBLESHOOTING

No Power:

- Ensure batteries are correctly installed with proper polarity.
- Replace with fresh AAA batteries or fully charged rechargeable batteries.

Poor Sound Quality/Interference:

- Check that all walkie-talkies are on the same channel.
- Adjust the volume level.

- Move to an open area to improve signal strength.
- Ensure batteries are not low.

Limited Range:

- Range is affected by terrain and obstacles. Performance is best in open areas.
- Ensure batteries are fully charged.

SPECIFICATIONS

Feature	Detail
Item Weight	2.1 ounces
Product Dimensions	1.2 x 1.77 x 4.72 inches
Item Model Number	WT001
Batteries Required	3 AAA batteries per unit
Number of Channels	10
Talking Range Maximum	3 Miles (open conditions)
Voltage	4.5 Volts
Water Resistance Level	Not Water Resistant

WARRANTY

This product comes with a 1-Year Manufacturer Warranty.

Please retain your proof of purchase for warranty claims.

SUPPORT

For further assistance, troubleshooting, or to inquire about replacement parts, please refer to the contact information provided with your product packaging or visit the official Hetyue website.