

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Uncanny Brands](#) /
- › [Uncanny Brands Pokémon Poké Ball Halo Toaster Instruction Manual](#)

Uncanny Brands TSTE-POK-PK1

Uncanny Brands Pokémon Poké Ball Halo Toaster

Model: TSTE-POK-PK1

INTRODUCTION

Thank you for purchasing the Uncanny Brands Pokémon Poké Ball Halo Toaster. This appliance is designed to toast bread and bagels, imprinting a unique Poké Ball design onto your toast. Please read this manual thoroughly before use to ensure safe and efficient operation.

IMPORTANT SAFETY INFORMATION

- **Electrical Safety:** Do not immerse the toaster, cord, or plug in water or other liquids. Ensure the voltage rating of the appliance matches your local power supply.
- **Supervision:** Close supervision is necessary when any appliance is used by or near children.
- **Hot Surfaces:** Surfaces of the toaster may become hot during use. Do not touch hot surfaces directly. Use handles or knobs.
- **Unplug When Not in Use:** Always unplug the toaster from the outlet when not in use and before cleaning. Allow it to cool before putting on or taking off parts, and before cleaning the appliance.
- **Bread Size:** Do not insert oversized foods, metal foil packages, or utensils into the toaster as this may create a risk of fire or electric shock.
- **Fire Hazard:** A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- **Crumb Tray:** The crumb tray must be in place during operation. Clean the crumb tray regularly. Accumulated crumbs can catch fire.
- **Damaged Cord/Plug:** Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- **Outdoor Use:** Do not use outdoors. This appliance is for household use only.

PRODUCT OVERVIEW

The Poké Ball Halo Toaster features a distinctive design and user-friendly controls.

Components:

- **Toasting Slots:** Two wide slots designed to accommodate various bread types, including bagels and thick slices.
- **Lever:** Used to lower and raise the bread into the toasting chamber.
- **Shade Selector Dial:** Adjusts the browning level from light to dark (settings 1-6).
- **Cancel Button:** Stops the toasting cycle at any time.
- **Bagel Button:** Activates a special setting for toasting bagels, typically toasting one side more than the other.
- **Removable Crumb Tray:** Located at the bottom for easy cleaning of crumbs.

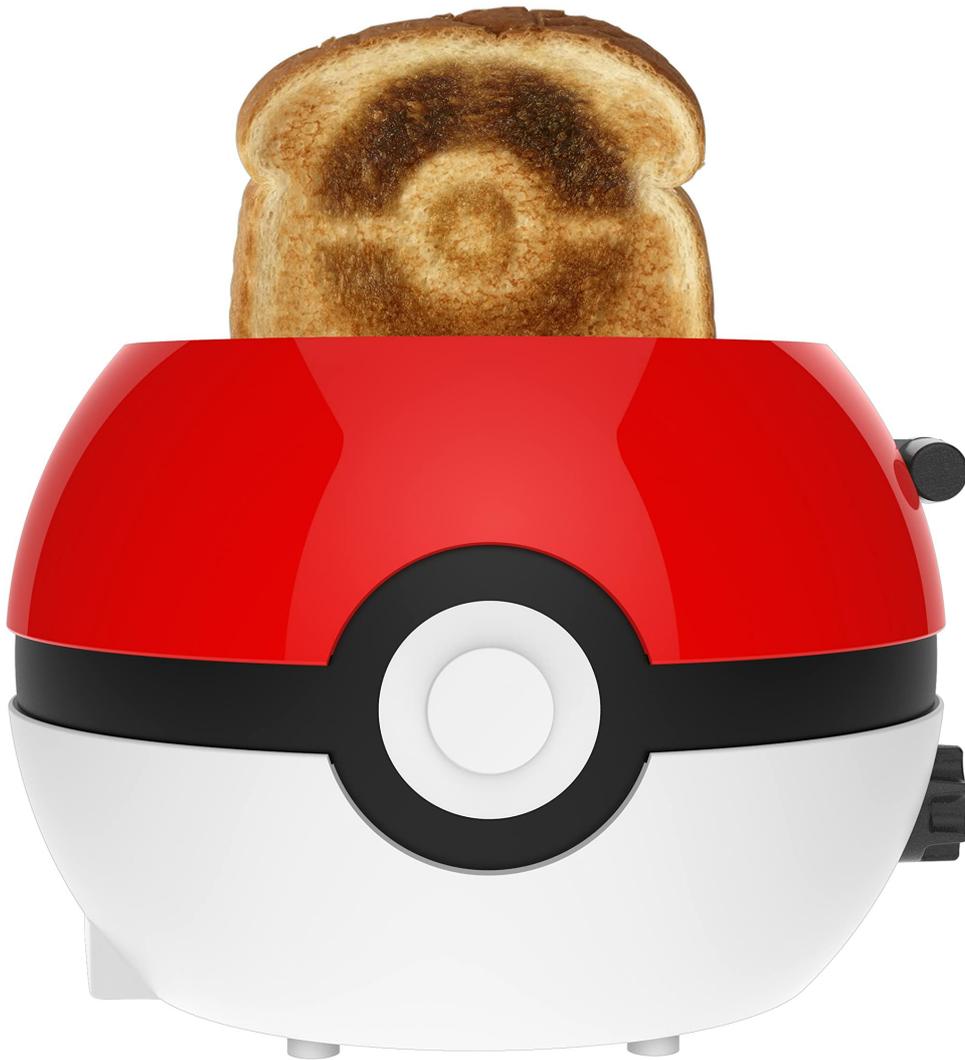


Figure 1: Front view of the Poké Ball Halo Toaster.

SETUP

1. **Unpacking:** Carefully remove the toaster from its packaging. Retain packaging for future storage or transport.
2. **Placement:** Place the toaster on a stable, heat-resistant surface, away from flammable materials like curtains. Ensure adequate ventilation around the appliance.

3. **First Use (Burn-off):** Before toasting food for the first time, operate the toaster without bread on the highest setting (6) for a few minutes. This will burn off any manufacturing residues and eliminate odors. A slight smoke or odor is normal during this initial use. Ensure the area is well-ventilated.
4. **Power Connection:** Plug the power cord into a standard 120V AC electrical outlet.

OPERATING INSTRUCTIONS

1. **Insert Bread:** Place one or two slices of bread, bagels, or English muffins into the toasting slots.
2. **Select Browning Level:** Turn the Shade Selector Dial to your desired browning level. Setting 1 is for light toast, and setting 6 is for dark toast.
3. **Lower Lever:** Press the lever down until it locks into place. The toasting cycle will begin.
4. **Bagel Function (Optional):** If toasting bagels, press the Bagel button after lowering the lever. This function toasts the cut side of the bagel while warming the outer side.
5. **Cancel Function:** To stop the toasting cycle at any time, press the Cancel button. The bread will automatically pop up.
6. **Remove Toast:** Once the toasting cycle is complete, the toast will automatically pop up. Carefully remove the toast.



Figure 2: Toast featuring the iconic Poké Ball design.

Official Product Video

Video 1: An overview of the Uncanny Brands Pokémon Poké Ball Halo Toaster, demonstrating its design and functionality.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your toaster.

1. **Unplug and Cool:** Always unplug the toaster and allow it to cool completely before cleaning.
2. **Clean Crumb Tray:** Pull out the removable crumb tray from the bottom of the toaster. Discard crumbs. Wipe the tray with a damp cloth and dry thoroughly before reinserting.
3. **Exterior Cleaning:** Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the finish.
4. **Interior Cleaning:** Do not attempt to clean the inside of the toaster with any tools or objects. If food becomes lodged inside, unplug the toaster and carefully remove it once the toaster has cooled.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure the toaster is securely plugged in. Check your circuit breaker. Try a different outlet.
Toast is too light or too dark.	Shade selector dial set incorrectly.	Adjust the Shade Selector Dial to a higher setting for darker toast or a lower setting for lighter toast.
Bread is stuck in the toaster.	Oversized bread; mechanical issue.	Unplug the toaster and allow it to cool. Carefully remove the bread using non-metallic tongs. Do not force the lever.
Smoke coming from toaster.	Crumbs accumulated; food lodged; initial burn-off.	Press the Cancel button and unplug immediately. Check and clean the crumb tray. Remove any lodged food. If it's the first use, this is normal.

SPECIFICATIONS

- **Brand:** Uncanny Brands
- **Model:** TSTE-POK-PK1
- **Color:** Pokémon (Red/White/Black)
- **Material:** Plastic
- **Product Dimensions:** 11"D x 11"W x 7.5"H
- **Item Weight:** 2.58 Pounds
- **Wattage:** 600 watts
- **Voltage:** 120 Volts
- **Number of Slices:** 2
- **Number of Settings:** 4 (Browning levels, though dial shows 6)

- **Special Features:** Cancel Function, Variable Browning Control, Bagel Function

WARRANTY AND SUPPORT

This product is covered by a manufacturer's warranty. For specific warranty details, please refer to the warranty card included in your product packaging or contact Uncanny Brands customer support directly. Keep your purchase receipt as proof of purchase.

For customer support, please visit the [Uncanny Brands Store](#) or contact their support channels as listed on their official website.