

T-WOLF X9

T-WOLF X9 Bluetooth Mouse User Manual

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your T-WOLF X9 Bluetooth Mouse. Please read this manual carefully before using the product to ensure optimal performance and longevity.

PACKAGE CONTENTS

- 1 x T-WOLF X9 Bluetooth Mouse
- 1 x AA Battery
- 1 x User Manual (this document)

PRODUCT OVERVIEW



Image 1: Top view of the T-WOLF X9 Bluetooth Mouse, showing the left and right click buttons, scroll wheel, and DPI switch button. The T-WOLF logo and Bluetooth icon are visible.

The T-WOLF X9 is a portable Bluetooth mouse designed for convenience and performance. It features a sleek design, Bluetooth 5.2 connectivity, and a 10-meter operating range. The mouse includes four buttons: left-click, right-click, scroll wheel (which also functions as a button), and a dedicated DPI switch button for adjusting cursor sensitivity.



Image 2: Packaging of the T-WOLF X9 Bluetooth Mouse, highlighting key features such as 2.4GHz (though product is Bluetooth, this might be a generic packaging element), symmetry, and "Best Key".



Image 3: Side view of the T-WOLF X9 Bluetooth Mouse, illustrating its ergonomic profile and non-slip roller design.

SETUP

1. Battery Installation

1. Locate the battery compartment on the underside of the mouse.
2. Open the battery compartment cover.
3. Insert the provided AA battery, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

2. Bluetooth Pairing

1. Ensure the mouse is powered on. There may be a power switch on the underside.
2. On your computer or device, navigate to the Bluetooth settings.
3. Enable Bluetooth and search for new devices.
4. The mouse should appear as "T-WOLF X9" or similar. Select it to initiate pairing.
5. Once paired, the mouse is ready for use.

OPERATING INSTRUCTIONS

1. DPI Switching

The T-WOLF X9 mouse features 3-gear DPI switching. Press the dedicated DPI button (located behind the scroll wheel) to cycle through the available DPI settings. Each press will change the cursor sensitivity, allowing you to adjust it to your preference for different tasks.

2. Button Functions

- **Left-Click Button:** Primary selection and interaction.
- **Right-Click Button:** Opens contextual menus.
- **Scroll Wheel:** Scrolls content vertically. Can also be pressed for middle-click functionality.
- **DPI Switch Button:** Adjusts cursor sensitivity (DPI).

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the mouse. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive materials.

- **Battery Replacement:** Replace the AA battery when the mouse performance degrades or it stops responding.
- **Storage:** Store the mouse in a cool, dry place when not in use for extended periods.

TROUBLESHOOTING

Problem	Solution
Mouse not responding	<p>Ensure the battery is correctly installed and has sufficient charge.</p> <p>Check if the mouse is powered on.</p> <p>Re-pair the mouse with your device via Bluetooth settings.</p> <p>Try the mouse with another device to rule out device-specific issues.</p>
Cursor movement is erratic or slow	<p>Clean the optical sensor on the underside of the mouse.</p> <p>Ensure you are using the mouse on a suitable surface (non-reflective, opaque).</p> <p>Adjust the DPI setting using the DPI switch button.</p> <p>Check for interference from other wireless devices.</p>
Cannot pair the mouse	<p>Ensure Bluetooth is enabled on your device.</p> <p>Make sure the mouse is in pairing mode (if applicable, check for a blinking light).</p> <p>Remove any previous pairings of the mouse from your device's Bluetooth list and try again.</p> <p>Restart your computer/device.</p>

SPECIFICATIONS

Feature	Detail
Model	X9
Connectivity	Bluetooth 5.2
Operating Range	Up to 10 meters
Buttons	4 (Left, Right, Scroll Wheel/Middle, DPI Switch)
DPI Settings	3-Gear Switching
Power Source	1 x AA Battery
Hand Orientation	Ambidextrous
Compatible Devices	Laptop, Personal Computer
Operating Systems	Linux, Windows 7, Windows XP (and newer OS with Bluetooth support)
Dimensions	20 x 13 x 7.5 cm (Package)
Weight	150 g (Package)

WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty. For specific warranty details, please refer to the documentation provided at the time of purchase or contact your retailer. For technical support or further assistance, please reach out to the seller or manufacturer's customer service.