

[Manuals.plus](#) /

› [ALLJOY](#) /

› ALLJOY Back Chair Massager Pad User Manual - Model AJMC

ALLJOY AJMC

ALLJOY Back Chair Massager Pad User Manual

Model: AJMC

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this product. Failure to follow these instructions may result in injury or damage.

- **Electrical Safety:** Always unplug the massager from the electrical outlet immediately after use and before cleaning. Do not use while bathing or showering. Do not place or store the massager where it can fall or be pulled into a tub or sink.
- **Medical Conditions:** Consult your doctor before using this massager if you have any medical conditions, including but not limited to: pregnancy, pacemaker, diabetes, heart disease, malignant tumor, or if you are recovering from surgery.
- **Heat Function:** The heat function provides gentle warmth. Prolonged use of heat may cause skin irritation. Do not use heat on sensitive skin areas or if you have poor circulation.
- **Children and Impaired Individuals:** This appliance should not be used by children or individuals with reduced physical, sensory, or mental capabilities without supervision.
- **Proper Use:** Do not stand on or place heavy objects on the massager. Do not use the massager for more than 15 minutes at a time. Allow the unit to cool down before prolonged use.
- **Damage:** Do not operate any appliance with a damaged cord or plug. If the massager is not working properly, has been dropped or damaged, return it to a service center for examination and repair.

PRODUCT OVERVIEW

The ALLJOY Back Chair Massager Pad (Model AJMC) is designed to provide a comprehensive massage experience for your neck, shoulders, and back. It features Shiatsu kneading, rolling, vibration, and heat functions.

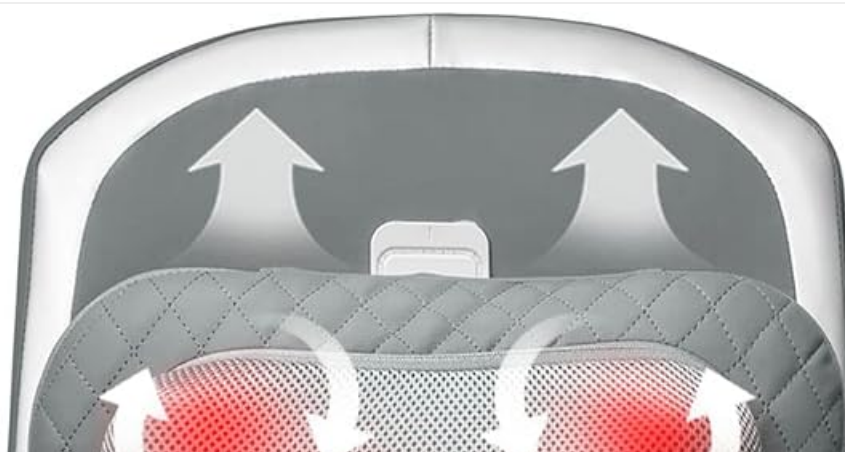




Figure 1: Overview of the ALLJOY Back Chair Massager Pad, showing the neck and back massage nodes and seat vibration area.

Key Features:

- **Full Body Massage:** Combines 2D/3D Finger Pressure Shiatsu, Rolling, Vibration, and Heat.
- **Adjustable Neck Massage:** Shiatsu rotation nodes for neck and shoulder, with adjustable height.
- **2D/3D Back Massager:** Four deep kneading nodes with up/down motion, offering Full, Upper, or Lower back massage zones. Features inward/outward motion for 2D or 3D shiatsu.
- **Vibration Massage Seat:** Three adjustable vibration modes for the seat.
- **Heat Therapy:** Optional gentle warmth for neck, shoulder, and back muscles.
- **Detachable Flap:** Allows adjustment of massage intensity for the back.
- **Remote Control:** Easy access to all functions.

SETUP INSTRUCTIONS

1. **Unpack:** Carefully remove the massager from its packaging.
2. **Positioning:** Place the massager on a suitable chair, sofa, or office chair. Ensure the massager is securely positioned and will not slip during use. The backrest of the massager features a Velcro adjustable strap to secure it to most chairs.
3. **Power Connection:** Connect the power adapter to the massager's power input port. Plug the adapter into a standard electrical outlet.
4. **Remote Control:** Ensure the remote control is connected to the massager.

All-round Massage



Figure 2: The massager positioned on a sofa, showing the various massage zones: Neck Shiatsu, Upper Back Shiatsu, Full Back Shiatsu, Lower Back Shiatsu, and Seat Vibration.

OPERATING INSTRUCTIONS

Use the wired remote control to operate the massager. The remote allows you to customize your massage experience.

Remote Control

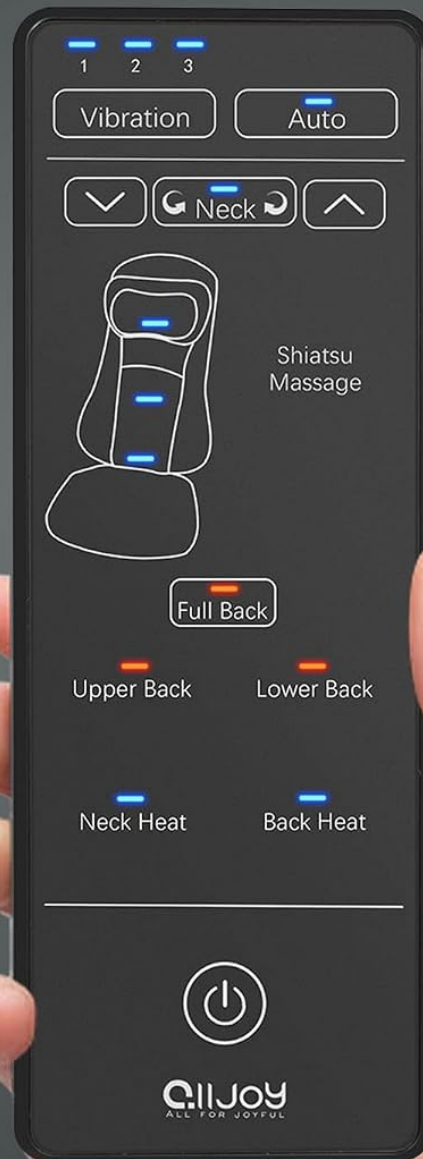


Figure 3: The remote control for the massager, detailing buttons for various functions including vibration, neck massage adjustment, back shiatsu zones, and heat.

1. **Power On/Off:** Press the **Power button** (located at the bottom of the remote control) to turn the massager on or off.
2. **Neck Massage:**
 - Press the **Neck Up/Down arrows** to adjust the height of the neck massage nodes to your preference.
 - The neck massage nodes provide deep kneading shiatsu.

Electric Adjustment Neck Massage

Suitable for Men and Women of Different Heights



Figure 4: Illustration of the electric adjustment for neck massage height, accommodating users of various statures.

3. Back Shiatsu Massage:

- Press **Full Back**, **Upper Back**, or **Lower Back** to select the desired massage zone.
- The massage nodes move up and down the selected zone.
- The massager offers 2D/3D shiatsu by moving nodes inward and outward.
- To adjust intensity, use the **detachable flap** located on the backrest. Removing the flap increases intensity.

Innovative 2D/3D Neck and Full Back

Finger Pressure Shiatsu Massage



Positive Massage



Reverse Kneading



Figure 5: Depiction of the innovative 2D/3D finger pressure shiatsu massage, illustrating both positive massage and reverse kneading actions.

4. Vibration Massage (Seat):

- Press the **Vibration button** to cycle through three adjustable vibration modes (1, 2, 3) for the seat cushion.
- Press again to turn off vibration.

Relieve Thigh and Hip Muscle

Adjustable 3 Intensity and 3
Modes Setting Vibration Massage



Figure 6: A user experiencing the seat vibration massage, designed to relieve thigh and hip muscle tension.

5. Heat Function:

- Press **Neck Heat** to activate gentle warmth for the neck area.
- Press **Back Heat** to activate gentle warmth for the back area.
- Press the respective button again to turn off the heat function.
- *Note: The heating function cannot be used alone; a massage function must be active. The seat cushion does not have a heating function.*

Neck and Back Heat Therapy

Gentle Warmth Which Could Help You Relax More

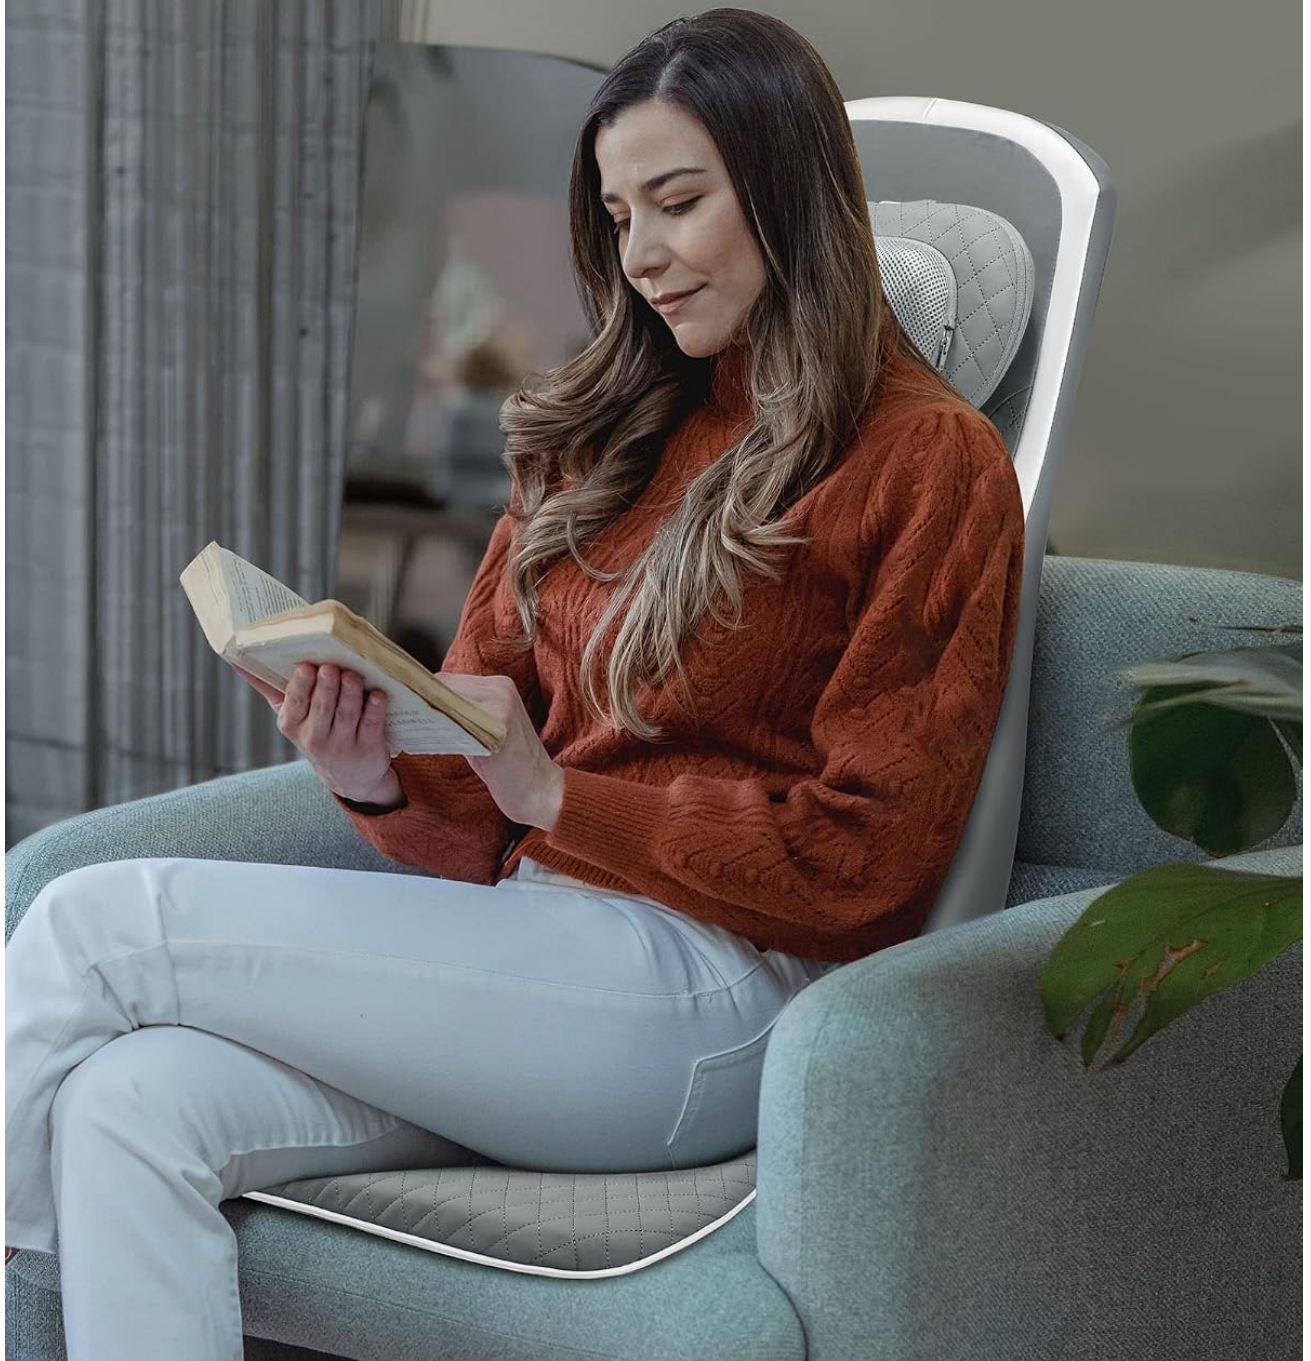


Figure 7: A user enjoying the neck and back heat therapy feature of the massager, designed to provide gentle warmth for relaxation.

6. **Auto Mode:** Press the **Auto button** for a pre-programmed massage sequence.
7. **Automatic Shut-off:** The massager is equipped with an automatic shut-off feature after 15 minutes of continuous use to prevent overheating and ensure safety.

MAINTENANCE AND STORAGE

Cleaning:

- Always unplug the massager before cleaning.
- Wipe the surface of the massager with a soft, slightly damp cloth. Do not use abrasive cleaners, brushes, gasoline, kerosene, glass or furniture polish, or paint thinner.
- Do not immerse the massager in water or any other liquid.
- Allow the massager to dry completely before storing or using again.

Storage:

- Store the massager in its original box or a safe, dry, cool place.
- Avoid contact with sharp edges or pointed objects that might cut or puncture the fabric surface.
- Do not wrap the power cord around the unit.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Massager does not turn on.	Power cord not properly connected. Unit overheated.	Ensure power cord is securely plugged into the massager and outlet. Allow the unit to cool down for 30 minutes before attempting to use again.
Heat function is not working or is too weak.	Heat function requires a massage mode to be active. Heat is designed to be gentle.	Ensure a massage function (neck or back shiatsu) is active. The heat is intended to be subtle and not as intense as a heating pad.
Massage is too intense.	No intensity flap in place.	Ensure the detachable flap is in place over the back massage nodes to reduce intensity. You can also place a towel between your back and the massager.
Neck massage nodes are not reaching the correct area.	Neck massage height needs adjustment.	Use the Neck Up/Down arrows on the remote control to adjust the height of the neck massage nodes.

SPECIFICATIONS

Feature	Detail
Model Number	AJMC
Product Dimensions	33"L x 20"W x 8"H
Item Weight	Approximately 18.9 Pounds
Power Source	Corded Electric
Special Features	Heat, Shiatsu, Vibration, Adjustable Neck Massage
Manufacturer	ALLJOY

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation included with your purchase or contact ALLJOY customer service. Keep your purchase receipt for warranty claims.

Contact Information: Please visit the official ALLJOY website or refer to your product packaging for the most current customer service contact details.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B3QXG378>

More documents and user manuals: <https://manuals.plus/>