

Anloti GB005WJSA

Anloti GB005WJSA Universal Replacement Remote Control User Manual

For Sharp AQUOS Smart TVs

1. INTRODUCTION

This manual provides instructions for the Anloti GB005WJSA Universal Replacement Remote Control. This remote is designed to be compatible with various Sharp AQUOS Smart TV, HDTV, 3D LCD, and LED models. It offers a direct replacement solution, replicating the functions of your original remote without requiring complex setup or programming.

2. SETUP

2.1 Battery Installation

To begin using your remote control, you must install two AAA batteries (not included). Follow these steps:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Image: Front and side view of the Anloti GB005WJSA remote control, showing its overall design and button layout. The battery compartment is located on the back.

2.2 Initial Use

No programming or pairing is required for this universal replacement remote control. Once batteries are installed, it is ready for immediate use with compatible Sharp AQUOS Smart TVs. Simply point the remote control towards your television and press the desired function button.

3. OPERATING INSTRUCTIONS

The Anloti GB005WJSA remote control provides comprehensive functionality for your Sharp AQUOS Smart TV. Below is a general overview of the button functions:

- **Power:** Turns the TV on or off.
- **Source Selection (TV, STB, DVD-VCR, AUDIO):** Switches between different input sources.
- **Number Buttons (0-9, ENT):** For direct channel input or numerical selections.
- **Volume (+/-):** Adjusts the audio volume.
- **Channel (+/-):** Changes TV channels.
- **Mute:** Silences the TV audio.
- **Input:** Cycles through available input sources.
- **Navigation Pad (Up, Down, Left, Right, Enter):** Used for menu navigation and selection.
- **Menu:** Accesses the TV's main menu.
- **Exit:** Exits the current menu or screen.
- **Return:** Returns to the previous screen or menu.
- **Netflix, FAV APP:** Direct access buttons for streaming services or favorite applications.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward, Skip):** Controls media playback.
- **Option, Sleep, Audio, Freeze, CC (Closed Caption), AV MODE, VIEW MODE, FLASHBACK:** Various special functions depending on your TV model.



Image: A close-up view of the Anloti GB005WJSA remote control, highlighting the various buttons and their labels for easy identification.

For optimal performance, ensure a clear line of sight between the remote control and the TV's infrared receiver. The remote utilizes advanced infrared technology for quick response and stable signal transmission.



Image: A person using the Anloti GB005WJSA remote control in a living room, demonstrating its long-distance control capability with signal waves visually connecting the remote to the television.

4. MAINTENANCE

4.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these may damage the surface or internal components.

4.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or it ceases to function. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

4.3 Storage

Store the remote control in a dry place, away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, it is advisable to remove the batteries to prevent leakage.

5. TROUBLESHOOTING

If you encounter issues with your Anloti GB005WJSA remote control, refer to the following common solutions:

- **Remote not responding:**
 - Ensure batteries are correctly installed and not depleted. Replace with new batteries if necessary.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Verify that the TV is powered on.
- **Limited functionality or certain buttons not working:**
 - Confirm that your TV model is listed as compatible with the GB005WJSA remote.
 - Some advanced functions may be specific to the original TV remote or require TV settings adjustments.
- **Intermittent operation:**
 - This often indicates low battery power. Replace the batteries.
 - Ensure you are within the effective operating range (typically up to 10 meters).

6. SPECIFICATIONS

Feature	Detail
Model Number	GB005WJSA
Brand	Anloti
Compatible Devices	Sharp AQUOS Smart TV, HDTV, 3D LCD, LED (including models like LC60LE640U, LC70C6400U, LC70LE640U, LC80LE633U, etc.)
Dimensions	2.36 x 1.97 x 0.79 inches
Item Weight	3.2 ounces
Power Source	2 x AAA Batteries (not included)
Special Feature	Universal, Infrared Technology
Color	Black

7. WARRANTY AND SUPPORT

7.1 Warranty Information

This Anloti GB005WJSA Universal Replacement Remote Control comes with a **one-year warranty** from the date of purchase. This warranty covers manufacturing defects and ensures stable performance under normal use conditions.

7.2 Customer Support

If you have any questions, require assistance, or experience issues with your remote control that are not resolved by the troubleshooting section, please contact the seller or Anloti customer support. Provide your purchase details and

the model number (GB005WJSA) for efficient service.



© 2023 Anloti. All rights reserved.