

ALLIMITY F3220AFR

ALLIMITY Voice Remote Control User Manual

Models: F3220AFR, F4020AFR, F4320AFR

INTRODUCTION

This manual provides comprehensive instructions for the ALLIMITY Voice Remote Control, designed for seamless operation with Ferguson Smart Fire TV models F3220AFR, F4020AFR, and F4320AFR. It covers setup, daily operation, maintenance, and troubleshooting to ensure optimal performance of your remote control.

SETUP

1. Battery Installation

The ALLIMITY Voice Remote Control requires two (2) AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

2. Pairing the Remote Control

To pair your new ALLIMITY Voice Remote Control with your Ferguson Smart Fire TV, follow these steps:

1. Ensure your Ferguson Smart Fire TV is powered on and within range of the remote.
2. Press and hold the **Home** button





Image: The ALLIMITY Voice Remote Control, showing its full layout including the Home button. on your new remote for approximately 10 seconds.

3. The remote's LED indicator will flash, indicating it is in pairing mode.
4. On your TV screen, a message should appear confirming that the remote is pairing. Once paired, the LED will stop flashing.
5. If pairing is unsuccessful, try moving closer to the TV or replacing the batteries, then repeat the process.

OPERATING THE REMOTE CONTROL

The ALLIMITY Voice Remote Control features a variety of buttons for navigating your Ferguson Smart Fire TV. Below is a guide to its primary functions:

- **Power Button** (⏻): Turns the TV on or off.
- **Voice Button** (🎤): Press and hold to activate voice commands for searching content, launching apps, or controlling playback. Release the button when you finish speaking.



Image: The ALLIMITY Voice Remote Control, highlighting the microphone button for voice commands.

- **Navigation Ring and Select Button:** Use the ring to navigate menus and content. Press the center button to select an item.
- **Back Button** (⏪): Returns to the previous screen or menu.
- **Home Button** (🏠): Returns to the Fire TV home screen.
- **Menu Button** (☰): Accesses contextual options or menus.
- **Playback Controls** (⏮, ⏸, ⏭): Rewind, Play/Pause, and Fast Forward buttons for media playback.
- **Volume Buttons** (🔊): Adjusts volume up or down, and mutes/unmutes audio.
- **Number Pad (0-9):** For direct channel input or other numerical functions.
- **SUBT (Subtitle) Button:** Toggles subtitles on or off.
- **TXT (Text) Button:** Accesses text-based services or teletext.
- **App Shortcut Buttons:** Dedicated buttons for quick access to Prime Video, Netflix, Live TV, and other

applications.

MAINTENANCE

Cleaning the Remote

To maintain the remote's appearance and functionality, clean it regularly:

- Use a soft, dry cloth to wipe the surface of the remote.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's finish or internal components.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

TROUBLESHOOTING

If you encounter issues with your ALLIMITY Voice Remote Control, refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|------------------------------------|---|--|
| Remote not responding | Low or dead batteries; Remote not paired; Obstruction between remote and TV. | Replace batteries; Re-pair the remote (see Setup section); Remove any obstructions. |
| Voice control not working | Microphone blocked; Remote not properly paired for voice; Internet connection issues. | Ensure microphone is clear; Re-pair the remote; Check TV's internet connection. |
| Buttons are sticky or unresponsive | Dirt or debris under buttons; Internal damage. | Clean the remote (see Maintenance section); If problem persists, consider replacement. |
| Remote drains batteries quickly | Faulty batteries; Remote constantly transmitting. | Use high-quality alkaline batteries; Ensure no buttons are stuck down. |

SPECIFICATIONS

- **Brand:** ALLIMITY
- **Model Number:** F3220AFR (Compatible with F4020AFR, F4320AFR)
- **Connectivity:** Wireless (Bluetooth for voice and advanced functions)
- **Power Source:** 2 x AAA Batteries (not included)
- **Maximum Range:** Approximately 10 meters (33 feet)
- **Supported Devices:** Up to 10 (via pairing with compatible Fire TV devices)

WARRANTY AND SUPPORT

For specific warranty information and customer support regarding your ALLIMITY Voice Remote Control, please

refer to the documentation provided at the time of purchase or contact the seller directly. Keep your proof of purchase for any warranty claims.

If you require further assistance beyond the scope of this manual, please reach out to the ALLIMITY customer service or the retailer from whom you purchased the product.

