

[Manuals.plus](#) /

› [Pyle](#) /

› Pyle 21.5 Inch 1080p LED RV Television - Slim Flat Screen Monitor FHD Small TV w/HDMI, RCA, Multimedia Disk/DVD Combo, 12/24 Volt Car Adapter, Wall Mount, Works w/Mac PC, Includes Remote Control 22 Inch

Pyle PLTLD22

Pyle 21.5 Inch 1080p LED RV Television User Manual

Model: PLTLD22

PRODUCT OVERVIEW

The Pyle 21.5 Inch 1080p LED RV Television is a versatile display solution designed for recreational vehicles and other mobile applications. It features a Full HD 1080p widescreen display, a built-in DVD player, and multiple input/output interfaces for comprehensive connectivity. Its compact design and 12/24 Volt compatibility make it ideal for on-the-go entertainment and productivity.



Figure 1: Pyle 21.5 Inch LED RV Television, showcasing the main unit, remote control, and power adapter.

WHAT'S IN THE BOX

- 21.5" ELED RV Digital TV
- Full Function Remote Control
- (2) AAA Batteries for Remote Control
- Removable Base Stand
- Power Adapter (100/240V, 50/60Hz)
- 12/24 Volt Car Adapter (for DC power)
- Various cables (HDMI, RCA, etc., as needed for connectivity)



21.5" ELED RV DIGITAL TV
HD Flat Screen TV
with Multimedia Disc Combo

Figure 2: Illustration of the product and its included accessories, such as the TV unit, remote control, power cables, and stand components.

SETUP GUIDE

1. Power Connection

The Pyle RV Television supports both AC and DC power inputs, making it suitable for various environments.

1. **AC Power (Household Use):** Connect the provided AC power adapter to the TV's power input and then to a standard 100-240V, 50/60Hz wall outlet.
2. **DC Power (RV/Vehicle Use):** For mobile applications, use the included 12/24 Volt car adapter. Plug the adapter into your vehicle's DC power outlet (e.g., cigarette lighter socket) and connect the other end to the TV's DC power input.



Figure 3: The television unit with its power adapter, illustrating the connection point for both AC and DC power sources.

2. Stand Installation / Wall Mounting

1. **Using the Base Stand:** Attach the removable base stand to the bottom of the television using the provided screws. Ensure it is securely fastened for stable placement on a flat surface.
2. **Wall Mounting:** The TV features universal VESA mounting compatibility (100mm x 100mm). Remove the base stand if attached. Use a compatible VESA wall mount (sold separately) and appropriate hardware to secure the TV to a wall. Ensure the wall can support the TV's weight (approximately 10.06 lbs).



Figure 4: A person demonstrating the wall mounting process for the Pyle RV Television, highlighting its VESA compatibility.

3. Connecting External Devices

The TV offers a variety of input and output ports for connecting external devices.

1. **HDMI:** Connect HDMI-enabled devices (e.g., gaming consoles, streaming sticks) to the HDMI input for high-definition audio and video.
2. **CVBS (Composite Video Broadcast Signal) / RCA (L/R) Audio:** Use these inputs for older devices with composite video and stereo audio outputs.
3. **VGA/PC & PC Audio:** Connect your computer (Mac or PC) to the VGA input for video and the PC Audio input for sound, allowing the TV to function as a monitor.
4. **RF (Antenna):** Connect an external antenna to this input to receive over-the-air broadcast channels.
5. **Coax (Digital) Audio Out:** For connecting to a digital audio receiver or soundbar.
6. **Headphones Out:** For private listening.
7. **Line Out (Analogue) Audio:** For connecting to external analog audio systems.

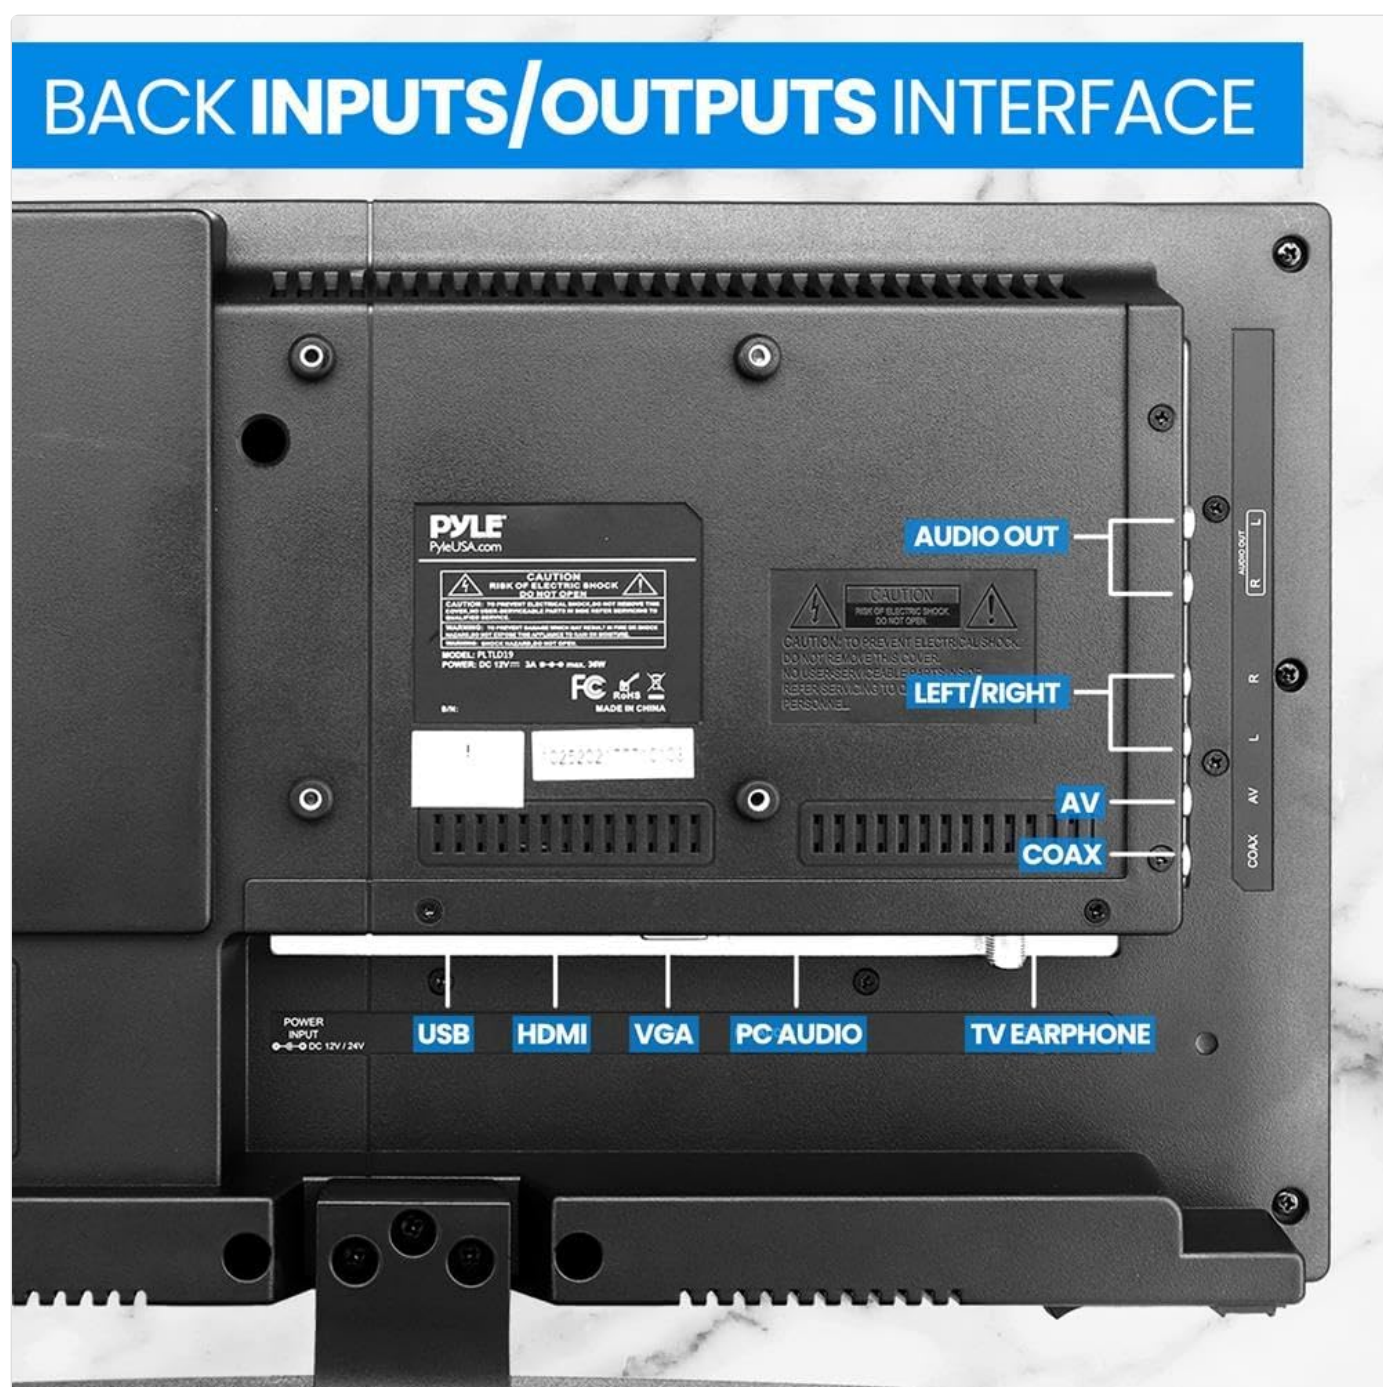


Figure 5: Detailed view of the back panel of the television, illustrating the various input and output ports available for connecting external devices.

1. Basic Controls

The television can be operated using the side panel buttons or the included full-function remote control.

- **Power:** Press the POWER button on the remote or side panel to turn the TV On/Off.
- **Volume:** Use VOL+/- buttons to adjust the volume level.
- **Channel:** Use CH+/- buttons to scan through available channels.
- **Source:** Press the SOURCE button to cycle through input sources (HDMI, AV, VGA, TV, DVD).
- **Menu:** Press the MENU button to access the On-Screen Display (OSD) menu for settings adjustments. Press again to exit.



Figure 6: Close-up of the side panel buttons, indicating their functions for basic TV operation.

2. DVD Player Operation

The integrated slot-in DVD player supports various disc formats.

- Insert a DVD or CD into the slot on the side of the TV. The TV will automatically switch to DVD mode or prompt you to select

it.

- Use the PLAY/PAUSE and EJECT buttons on the side panel or remote control to manage disc playback.



Figure 7: A hand demonstrating the insertion of a DVD into the integrated slot-in DVD player on the side of the television.

3. Display Modes and Features

- **Display Modes:** Selectable multi-viewing display modes include 16:9 (widescreen), 4:3 (standard), Zoom, and Cinema. Adjust these via the OSD menu or dedicated remote button.
- **V-Chip:** Parental control feature to block programs based on ratings.
- **Closed Caption:** Displays on-screen text of the audio portion of a program.
- **Sleep Timer:** Set the TV to automatically turn off after a specified period.

1920 x 1080

HIGH DEFINITION DISPLAY RESOLUTION



21.5 Inches
Big Screen Display



200 cd/m2
Screen Brightness

Figure 8: The television screen showcasing its 1920x1080 Full HD resolution and 21.5-inch display size, emphasizing visual clarity.

4. Using as a PC Monitor

The Pyle RV TV can function as a secondary monitor for your Mac or PC. Connect your computer using an HDMI or VGA cable to the corresponding input ports on the TV. Select the correct input source using the SOURCE button on the remote or side panel. This allows for extended desktop or mirrored display functionality, enhancing productivity on the go.

WORKS with MAC and PC



Figure 9: The Pyle RV Television set up as a computer monitor, demonstrating its compatibility with Mac and PC systems for extended display use.

MAINTENANCE

- **Screen Cleaning:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a screen-safe cleaning solution. Avoid harsh chemicals or abrasive materials.
- **Cabinet Cleaning:** Use a soft, dry cloth to clean the TV cabinet.
- **Ventilation:** Ensure the ventilation openings on the TV are not blocked to prevent overheating.
- **Storage:** If storing the TV for an extended period, disconnect it from power and store it in a cool, dry place, ideally in its original packaging.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No Power	Power cable not connected; Power outlet not working; DC adapter issue.	Check all power connections. Try a different outlet. Ensure DC adapter is fully inserted and vehicle power is on.
No Picture / No Signal	Incorrect input source selected; External device not powered on or connected; Antenna issue.	Press SOURCE button to select correct input. Check external device power and cable connections. Adjust or reposition antenna.
Poor Sound Quality	Volume too low; Mute activated; External speakers not connected properly; Internal speaker limitations.	Increase volume. Deactivate mute. If using external speakers, ensure proper connection. Consider connecting external speakers for improved audio experience.
DVD Not Playing	Disc inserted incorrectly; Disc is dirty or damaged; Unsupported disc format.	Ensure disc is inserted correctly with label facing up. Clean the disc. Try a different disc. Refer to manual for supported formats.
Remote Control Not Working	Batteries are dead or inserted incorrectly; Obstruction between remote and TV; Remote sensor blocked.	Replace batteries (2x AAA). Ensure correct polarity. Remove any obstructions. Clean the remote sensor on the TV.

SPECIFICATIONS

- **Screen Size:** 21.5 inches (Diagonal)
- **Screen Display Type:** E-LED Backlight
- **Display Resolution:** 1920 x 1080 Pixels (Full HD 1080p)
- **Signal Support:** 1080p, 1080i, 720p, 480p, 480i
- **Display Modes:** 16:9, 4:3, Zoom, Cinema
- **Viewing Angle:** 178° Vertical, 178° Horizontal
- **Speaker Power:** (2) 3 Watt, 4Ω
- **Refresh Rate:** 60Hz
- **TV Tuner:** ATSC/NTSC
- **Response Time:** 6.5ms
- **Max. Color:** 16.7M
- **Contrast:** 3000:1 (30,000:1 Dynamic)
- **Brightness:** 220 cd/m2
- **VESA Mounting:** 100mm x 100mm
- **Power Input:** 100/240V, 50/60Hz (AC); 12/24V (DC)
- **Power Consumption:** 36W
- **Product Dimensions (With Stand):** 19.7" x 6.3" x 13.59" -inches (L x W x H)
- **Product Dimensions (Without Stand):** 19.7" x 1.9" x 11.8" -inches (L x W x H)
- **Weight:** 10.06 lbs.

PRODUCT DIMENSION



Figure 10: Visual representation of the television's dimensions and weight, providing a clear understanding of its physical size.

WARRANTY AND SUPPORT

For detailed warranty information, technical support, or to download the full user manual, please refer to the official Pyle website or the provided PDF document.

- **Official User Manual (PDF):** [Download PDF Manual](#)
- **Pyle Official Store:** [Visit Pyle Store on Amazon](#)

© 2024 Pyle. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question