

BN59-01315J

Generic Replacement Remote Control BN59-01315J User Manual

For Samsung Crystal UHD TU-8000 and TU-7000 Series 4K UHD HDR Smart TVs

1. INTRODUCTION

This manual provides instructions for the Generic Replacement Remote Control, model BN59-01315J. This remote is designed to function as a direct replacement for original Samsung TV remote controls, specifically compatible with Samsung Crystal UHD TU-8000 and TU-7000 Series 4K UHD HDR Smart TVs. No programming or pairing is required for its operation; simply install batteries and begin use.

2. SETUP: BATTERY INSTALLATION

To prepare your remote control for use, follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two (2) 1.5V AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Note: Batteries are not included with the remote control. No programming or pairing is needed after battery installation.





Image: Back view of the remote control with the battery compartment open, illustrating the correct orientation for inserting two AAA batteries.

3. OPERATING INSTRUCTIONS

Point the remote control directly at your Samsung TV's infrared receiver. Ensure there are no obstructions between the remote and the TV.



Image: Front view of the remote control, displaying the layout and labels of all functional buttons.

Basic Functions:

- **Power (O):** Turns the TV on or off.
- **Source:** Selects the input source (HDMI, AV, etc.).
- **Number Buttons (0-9):** Directly selects channels.
- **Volume (+/-):** Adjusts the TV's volume level.
- **Mute:** Mutes or unmutes the TV sound.
- **Channel (CH ^/v):** Changes channels up or down.
- **Directional Pad (Up/Down/Left/Right) & Enter:** Navigates menus and confirms selections.
- **Return:** Goes back to the previous screen or menu.
- **Exit:** Exits the current menu or application.

Smart TV and Special Functions:

- **Smart Hub (Home icon):** Accesses the Smart Hub for apps, streaming services, and other smart features.
- **Netflix:** Direct access to the Netflix application.
- **Prime Video:** Direct access to the Amazon Prime Video application.
- **Samsung TV Plus:** Direct access to the Samsung TV Plus service.

- **Guide:** Displays the TV program guide.
- **Settings:** Opens the TV's settings menu.
- **Color Buttons (Red, Green, Yellow, Blue):** Used for specific functions within certain applications or menus, as indicated on-screen.

4. MAINTENANCE

Cleaning:

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

Battery Replacement:

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new 1.5V AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Storage:

If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which could damage the device.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new 1.5V AAA alkaline batteries.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Ensure you are within the effective range and pointing the remote directly at the TV.
- **Specific buttons not working:**
 - This remote is designed for specific Samsung TV models. Verify your TV model is listed as compatible.
 - Clean the remote's surface, especially around the unresponsive buttons, to ensure no debris is interfering.
- **TV responds intermittently:**
 - This could indicate low battery power. Replace the batteries.
 - Ensure consistent line of sight to the TV's IR receiver.

6. SPECIFICATIONS

Brand	Generic
Model Number	BN59-01315J
Connectivity Technology	Infrared (IR)
Controller Type	Button Control

Power Supply	2 x 1.5V AAA Alkaline Batteries (not included)
Special Feature	Ergonomic design
Compatible Devices	Samsung Televisions
Compatible TV Models	Samsung Crystal UHD TU-8000 Series (e.g., UN65TU8000FXZA, UN75TU8000FXZA, UN85TU8000FXZA), TU-7000 Series (e.g., UN43TU7000F, UN50TU7000F, UN55TU7000F, UN58TU7000F, UN65TU7000F, UN70TU7000F, UN75TU7000F, and their FXZA/FXZC variants)
UPC	768677955800

7. WARRANTY AND SUPPORT

Warranty Information:

This product comes with a 1-year warranty from the date of purchase, covering manufacturing defects. Please retain your proof of purchase for warranty claims.

Customer Support:

For any questions or issues not covered in this manual, please contact the retailer or manufacturer's customer support for assistance. Refer to your purchase documentation for specific contact details.