

**PDP 052-008-BTN-WH**

# **Victrix Pro FS-12 Esports Playstation Fight Stick User Manual**

Brand: PDP | Model: 052-008-BTN-WH

## **INTRODUCTION**

This manual provides instructions for the Victrix Pro FS-12 Arcade Fight Stick, an all-button controller designed for use with PlayStation 5, PlayStation 4, and PC. The device features Sanwa Denshi buttons and is constructed from aircraft-grade aluminum for durability. It includes integrated carrying handles, cable organizers, and a control bar for quick adjustments during use. The design allows for component modification via a quick-access back panel.

**VICTRIX™**  
BY  PDP



Figure 1: Top-down view of the Victrix Pro FS-12 Arcade Fight Stick.

# OFFICIALLY LICENSED

## By PlayStation



Figure 2: Angled view of the Victrix Pro FS-12, indicating its official PlayStation licensing.

## PRODUCT FEATURES

- Durable Construction:** Manufactured from a single piece of aircraft-grade aluminum, designed for resilience during travel and use.
- Precision Input:** Equipped with pro-grade 24mm and 30mm Sanwa Denshi buttons for accurate command execution.
- Ergonomic Design:** Features an integrated 6.28° wrist slope, an ergonomic button layout, and a built-in foam lap pad for user comfort during extended play.
- Customization Capability:** A quick-access back panel allows for easy modification and updates of internal components. An Allen wrench is included for this purpose.
- Multi-Platform Compatibility:** Supports PlayStation 5, PlayStation 4, and PC (XInput) via a built-in mode switch.
- Portability:** Includes durable carrying handles and cable organizers for convenient transportation.
- Tournament Mode:** A lockable control bar prevents accidental button presses during competitive play.

# EXTREMELY DURABLE

To handle all the bumps and  
drops of travel



Figure 3: The Victrix Pro FS-12 is designed for durability, suitable for travel and competitive environments.

# ALL-DAY COMFORT

Ergonomic button layout & integrated  
6.28° wrist slope



Figure 4: Ergonomic button layout and integrated wrist slope contribute to user comfort.

## SETUP

- Unpack Contents:** Remove the Victrix Pro FS-12 Arcade Fight Stick, 3m detachable braided USB-C controller cable, Allen wrench, and storage bag from the packaging.
- Connect Cable:** Insert the USB-C end of the provided cable into the port on the Victrix Pro FS-12. Connect the USB Type-A end to an available USB port on your PlayStation 5, PlayStation 4, or PC.
- Select Platform:** Locate the platform mode switch on the device. Set the switch to the appropriate position for your intended platform (PS5, PS4, or PC).
- Power On:** Ensure your console or PC is powered on. The fight stick should be recognized automatically.

## OPERATING INSTRUCTIONS

## Button Layout and Functions

The Victrix Pro FS-12 features a 12-button layout with Sanwa Denshi buttons. The primary action buttons are 24mm, while the UP button is 30mm. The control bar includes additional buttons for system functions and a PS touchpad.

- **Action Buttons:** Eight 24mm Sanwa Denshi buttons are arranged for primary game inputs.
- **Directional Buttons:** 24mm Sanwa Denshi buttons are used for directional inputs, with a 30mm Sanwa Denshi button specifically for the UP input.
- **Control Bar:** This bar contains buttons for PlayStation system functions (e.g., PS button, Share, Options) and a touchpad.
- **3.5mm Headset Jack:** Located on the device for audio output and microphone input.

## Tournament Mode

To prevent accidental interruptions during competitive play, the Victrix Pro FS-12 includes a Tournament Mode. Activating this mode locks out the control bar buttons, ensuring that only essential game inputs are active. Refer to the device's physical controls for the specific switch or button combination to engage Tournament Mode.

# POWERFUL PERFORMANCE

Delivers faster response times



Figure 5: The Victrix Pro FS-12 in use, demonstrating its application in a gaming environment.

## MAINTENANCE

### Modifications and Component Swapping

The Victrix Pro FS-12 is designed for user modifications. A quick-access back panel allows for easy access to internal components. Use the included Allen wrench to open the panel and perform desired modifications or component swaps. The internal layout is organized to facilitate these processes.

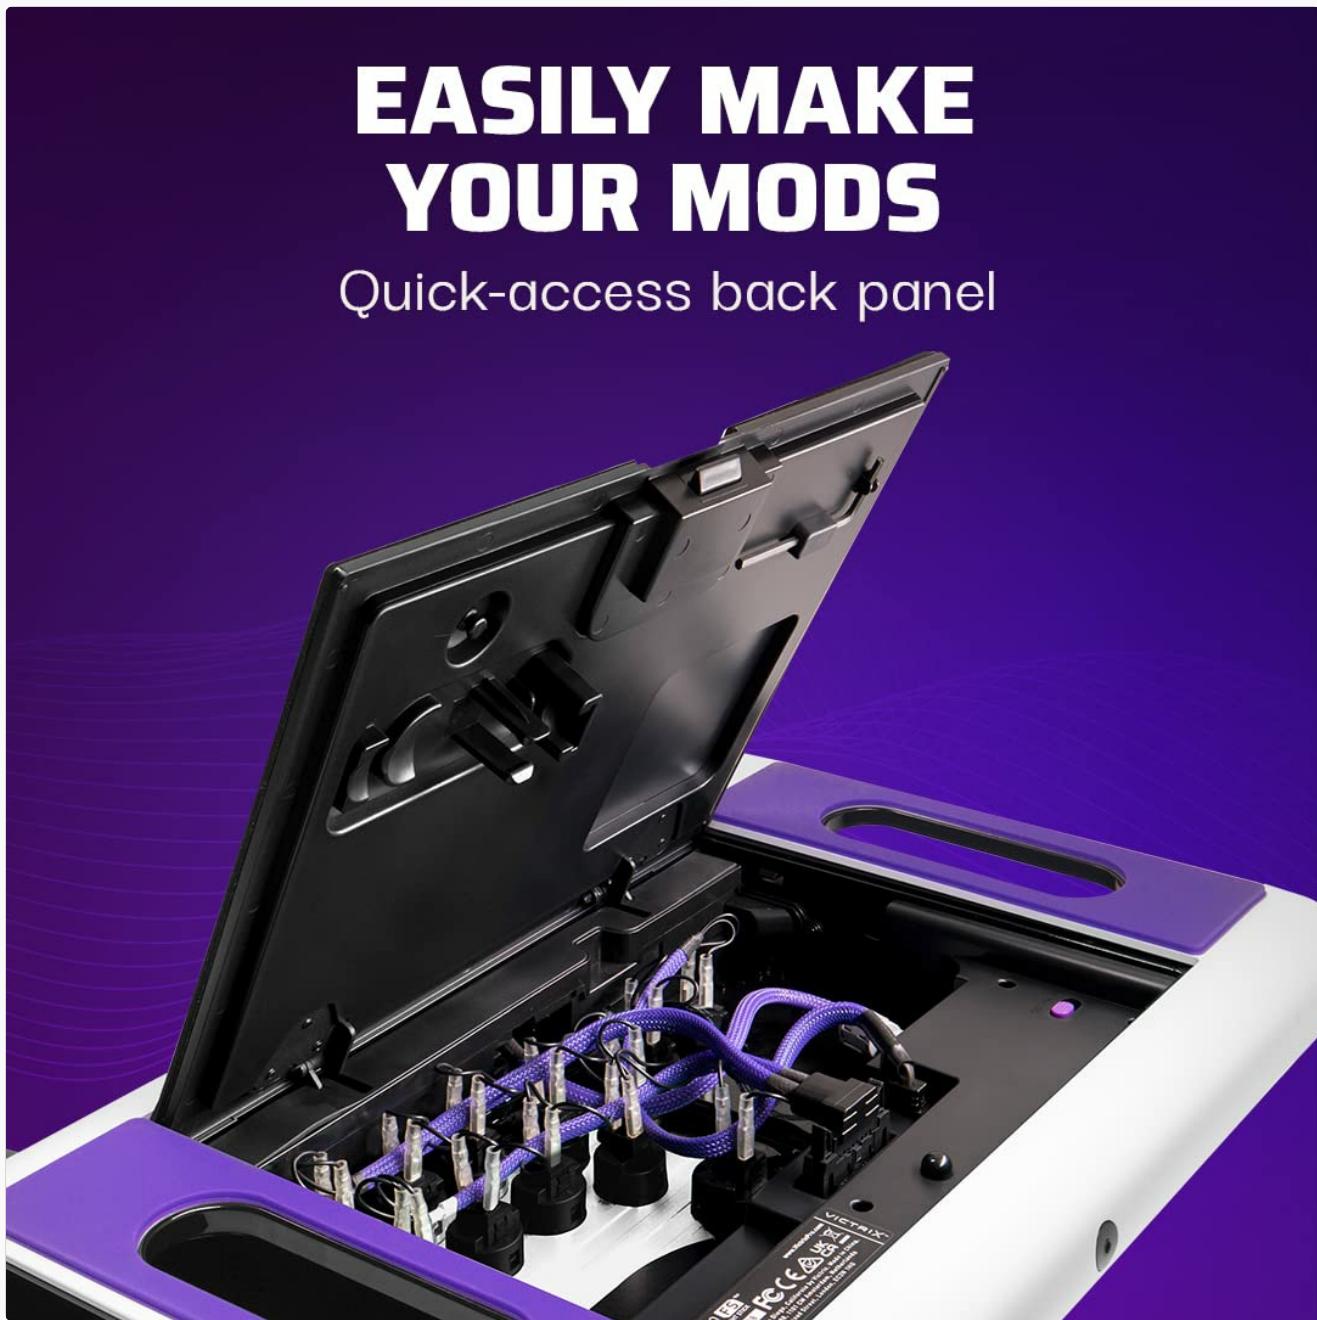


Figure 6: The quick-access back panel allows for easy internal modifications and component replacement.

### Cleaning

To maintain the appearance and functionality of your fight stick, regularly wipe the exterior surfaces with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals or abrasive cleaners, as these may damage the finish or components.

## TROUBLESHOOTING

- Device Not Recognized:** Ensure the USB cable is securely connected to both the fight stick and the console/PC. Verify that the platform mode switch is set to the correct position for your system. Try connecting to a different USB port.
- Buttons Unresponsive:** Check for any physical obstructions around the buttons. If the issue persists, consider opening the back panel (refer to Maintenance section) to inspect internal connections, ensuring all wires are securely attached to the button terminals.
- Audio Issues:** If using a headset, ensure it is fully plugged into the 3.5mm jack. Check your system's audio settings to confirm the fight stick is selected as the input/output device.
- Accidental Button Presses:** Ensure Tournament Mode is activated if you wish to disable the control bar buttons during gameplay.

## SPECIFICATIONS

### Electrical Specifications

- Input Latency:** 5ms
- Action Buttons:** (8) 24mm Sanwa Denshi
- Direction Buttons:** 24mm Sanwa Denshi, 30mm Sanwa Denshi UP Button
- PCB:** Victrix Custom
- Connection Type:** USB-C to USB Type-A
- Audio Support:** 3.5mm Headset Jack for Audio Output and Mic Input
- Compatibility:** PS5, PS4, PC XInput

### Mechanical Specifications

- Cable Length:** 3m
- Detachable Shaft:** No
- Case Material:** Aircraft Grade Aluminum
- Weight:** 7.8 lbs (approximately 3.54 kg)
- Dimensions:** 16.25" x 11" x 2.25" (approximately 41.28 cm x 27.94 cm x 5.72 cm)


## WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the documentation included with your product or visit the official PDP website. The manufacturer, PDP, provides support for their products.

**Manufacturer:** PDP

**Model Number:** 052-008-BTN-WH

## Related Documents

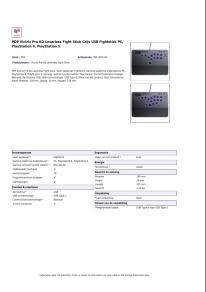	<p><a href="#">PDP Victrix Pro KO Leverless Fight Stick - PC &amp; Console Gaming Controller</a></p> <p>Detailed specifications for the PDP Victrix Pro KO Leverless Fight Stick, a high-performance fight stick compatible with PC, PlayStation 4, and PlayStation 5. Features include USB-C connectivity and a durable design.</p>
	<p><a href="#">PDP Victrix Pro BFG Gamepad - Technical Specifications for PC and PlayStation</a></p> <p>Detailed technical specifications for the PDP Victrix Pro BFG RF/USB Analog/Digital Gamepad. This controller supports PC, PlayStation 4, and PlayStation 5, featuring a 2000 mAh battery, 0.5 GHz processor, 5ms latency, and a durable ABS/polymer construction. Includes connectivity details, ergonomic features, and system requirements.</p>
	<p><a href="#">PDP Victrix Pro BFG Gamepad: Specs, Features for PC &amp; Xbox</a></p> <p>Detailed specifications and features of the PDP Victrix Pro BFG wireless USB gamepad, compatible with PC and Xbox consoles. Includes connectivity, battery life, and design details.</p>
	<p><a href="#">RIFFMASTER Wireless Guitar Controller Quick Start Guide for PlayStation 5 &amp; 4</a></p> <p>Get started quickly with the PDP RIFFMASTER Wireless Guitar Controller for PlayStation 5 and PlayStation 4. This guide covers assembly, connection, features, and charging.</p>

