

Rowenta X-Pert 6.60 Series (RH68/RH64)

Rowenta X-Pert 6.60 Series Motorized Brush Head Instruction Manual

Model: X-Pert 6.60 Series (RH68/RH64) | **Brand:** Rowenta

1. INTRODUCTION

This manual provides essential information for the proper installation, operation, and maintenance of your Rowenta X-Pert 6.60 Series Motorized Brush Head. This is an original replacement part designed for specific Rowenta, Tefal, and OBH Nordica cordless stick vacuum cleaners. Please read these instructions carefully before use and retain them for future reference.

2. SAFETY INSTRUCTIONS

- Always disconnect the vacuum cleaner from its power source (charger) before installing, removing, or performing any maintenance on the brush head.
- Do not immerse the brush head in water or any other liquid. Clean with a damp cloth only.
- Keep fingers, hair, and loose clothing away from the rotating brush roller during operation.
- Do not use the brush head if it is damaged. Contact customer support for replacement.
- This brush head is designed for dry vacuuming only. Do not use it to pick up liquids or wet debris.

3. PRODUCT OVERVIEW

The Rowenta X-Pert 6.60 Series Motorized Brush Head is an advanced cleaning accessory featuring a powerful rotating brush, integrated LED lighting, and smooth-gliding wheels for efficient floor cleaning.



Image 1: Front view of the Rowenta X-Pert 6.60 Series Motorized Brush Head, showing the integrated LED lights, the red brush roller, and the 'POWER LED VISION' text. The connection joint with a 'LOCK SYSTEM' button is visible at the top.

Key Features:

- **Motorized Brush Roller:** Effectively lifts dirt and debris from various floor types.
- **LED Vision Lighting:** Illuminates dark areas under furniture and in corners for thorough cleaning.
- **Integrated Wheels:** Ensures smooth maneuverability across different surfaces.
- **Lock System:** Securely attaches the brush head to the vacuum cleaner tube.

4. SETUP

1. Ensure your vacuum cleaner is turned off and disconnected from its charger.
2. Align the connection joint of the motorized brush head with the end of the vacuum cleaner's extension tube or main body.
3. Push the brush head firmly onto the tube until you hear a click, indicating it is securely locked in place. The 'LOCK SYSTEM' button should engage.
4. To remove, press the 'LOCK SYSTEM' button and pull the brush head off.

5. OPERATING INSTRUCTIONS

Once the brush head is securely attached, operate your vacuum cleaner as usual. The motorized brush and LED lights will activate automatically when the vacuum is turned on.

- **Floor Types:** This brush head is suitable for various hard floor surfaces, including ceramic tiles, laminate, and concrete. It is also effective on low-pile carpets.
- **LED Vision:** Utilize the integrated LED lights to identify dust and debris in dimly lit areas, ensuring a thorough clean.
- **Maneuverability:** The wheels allow for smooth gliding. Apply gentle pressure and move the vacuum

cleaner steadily for optimal performance.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your motorized brush head.

Cleaning the Brush Roller:

1. Turn off and unplug the vacuum cleaner.
2. Locate the brush roller access points, usually on the underside or side of the brush head. Refer to your main vacuum cleaner manual for specific instructions on removing the brush roller.
3. Carefully remove any tangled hair, threads, or debris from the brush roller using scissors or a brush cleaning tool.
4. Reinsert the brush roller, ensuring it clicks securely into place.

Cleaning the Wheels and Exterior:

- Wipe the exterior of the brush head and the wheels with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Ensure no moisture enters the motor or electrical components.

7. TROUBLESHOOTING

• Brush Roller Not Spinning:

- Check if the brush head is securely attached to the vacuum cleaner.
- Inspect the brush roller for obstructions (e.g., tangled hair, large debris) and clean as described in the Maintenance section.
- Ensure the vacuum cleaner itself is powered on and functioning correctly.

• LED Lights Not Working:

- Verify the brush head is properly connected to the vacuum cleaner.
- If the issue persists, contact customer support.

• Reduced Cleaning Performance:

- Clean the brush roller thoroughly.
- Ensure the vacuum cleaner's dustbin is empty and its filters are clean.

8. SPECIFICATIONS

- **Product Model:** SS-7222053289 (Type RH68/RH64)
- **Voltage:** 18.5V
- **Power:** 30W
- **Color:** Black
- **Weight:** Approximately 650g
- **Special Features:** Motorized brush roller, LED lighting, integrated wheels.

9. COMPATIBLE MODELS

This motorized brush head is compatible with the following vacuum cleaner models:

Rowenta:

- RH6471, RH6821, RH6822, RH6837, RH6838, RH6839, RH6848, RH6877, RH6878, RH6879
- RH6471WO/870, RH6821WO/871, RH6822WO/871, RH6837WO/871, RH6838WO/871, RH6839WO/871, RH6848WO/871, RH6877WO/871, RH6878WO/871, RH6879WO/871

Tefal:

- TY6837, TY6838, TY6878
- TY6837HO/871, TY6837WO/870, TY6837WO/871, TY6838WO/870, TY6838WO/871, TY6878WO/870, TY6878WO/871

OBH Nordica:





- EO6838, EO6878
- EO6838NO/871, EO6878NO/871

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your original vacuum cleaner or contact the authorized Rowenta/Tefal/OBH Nordica service center or your retailer.

Keep your proof of purchase for any warranty claims.

Related Documents - X-Pert 6.60 Series (RH68/RH64)

	<p>Rowenta X Combo User Guide</p> <p>Instructions for use for the Rowenta X Combo, a versatile cleaning device. This guide covers safety, operation, and maintenance.</p>
	<p>Rowenta X-Force Flex 14.80 Vacuum Cleaner User Manual</p> <p>User guide and safety instructions for the Rowenta X-Force Flex 14.80 vacuum cleaner, covering operation, maintenance, and features.</p>
	<p>Rowenta X-Force Flex 12.60 Neo / 13.60 Cordless Vacuum Cleaner User Manual</p> <p>Comprehensive user guide for the Rowenta X-Force Flex 12.60 Neo and 13.60 cordless vacuum cleaners, detailing assembly, operation modes, maintenance, and safety. Features include Smart Control, multiple power modes, and washable filters.</p>
	<p>Rowenta X-PERT 160 Cordless Handstick Vacuum Cleaner User Manual</p> <p>This user manual provides essential safety instructions, operating guidelines, and troubleshooting tips for the Rowenta X-PERT 160 cordless handstick vacuum cleaner. Learn how to use and maintain your appliance for effective cleaning. Visit www.rowenta.com or www.tefal.com for more information.</p>



[Rowenta SILENCE FORCE™ CYCLONIC Vacuum Cleaner User Guide and Maintenance Manual](#)

Comprehensive user guide for the Rowenta SILENCE FORCE™ CYCLONIC vacuum cleaner, covering assembly, operation, filter maintenance, dustbin emptying, accessory usage, and safety precautions. Includes model information and website links.

Safety instructions	p.3
Обязательное	p.8
Согласи патентни	p.14
Dovoljenje na dizajnu	p.20
Patent na dizajnu	p.28
СВИДЕТЕЛСТВО ЗА ДИЗАЙН	p.29
인정 지출	p.36
Инструкция по технике безопасности	p.42
安全指示	p.46
安全注意	p.54
Varulijadizajninstrukcije	p.61
Instrukcje dotyczące bezpieczeństwa	p.67
إرشادات السلامة	p.73
Gesamen Informatien	p.78

Rowenta Versatiles Cordless Handsticks: Safety & Usage Overview

Essential safety instructions, usage guidelines, and troubleshooting tips for Rowenta Versatiles Cordless Handsticks vacuum cleaners (e.g., X-Pert 6.60 RH6879). This guide covers proper operation, battery care, maintenance, and important safety precautions for these versatile handheld and handstick appliances.