

**4K50N400A, 4K43N400A, 4K55N400A, 4K50M600A, 4K65M600A, 4K43M600A, 4K55M600A, 4K75M600A**

## User Manual for Replacement Voice TV Remote Control

Brand: Generic

Model Compatibility: 4K50N400A, 4K43N400A, 4K55N400A, 4K50M600A, 4K65M600A, 4K43M600A, 4K55M600A, 4K75M600A

### INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your new Replacement Voice TV Remote Control. Designed for specific LED TV models, this remote offers a straightforward, ready-to-use solution for controlling your television's functions. Please read this manual thoroughly to ensure proper use and longevity of your device.

### SETUP

#### 1. Battery Installation

The remote control requires two (2) 1.5V AAA alkaline batteries for operation. Batteries are not included with the remote.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





**Figure 1:** Back view of the remote control with the battery compartment. The compartment cover is located at the bottom of the remote's back side, indicated by a small arrow or indentation for sliding.

## 2. Initial Use

Once batteries are installed, the remote control is ready for immediate use. No programming or pairing is required for the

specified compatible TV models. Simply point the remote at your television and begin operating it.

## OPERATING INSTRUCTIONS

---

This remote control is designed to replicate the functions of your original TV remote for the listed compatible models. Ensure a clear line of sight between the remote's infrared (IR) emitter and your TV's IR receiver.





**Figure 2:** Front view of the remote control, displaying the layout of all buttons including power, navigation, volume, channel, and dedicated app buttons.

## Key Functions:

- **Power Button ( ):** Turns the TV on or off.
- **Voice Control Button ( ):** Activates voice commands for compatible TV models. Press and hold to speak your command.
- **Navigation Pad (Circle with directional arrows):** Used to navigate menus and select options.
- **Back Button (↔):** Returns to the previous screen or menu.
- **Home Button ( ):** Returns to the TV's home screen.
- **Menu Button (Ξ):** Opens the TV's main menu or settings.
- **Volume Up/Down (+/-):** Adjusts the TV volume.
- **Mute Button ( ):** Mutes or unmutes the TV sound.
- **Channel Up/Down (▲/▼):** Changes TV channels.
- **Playback Controls (Play/Pause ►||, Fast Forward , Rewind ):** Controls media playback.
- **Settings Button (⚙):** Accesses quick settings or system settings.
- **Input/Source Button ( ):** Changes the TV input source (HDMI, AV, etc.).
- **Dedicated App Buttons (e.g., Prime Video, Netflix, Disney, Hulu):** Provides direct access to popular streaming applications.

## Compatibility:

This remote control is specifically designed to work with the following LED TV models:

- 4K50N400A
- 4K43N400A
- 4K55N400A
- 4K50M600A
- 4K65M600A
- 4K43M600A
- 4K55M600A
- 4K75M600A

**Important Note:** This remote control is **NOT COMPATIBLE** with other TV models not listed above. Please verify your TV

model before use.

## MAINTENANCE

---

### Cleaning the Remote:

- Use a soft, dry cloth to wipe the surface of the remote control.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- Do not use harsh chemicals, abrasive cleaners, or solvents, as these can damage the remote's finish or internal components.

### Battery Replacement:

Replace batteries when the remote's performance degrades or it stops responding. Always replace both batteries simultaneously with new 1.5V AAA alkaline batteries. Do not mix old and new batteries or different types of batteries.

## TROUBLESHOOTING

---

#### • Remote not responding:

- Check if the batteries are inserted correctly with the correct polarity (+/-).
- Replace old batteries with new 1.5V AAA alkaline batteries.
- Ensure there is a clear line of sight between the remote and the TV's infrared receiver. Obstructions can block the signal.
- Verify that your TV model is listed as compatible with this remote control.

#### • Voice control not working:

- Ensure your TV model supports voice control functionality and that it is enabled in your TV's settings.
- Make sure you are pressing and holding the voice button while speaking your command.
- Speak clearly and directly into the remote's microphone.
- Check for any software updates for your TV that might affect voice control.

#### • Buttons are sticky or unresponsive:

- Clean the remote control as described in the Maintenance section. Dirt or spills can affect button functionality.

## SPECIFICATIONS

---

<b>Brand</b>	Generic
<b>Model Compatibility</b>	4K50N400A, 4K43N400A, 4K55N400A, 4K50M600A, 4K65M600A, 4K43M600A, 4K55M600A, 4K75M600A
<b>Power Supply</b>	2 x 1.5V AAA Alkaline Batteries (Not Included)
<b>Connectivity Technology</b>	Infrared (IR)
<b>Controller Type</b>	Button Control
<b>Special Feature</b>	Ergonomic Design

Manufacturer	NTQinParts
Country of Origin	China

## WARRANTY AND SUPPORT

Specific warranty information for this product is typically provided by the seller at the time of purchase. Please refer to your purchase documentation or contact the seller directly for details regarding warranty coverage, returns, or technical support.

For any operational issues or questions not covered in this manual, please reach out to the seller or manufacturer for assistance.

© 2024 Generic. All rights reserved.

### Related Documents - 4K50N400A, 4K43N400A, 4K55N400A, 4K50M600A, 4K65M600A, 4K43M600A, 4K55M600A, 4K75M600A

 <b>User Manual</b> 	<p><a href="#">Amazon Fire TV 4-Series and Omni Series User Manual</a></p> <p>Comprehensive user manual for Amazon Fire TV 4-Series and Omni Series smart TVs. Learn how to set up, install, and use your Fire TV, including connecting devices, navigating the interface, and utilizing Alexa features.</p>
 <b>User Manual</b> 	<p><a href="#">Amazon Fire TV User Manual: Setup, Features, and Troubleshooting Guide</a></p> <p>Comprehensive user manual for Amazon Fire TV 4-Series, Omni Series, and Omni QLED Series smart TVs. Provides detailed instructions on setup, connecting devices, navigating features, and troubleshooting common issues.</p>
 <b>User Manual</b> 	<p><a href="#">Amazon Fire TV User Manual: Setup and Features</a></p> <p>Comprehensive user manual for Amazon Fire TV 4-Series, Omni Series, and Omni QLED Series smart TVs. Covers setup, features, troubleshooting, and smart home integration.</p>

Documents - 4K50N400A, 4K43N400A, 4K55N400A, 4K50M600A, 4K65M600A, 4K43M600A, 4K55M600A, 4K75M600A – 4K50N400A, 4K43N400A, 4K55N400A, 4K50M600A, 4K65M600A, 4K43M600A, 4K55M600A, 4K75M600A



Device Type	Device Name
Apple Phone & Tablet	<p><b>iPhone (iOS 14+):</b></p> <ul style="list-style-type: none"> <li>• SE (gen 1-2)</li> <li>• 6, 8+</li> <li>• X, X+, XS, XS Max</li> <li>• 11 Pro, 11 Pro Max</li> <li>• 12 mini, 12, 12 Pro, 12 Pro Max</li> </ul> <p><b>iPad (iOS 14 - iPadOS 14+):</b></p> <ul style="list-style-type: none"> <li>• iPad Air 2, iPad mini 4, iPad Gen 5</li> <li>• iPad Pro 9.7, 10.5, 11" (gen 1-2), 12.9" (gen 1-2)</li> </ul> <p><b>PLANNED TO SUPPORT - TBD:</b></p> <ul style="list-style-type: none"> <li>• iPad 10.2" (2020), iPad Air 10.9" (2020)</li> </ul>
Android Phone & Tablet	<p><b>VARIOUS (Android 11+)</b></p> <p><b>Google:</b></p> <ul style="list-style-type: none"> <li>• Pixel 3, 3XL, 3A, 3AXL, 4, 4XL, 4A</li> <li>• Pixel Slate</li> </ul> <p><b>Samsung:</b></p> <ul style="list-style-type: none"> <li>• Galaxy S9, S9+, S10, S10, S10+</li> <li>• Note 9, 10, 10+</li> <li>• Tab S5E, S6</li> </ul> <p><b>PLANNED TO SUPPORT - TBD:</b></p> <ul style="list-style-type: none"> <li>• Google</li> <li>• Pixel 6A with 5G</li> <li>• Pixel 6</li> <li>• Microsoft Duo</li> <li>• Samsung Galaxy</li> <li>• Z Fold 2, Z Fold 2 5G, Z Flip</li> <li>• Note20 Ultra 5G</li> <li>• Tab S6 5G, Tab S7+</li> <li>• S21 Ultra 5G, S21+ 5G, S21 5G</li> <li>• Sony Xperia 1 III</li> <li>• LG</li> <li>• O2 Plus, Wing 5G</li> <li>• OnePlus</li> <li>• 8, 8T, 8 Pro, Nord N10 5G, Nord N100</li> </ul>
TV Streaming Stick	<p><b>Amazon Fire TV (Fire OS 5+)</b></p> <ul style="list-style-type: none"> <li>• Fire TV 4K Max (2021)</li> <li>• Fire TV Stick (2016)</li> <li>• Fire TV Edition (2019)</li> <li>• Fire TV Stick 4K (2018)</li> <li>• Fire TV Stick (2020), Fire TV Stick Lite (2020)</li> </ul> <p><b>Android (OS 9+)</b></p> <ul style="list-style-type: none"> <li>• TiVo Stream 4K</li> <li>• Chromecast with Google TV (2020)</li> </ul>
TV Retail Streaming Set-Top-Box	<p><b>Apple (iOS 14+)</b></p> <ul style="list-style-type: none"> <li>• Apple TV (A1625)</li> <li>• Apple TV 4K (A1842)</li> <li>• Apple TV 4K (A2169)</li> </ul> <p><b>Android (OS 9+)</b></p> <ul style="list-style-type: none"> <li>• NVIDIA (TBD: Ganesh)</li> <li>• Shield TV (2017, 2019)</li> <li>• Shield TV Pro (2017, 2019)</li> <li>• Xsami (TBD: Ganesh)</li> <li>• Mi Box, Mi Box 3-KK-HDR</li> <li>• Ematic</li> <li>• Jetstream AGT418 STB (OS 9+)</li> </ul> <p><b>Amazon Fire TV (Fire OS 5+) (TBD: Ganesh)</b></p> <ul style="list-style-type: none"> <li>• Fire TV Gen 3, (pendant) (2017)</li> <li>• Fire TV Cube (Gen 1, Gen 2)</li> </ul> <p><b>*Known Issues: Inconsistent functionality of D-Pad keys on new remote control. Will be addressed in future client update.</b></p>
TV Android Operator Tier Streaming Set-Top-Box	<p><b>Android (OS 9+)</b></p> <ul style="list-style-type: none"> <li>• KACN KSTB2020</li> <li>• KACN KSTB2020</li> <li>• AMINO AMIGO 7X V2</li> <li>• EVOLUTION DIGITAL EVO PRO (OS 10+)</li> </ul>
TV Smart Soundbar	<p><b>Amazon Fire TV (OS 6+)</b></p> <ul style="list-style-type: none"> <li>• Fire TV Edition Anker Nebula D3000 (2019)</li> </ul> <p><b>SUPPORTED BUT NOT TESTED:</b></p> <ul style="list-style-type: none"> <li>• JBL Link Bar</li> </ul>
TV Smart TV	<p><b>SUPPORTED WITH LIMITED TESTING:</b></p> <p><b>Amazon Fire TV Omni 4K Series</b></p> <ul style="list-style-type: none"> <li>• Fire TV Omni (2021) - 4K43M600A*, 4K50M600A, 4K55M600A, 4K75M600A</li> </ul> <p><b>*Tested and validated. Remaining sizes are untested but uses the same chipset as Fire TV OS.</b></p> <p><b>SUPPORTED BUT NOT TESTED:</b></p> <p><b>Amazon Fire TV 4-Series 4K UHD</b></p> <ul style="list-style-type: none"> <li>• Fire TV 4-Series (2021) - SKU's ending with N400A</li> </ul> <p><b>Amazon Fire TV Edition (OS 5+)</b></p> <ul style="list-style-type: none"> <li>• Element</li> <li>• Insights</li> <li>• (2018) HD - NS-24DF710NA19</li> <li>• (2018) 4K - NS-43DF710NA19, NS-50DF710NA19</li> <li>• (2020) 4K - NS-43DF710NA21</li> <li>• Toshiba</li> <li>• (2018) 32LF21U19</li> <li>• (2018/19) 43LF621U19, 55LF621U19</li> <li>• (2018) 43LF621U20</li> <li>• (2020) 50LF621U21</li> </ul> <p><b>Android TV (OS 8+)</b></p> <ul style="list-style-type: none"> <li>• Sony</li> <li>• Z9G, Z8H, A9G, A9F, Z9F, A8H, A8G, A1E, A8F, X950H, X950E, X900H, X900E, X850H, X850E, X750H, X750E, X650H, X650E, X550H, X550E, X450H, X450E</li> <li>• Sharp Smart TV</li> <li>• XU, UA6800X, AL1X, UE630X, LE580X</li> <li>• Philips</li> <li>• 5000N, 5704</li> <li>• Hisense</li> <li>• H55, H65, H8, H9, H55, H6570, H6590</li> </ul> <p><b>PLANNED TO SUPPORT - TBD:</b></p> <ul style="list-style-type: none"> <li>• Samsung (Tizen OS 3.0+)</li> <li>• 2017 (OS 3.0)</li> <li>• 2018 (OS 4.0)</li> <li>• 2019 (OS 5.0)</li> <li>• 2020 (OS 5.5)</li> <li>• LG (webOS 3.3+)</li> <li>• 2016-17 (OS 3.5+)</li> <li>• 2018-19 (OS 4.0+)</li> <li>• 2020 (OS 5.0+)</li> </ul>
TV Game Console	<p><b>PLANNED TO SUPPORT - TBD:</b></p> <p><b>Microsoft</b></p> <ul style="list-style-type: none"> <li>• XBOX</li> <li>• One X, One S</li> <li>• Series S, Series X</li> </ul>
Web Browser	<p><b>Google:</b></p> <ul style="list-style-type: none"> <li>• Chrome (89+)</li> </ul> <p><b>Mozilla:</b></p> <ul style="list-style-type: none"> <li>• Firefox (87+)</li> </ul> <p><b>Microsoft:</b></p> <ul style="list-style-type: none"> <li>• Edge (89+)</li> </ul>
Web Browser	<p><b>Apple:</b></p> <ul style="list-style-type: none"> <li>• Safari (13+)</li> </ul>

[\[pdf\]](#)

Compatible Device List cumberlandconnect.org Type Name Apple Phone Tablet iPhone iOS 14 SE gen 1 2 8 XR X XS Max 11 Pro CCFiber TV 01 19 2022 |||

Compatible Device List Device Type Device Name Apple Phone Tablet Android Phone Tablet TV Str ... TV SUPPORTED WITH LIMITED TESTING: Amazon Fire TV Omni 4K Series Fire TV Omni 2021 - **4K43M600A\*, 4K50M600A, 4K55M600A, 4K65M600A, 4K75M600A** \*Tested and validated. Remaining sizes are untested but

lang:en score:114 filesize: 166.23 K page\_count: 1 document date: 2022-01-19



Have Questions? We're Here To Help!  
Contact Our Team

Technical Support Team available 24/7 by calling  
(800) 887-2382 & select Option 2

Live Chat with our Technical Support Team  
Monday - Friday, 7am - 11pm

Email: [info@cumberlandconnect.org](mailto:info@cumberlandconnect.org)





## User Manual

Fire TV 4-Series – SKU #	Fire TV Omni Series – SKU #
43" 4K53N400A	43" 4K53M600A
50" 4K50N400A	50" 4K50M600A
55" 4K55N400A	55" 4K55M600A
	65" 4K55M600A
	75" 4K75M600A

### [Amazon Fire TV 4-Series and Omni Series User Manual](#)

Comprehensive user manual for Amazon Fire TV 4-Series and Omni Series smart TVs. Learn how to set up, install, and use your Fire TV, including connecting devices, navigating the interface, and utilizing Alexa features.

lang:en score:73 filesize: 2.97 M page\_count: 101 document date: 2022-07-19



## User Manual

Fire TV 4-Series	Fire TV Omni Series	Fire TV Omni QLED Series
SKU #	SKU #	SKU #
43" 4K53N400A	43" 4K53M600A	65" QL55F601A
50" 4K50N400A	50" 4K50M600A	75" QL75F601A
55" 4K55N400A	55" 4K55M600A	

### [Amazon Fire TV User Manual: Setup and Features](#)

Comprehensive user manual for Amazon Fire TV 4-Series, Omni Series, and Omni QLED Series smart TVs. Covers setup, features, troubleshooting, and smart home integration.

lang:en score:57 filesize: 3.76 M page\_count: 108 document date: 2023-03-09



## User Manual

Fire TV 4-Series	Fire TV Omni Series	Fire TV Omni QLED Series
SKU #	SKU #	SKU #
43" 4K53N400A	43" 4K53M600A	65" QL55F601A
50" 4K50N400A	50" 4K50M600A	75" QL75F601A
55" 4K55N400A	55" 4K55M600A	

### [Amazon Fire TV User Manual: Setup, Features, and Troubleshooting Guide](#)

Comprehensive user manual for Amazon Fire TV 4-Series, Omni Series, and Omni QLED Series smart TVs. Provides detailed instructions on setup, connecting devices, navigating features, and troubleshooting common issues.

lang:en score:48 filesize: 3.57 M page\_count: 107 document date: 2022-10-31



## User Manual

Fire TV 4-Series	Fire TV Omni Series	Fire TV Omni QLED Series
SKU #	SKU #	SKU #
43" 4K43N400A	43" 4K43M600A	65" QL65F601A
50" 4K50N400A	50" 4K50M600A	75" QL75F601A
55" 4K55N400A	55" 4K55M600A	

### [pdf] User Manual Documentation

User ManualAmazon Fire TV Omni QLED Series 4K UHD smart TVFireTV 4Series OmniQLED US  
Usermanualcustomerdocumentation s3 us west 2 amazonaws Amazon Guides Smart Documentation  
FireTV Usermanual |||  
User Manual Fire TV 4-Series SKU # 43 **4K43N400A** 50 **4K50N400A** 55 **4K55N400A**  
Fire TV Omni Series SKU # 43 **4K43M600A** 50 **4K50M600A** 55 **4K55M600A** Fire TV  
Omni QLED Series SKU # 65 QL65F601A 75 QL75F601A Welcome and  
congratulations on your new Amazon Fire TV smart TV With your new Amazon Fire  
T...

lang:en score:46 filesize: 3.76 M page\_count: 108 document date: 2023-03-09