

JOCCA Electric Crepe Maker Model 1547 User Manual

Your guide to perfect crepes every time.

1. INTRODUCTION

Welcome to the JOCCA Electric Crepe Maker Model 1547 user manual. This appliance is designed for easy and efficient preparation of delicious crepes, pancakes, and similar flatbreads. With its non-stick plate and even heat distribution, you can achieve professional results in your own kitchen. Please read these instructions carefully before first use and retain them for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Read all instructions carefully.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance body in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for other than intended use.

3. PRODUCT OVERVIEW

The JOCCA Electric Crepe Maker Model 1547 features a compact design with essential components for easy crepe making.

- **Non-stick Cooking Plate:** 22 cm diameter for easy food release and cleaning.
- **On/Off Button:** Located on the front for simple operation.
- **Power Indicator Light:** Illuminates when the appliance is powered on and heating.
- **Wooden Batter Spreader:** Included for evenly spreading crepe batter.



Image 1: The JOCCA Electric Crepe Maker Model 1547, showing its black body, 22cm non-stick cooking plate, and red On/Off switch with the JOCCA logo.



Image 2: The included wooden T-shaped batter spreader, essential for creating thin, even crepes.

4. SETUP

Follow these steps before using your crepe maker for the first time:

1. Unpack the appliance and all accessories. Remove any packaging materials, stickers, or labels.
2. Wipe the non-stick cooking plate with a damp cloth and dry thoroughly.
3. Place the crepe maker on a stable, flat, heat-resistant surface, away from walls or other heat-sensitive objects. Ensure there is adequate ventilation around the appliance.
4. Ensure the power cord is not tangled and is positioned safely to avoid tripping hazards.

5. OPERATING INSTRUCTIONS

Preparing crepes with your JOCCA Electric Crepe Maker is a simple process:

1. **Plug In:** Insert the power plug into a suitable electrical outlet (220-240V, 50/60Hz). The power indicator light will illuminate, signaling that the appliance is on and beginning to heat.
2. **Preheat:** Allow the crepe maker to preheat for approximately 3-5 minutes. This ensures the plate reaches the optimal temperature for cooking.
3. **Prepare Batter:** While preheating, prepare your crepe batter.
4. **Apply Batter:** Once preheated, you may lightly grease the non-stick plate with a small amount of oil or butter if desired, though it is often not necessary due to the non-stick coating. Pour a small amount of batter (approximately 1/4 cup for a standard crepe) onto the center of the hot plate.
5. **Spread Batter:** Immediately use the included wooden batter spreader to quickly and evenly spread the batter into a thin, round layer across the plate. Work quickly as the batter will cook fast.
6. **Cook First Side:** Cook for 1-2 minutes, or until the edges begin to turn golden brown and the surface of the crepe starts to bubble and set.
7. **Flip Crepe:** Using a non-metallic spatula, gently lift the edge of the crepe and carefully flip it over.
8. **Cook Second Side:** Cook for another 30-60 seconds, or until the second side is lightly golden brown.
9. **Remove and Serve:** Remove the cooked crepe from the plate and place it on a serving dish. Repeat the process for additional crepes.
10. **Turn Off:** When finished, press the On/Off button to turn off the appliance and unplug it from the outlet.



Image 3: A crepe cooking on the JOCCA Electric Crepe Maker, showing the golden-brown surface and even cooking.



Image 4: The JOCCA Crepe Maker alongside a plate of freshly made crepes garnished with strawberries and mint, demonstrating a typical serving suggestion.

6. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your crepe maker.

- **Cool Down:** Always unplug the crepe maker from the power outlet and allow it to cool completely before cleaning.
- **Clean Plate:** Wipe the non-stick cooking plate with a soft, damp cloth. For stubborn residue, a small amount of mild dish soap can be used. Ensure all soap residue is wiped away with a clean, damp cloth.
- **Clean Exterior:** Wipe the exterior of the appliance with a soft, damp cloth.
- **Do Not Immerse:** Never immerse the crepe maker body, cord, or plug in water or any other liquid.
- **Avoid Abrasives:** Do not use abrasive cleaners, metal scouring pads, or harsh chemicals, as these can damage the non-stick coating and exterior finish.
- **Storage:** Store the cooled and cleaned appliance in a dry place.

7. TROUBLESHOOTING

If you encounter issues with your crepe maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not heat up.	Not plugged in; On/Off button not pressed.	Ensure the power cord is securely plugged into a working outlet and the On/Off button is in the 'On' position.
Crepes are sticking to the plate.	Plate not sufficiently preheated; insufficient or no oil/butter used; damaged non-stick coating.	Allow adequate preheating time (3-5 minutes). Lightly grease the plate with oil or butter before each crepe. If coating is damaged, contact support.
Crepes are cooking unevenly.	Insufficient preheating; batter not spread evenly.	Ensure the appliance is fully preheated. Use the wooden spreader to distribute batter quickly and uniformly.
Smoke or unusual odor during first use.	Residual manufacturing oils burning off.	This is normal for initial use. Ensure good ventilation. If it persists after a few uses, discontinue use and contact support.

8. SPECIFICATIONS

Brand	Jocca
Model Number	1547
Power	700 Watts

Voltage	220-240 Volts
Plate Diameter	22 cm
Material	Aluminium (plate), Bakelite (body)
Color	Black
Dimensions (L x W x H)	50 x 50 x 28 cm (approximate packaging dimensions)
Item Weight	940 g
Special Feature	Non-stick coating

9. WARRANTY AND SUPPORT

For warranty information, technical assistance, or to inquire about replacement parts, please refer to the documentation provided with your purchase or contact JOCCA customer support directly. Contact details can typically be found on the manufacturer's website or through your retailer.