

## **superpow BN59-01199F**

# **Universal Samsung TV Remote Control**

Model: BN59-01199F

Brand: superpow

## **INTRODUCTION**

---

This manual provides detailed instructions for the setup, operation, and maintenance of your superpow Universal Samsung TV Remote Control, model BN59-01199F. This remote is designed to be compatible with a wide range of Samsung Smart TV models, including LCD, LED, HDTV, and 3D TVs, offering a seamless replacement for your original remote.



*Image: Front and side view of the superpow Universal Samsung TV Remote Control, showcasing its ergonomic design and button layout.*

## SETUP

---

Before using your new remote control, you will need to install batteries. This remote requires two AAA batteries (not included).

- 1. Open the Battery Compartment:** Locate the battery cover on the back of the remote control. Gently slide the cover downwards or press the latch to open it.
- 2. Insert Batteries:** Insert two AAA batteries into the compartment, ensuring that the positive (+) and negative (-)

terminals align correctly with the markings inside the compartment.

**3. Close the Battery Compartment:** Slide the battery cover back into place until it clicks securely.

Once batteries are installed, the remote is ready for use with your Samsung TV. No programming or pairing is typically required for this universal remote.



*Image: Step-by-step diagram illustrating how to remove the battery cover, insert AAA batteries, and close the compartment.*

## OPERATING INSTRUCTIONS

The superpow Universal Samsung TV Remote Control features a standard layout for intuitive operation. Below is a guide to the primary functions of each button:

## Replacement All Remote Control for Samsung



**POWER ( )**: Turns the TV on and off

**SOURCE**: Displays and selects the available video

**VOL+/-**: Adjusts the volume. **CH+/-**: Changes channels

**MUTE**: Cuts off the sound temporarily

**CHLIST**: Displays channel lists on the screen

**SAMR THUB**: Brings up Smart Hub app lications

**MENU**: Displays the main on-screen menu

**TOOLS**: Quickly select frequently used functions

**INFO**: Displays information on the TV screen

**RETURN**: Returns to the previous menu

**EXIT**: Exits the menu

**COLOR BUTTONS(YELLOW/BLUE/RED/GREEN)**:

**Shortcut keys for interactive functions.**

**SPORTS**: Accesses the "SPORTS"

*Image: Detailed diagram of the remote control, highlighting the function of each button for easy reference.*

- **POWER ( )**: Turns the TV on or off.
- **SOURCE**: Displays and selects available input sources (e.g., HDMI 1, AV, TV).
- **VOL +/-**: Adjusts the volume level up or down.
- **CH +/-**: Changes channels up or down.
- **MUTE**: Temporarily mutes or unmutes the TV audio.
- **CH LIST**: Displays the channel list on the screen.
- **SMART HUB**: Accesses the Samsung Smart Hub for apps and streaming services.
- **MENU**: Displays the main on-screen menu for TV settings.
- **TOOLS**: Provides quick access to frequently used functions or settings.
- **INFO**: Displays information about the current program or input.

- **RETURN:** Returns to the previous menu or screen.
- **EXIT:** Exits the current menu or application.
- **Directional Pad (Up, Down, Left, Right) & OK:** Navigates through menus and confirms selections.
- **Number Buttons (0-9):** Directly enters channel numbers.
- **PRE-CH:** Switches to the previously viewed channel.
- **Color Buttons (A, B, C, D - Red, Green, Yellow, Blue):** Provide shortcut keys for interactive functions within certain applications or TV features.
- **SPORTS:** Directly accesses sports-related content or modes (if supported by TV).
- **CC:** Toggles Closed Captions on or off.
- **Media Control Buttons (Rewind, Play/Pause, Fast Forward):** Controls playback of media content.

The remote operates using infrared (IR) technology. Ensure a clear line of sight between the remote and your TV's IR receiver for optimal performance. The effective operating distance is typically 8-10 meters (approximately 26-33 feet).



Image: Illustration demonstrating the effective operating range of the remote control, typically 8-10 meters.

## MAINTENANCE

---

Proper care will extend the life of your remote control:

- **Cleaning:** Use a soft, dry cloth to clean the remote's surface. Do not use liquid cleaners, sprays, or abrasive materials, as they may damage the remote.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote.
- **Avoid Exposure:** Keep the remote away from direct sunlight, high temperatures, humidity, and water. Do not drop or subject the remote to strong impacts.

## TROUBLESHOOTING

---

If you encounter issues with your remote control, refer to the following common solutions:

Problem	Possible Cause / Solution
Remote is not working.	<ul style="list-style-type: none"><li>◦ <b>Batteries:</b> Check if batteries are inserted correctly (polarity). Replace old or dead batteries with new AAA batteries.</li><li>◦ <b>Line of Sight:</b> Ensure there are no obstructions between the remote and the TV's IR receiver.</li><li>◦ <b>Distance:</b> You might be too far from the TV. Move closer (within 8-10 meters).</li></ul>
Buttons are unresponsive or sticky.	<ul style="list-style-type: none"><li>◦ <b>Dirt/Debris:</b> Clean the remote's surface and around the buttons with a soft, dry cloth.</li><li>◦ <b>Battery Level:</b> Low batteries can sometimes cause inconsistent button response. Replace them.</li></ul>
Remote works for some functions but not others.	<ul style="list-style-type: none"><li>◦ <b>TV Compatibility:</b> While universal, some advanced or specific functions might not be supported by all Samsung TV models.</li><li>◦ <b>Battery Level:</b> Ensure batteries are fresh.</li></ul>

If the issue persists after trying these steps, please refer to the support information provided by the manufacturer.

## SPECIFICATIONS

---

Feature	Detail
Brand	superpow
Model Number	BN59-01199F
Compatible Devices	All Samsung Smart TV Models, LCD, LED, HDTV, 3D TVs
Connectivity Technology	Infrared (IR)

Feature	Detail
<b>Power Source</b>	2 x AAA Batteries (not included)
<b>Color</b>	Black
<b>Product Dimensions</b>	16 x 4 x 2 cm (approximately 6.3 x 1.6 x 0.8 inches)
<b>Item Weight</b>	60 g (approximately 2.1 oz)
<b>Special Features</b>	Universal compatibility, Infrared transmission



Remove the battery cover from the remote.



Put the new AAA batteries into the remote.  
( Not Included )



You can control your player with your remote.

*Image: Visual representation of the remote control's dimensions in inches.*

## **WARRANTY AND SUPPORT**

For warranty information or technical support regarding your superpow Universal Samsung TV Remote Control, please refer to the documentation provided with your purchase or contact the seller directly through the platform where the product was acquired. Specific warranty terms and support channels may vary.

For general inquiries or to purchase replacement parts, please visit the official superpow brand page or contact their customer service.

*Note: This remote is a third-party universal replacement and is not manufactured by Samsung.*