

Artis BT303

Artis BT303 Portable Bluetooth Party Speaker User Manual

Model: BT303

1. INTRODUCTION

Thank you for choosing the Artis BT303 Portable Bluetooth Party Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker. Please read it carefully before use to ensure optimal performance and longevity of your device.

The Artis BT303 is designed to deliver powerful audio with versatile connectivity options, including Bluetooth 5.0, USB, TF Card, and FM radio. It also features a wired microphone input for karaoke and announcements, and TWS (True Wireless Stereo) functionality for pairing two speakers for an enhanced stereo experience.

2. WHAT'S IN THE Box

Carefully unpack all items and ensure the following components are included:

- 1 x Artis BT303 Speaker
- 1 x Charging Cable
- 1 x Remote Control
- 1 x User Manual (this document)
- 1 x Wired Microphone
- 1 x Lanyard
- 1 x Warranty Registration Card

3. PRODUCT OVERVIEW

Familiarize yourself with the Artis BT303 speaker's components and controls.



Figure 3.1: Front view of the Artis BT303 speaker, showcasing the speaker grille with RGB LED lights and the control panel at the top.

3.1 Control Panel and Ports



**Mic
Input**



**FM
Radio**



**Volume/Track
Control**



**USB
Input**



**TF Card
Input**



Figure 3.2: Close-up of the top control panel, showing various inputs and buttons.

- **Mode Button:** Switches between Bluetooth, FM Radio, USB, and TF Card modes.
- **Volume Down / Previous Track:** Decreases volume or goes to the previous track.
- **Play/Pause Button:** Plays or pauses audio. In FM mode, long press to auto-scan stations.
- **Volume Up / Next Track:** Increases volume or goes to the next track.
- **TWS Button:** Activates True Wireless Stereo pairing mode.
- **USB Port:** For USB flash drive playback.
- **TF Card Slot:** For TF (MicroSD) card playback.
- **Mic Input:** 6.35mm jack for wired microphone connection.
- **Charging Port:** DC 5V input for charging the speaker.
- **Power Switch:** Turns the speaker on or off.

3.2 Remote Control

FULL FUNCTION REMOTE CONTROL



1 x Wired
Mic



Slim
Remote



Figure 3.3: The Artis BT303 speaker shown with its full-function remote control and wired microphone.

The included remote control provides convenient access to various functions from a distance.

4. SETUP

4.1 Charging the Speaker

1. Before first use, fully charge the speaker.
2. Connect the provided charging cable to the speaker's charging port and the other end to a standard USB power adapter (not included) or a computer USB port.
3. The charging indicator light will illuminate during charging and turn off when fully charged.

Note: The speaker is equipped with a powerful rechargeable 1500 mAh Lithium Polymer battery.

4.2 Powering On/Off

- To power on the speaker, slide the Power Switch to the "ON" position.
- To power off the speaker, slide the Power Switch to the "OFF" position.

5. OPERATING INSTRUCTIONS

5.1 Bluetooth Mode

1. Turn on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED light and an audible prompt.
2. Enable Bluetooth on your smartphone, tablet, or other Bluetooth-enabled device.
3. Search for "BT303" in the list of available Bluetooth devices.
4. Select "BT303" to connect. Once connected, the speaker will emit an audible confirmation, and the LED light will stop flashing.
5. You can now play audio from your device through the speaker.

Bluetooth Range: The speaker supports Bluetooth 5.0 technology with a range of up to 10 meters (33 feet) in open areas.

5.2 FM Radio Mode

1. Press the "Mode" button repeatedly until you enter FM Radio mode.
2. Long press the "Play/Pause" button to initiate an automatic scan for FM stations. The speaker will save all found stations.
3. Use the "Previous Track" and "Next Track" buttons to navigate between saved FM stations.

5.3 USB / TF Card Playback

1. Insert a USB flash drive into the USB port or a TF (MicroSD) card into the TF card slot.
2. The speaker will automatically switch to USB or TF Card mode and begin playing audio files. If it doesn't, press the "Mode" button to select the correct input.
3. Use the "Play/Pause", "Previous Track", and "Next Track" buttons to control playback.

5.4 TWS (True Wireless Stereo) Mode

TWS mode allows you to pair two Artis BT303 speakers together for a true stereo sound experience, doubling your audio output to 40 Watts.

DOUBLE UP YOUR MUSIC EXPERIENCE



NOW GET A TOTAL OF 40W STEREO OUTPUT
BY CONNECTING 2 BT303 SPEAKERS

Figure 5.1: Two Artis BT303 speakers connected in TWS mode for a combined 40W stereo output.

1. Ensure both BT303 speakers are powered on and not connected to any Bluetooth device.
2. On one of the speakers (this will be the primary speaker), press the "TWS" button. The speaker will emit a sound indicating it's searching for another speaker.
3. The two speakers will automatically pair with each other. Once successfully paired, you will hear a confirmation sound.
4. Now, connect your Bluetooth device to the primary speaker (the one you pressed TWS on). The audio will play in stereo through both speakers.

5.5 Wired Microphone Usage

1. Connect the wired microphone's plug into the "Mic Input" jack on the speaker's control panel.
2. Adjust the microphone volume using the speaker's main volume controls or the remote control.
3. You can use the microphone while playing music from any source (Bluetooth, USB, TF, FM).

6. MAINTENANCE

6.1 Cleaning

- Always power off the speaker before cleaning.
- Use a soft, dry cloth to wipe the exterior of the speaker.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- Avoid getting moisture into any openings.

6.2 Battery Care

- To prolong battery life, avoid fully discharging the battery frequently.
- Charge the speaker regularly, even if not in use, to maintain battery health.
- Store the speaker in a cool, dry place when not in use for extended periods.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is low or depleted.	Charge the speaker fully using the provided charging cable.
No sound from speaker.	Volume is too low; Incorrect mode selected; Device not connected.	Increase volume on speaker and connected device. Press "Mode" button to select correct input. Ensure Bluetooth device is paired or USB/TF card is inserted correctly.
Bluetooth pairing fails.	Speaker is not in pairing mode; Device is too far; Interference.	Ensure speaker is in Bluetooth mode and flashing. Move device closer to speaker. Turn off other Bluetooth devices to reduce interference. Forget "BT303" on your device and try pairing again.
Microphone not working.	Microphone not fully inserted; Microphone volume too low.	Ensure the microphone plug is fully inserted into the Mic Input. Increase the speaker's volume.
FM radio reception is poor.	Weak signal; Environmental interference.	Try repositioning the speaker. Perform an auto-scan again.

8. SPECIFICATIONS

Feature	Detail
Model	BT303
Output Wattage	20 Watts RMS
Driver Size	6.5 inches
Bluetooth Version	5.0
Bluetooth Range	Up to 10 meters
Battery Type	Lithium Polymer

Feature	Detail
Battery Capacity	1500 mAh
Power Source	Battery Powered
Connectivity Modes	Bluetooth, USB, TF Card, FM Radio, Wired Mic, AUX
Audio Input	Wired Mic, AUX
Product Dimensions (LxWxH)	20 x 21 x 26 cm
Item Weight	1.5 kg
Signal-to-noise ratio (dB)	95 dB

9. WARRANTY AND SUPPORT

9.1 Warranty Information

The Artis BT303 Portable Bluetooth Party Speaker comes with a **1 Year Warranty** from the date of purchase. Please retain your purchase receipt and the warranty registration card for any warranty claims.

The warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or natural disasters.

9.2 Customer Support

For any queries, technical assistance, or warranty claims, please contact Artis India customer care:


- **Customer Care Numbers:** 1800 123 8195 / 1800 120 8195
- **Email:** inquiry@artis.in

Please have your product model number (BT303) and purchase details ready when contacting support.

© 2024 Artis India. All rights reserved.
Artis is a registered trademark.

Documents - Artis – BT303

[\[pdf\]](#)

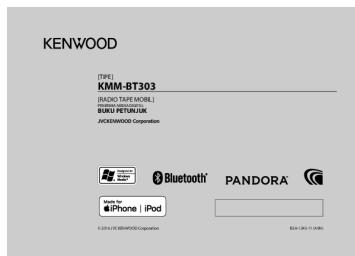

KMM BT303 Nonaktifkan mode hemat daya pada perangkat Android ANDROID ERROR NA DEVICE
Hubungkan kembali Nyalakan B5A 1345 11 manuals jvckenwood files |||
TIPE KMM-BT303 RADIO TAPE MOBIL PENERIMA MEDIA DIGITAL BUKU
PETUNJUK 2016 JVC KENWOOD Corporation B5A-1345-11 A9N ISI SEBELUM
MENGGUNAKAN 2 DASAR-DASAR 3 MEMULAI 4 1 Memilih bahasa tampilan dan
membatalkan demonstrasi 2 Mengatur jam dan tanggal 3 Menetapkan pengaturan
awal RADIO ...

lang:id score:22 filesize: 455.21 K page_count: 32 document date: 2021-07-23