

## Kavie KV-33-UCP

# Kavie Kids Digital Unicorn Watch KV-33-UCP Instruction Manual

Model: KV-33-UCP

## 1. INTRODUCTION

---

This manual provides detailed instructions for the operation and maintenance of your Kavie Kids Digital Unicorn Watch, model KV-33-UCP. This watch is designed for children aged 3-10, featuring a digital display, 7-color LED backlight, alarm, stopwatch, and water resistance. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your watch.



Image 1: Kavie Kids Digital Unicorn Watch (Pink variant).

## 2. PRODUCT OVERVIEW

The Kavie Kids Digital Unicorn Watch combines functionality with a child-friendly design. It includes essential features for daily use and learning time management.

### Key Features:

- Digital Time Display (12H/24H format)

- 7-Color LED Backlight
- Alarm Function
- Stopwatch Function
- Date and Week Display
- 3 ATM (30M) Water Resistance
- Shockproof Design
- Comfortable and Non-Toxic Silicone Strap

### Watch Components:



Image 2: Diagram illustrating the watch's buttons and display elements.

- **LIGHT Button (Top Left):** Activates the backlight. Hold to change backlight color.
- **MODE Button (Bottom Left):** Cycles through display modes (Time, Alarm, Stopwatch).
- **START/STOP Button (Top Right):** Used to start/stop stopwatch, adjust values during setting.
- **RESET Button (Bottom Right):** Used to reset stopwatch, select digits during setting.
- **Display:** Shows time, date, day, and active functions (e.g., alarm on, PM indicator).

## 3. SETUP

---

### Battery Installation/Replacement:

The watch comes with one CR2 battery pre-installed. When the display dims or stops functioning, the battery may need replacement. Battery replacement should be performed by an adult or a qualified technician to ensure water resistance is maintained.

- **Battery Type:** 1 x CR2 battery (included)

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Setting Time and Date:

1. From the normal time display, press the **MODE** button three times. The seconds will begin to flash.
2. Press the **RESET** button to cycle through the setting options: Seconds → Hours → Minutes → Month → Date → Day of Week.
3. While the desired value is flashing, press the **START/STOP** button to adjust the value.
4. Once all settings are correct, press the **MODE** button to return to the normal time display.

### 4.2 12H/24H Time Format:

In the normal time display mode, press the **START/STOP** button to toggle between 12-hour (with AM/PM indicator) and 24-hour formats.

### 4.3 Setting the Alarm:

1. From the normal time display, press the **MODE** button twice to enter Alarm setting mode. The hour digits will flash.
2. Press the **START/STOP** button to adjust the alarm hour.
3. Press the **RESET** button to select the minute digits.
4. Press the **START/STOP** button to adjust the alarm minutes.
5. Press the **MODE** button to confirm and exit Alarm setting mode.

### 4.4 Turning Alarm ON/OFF:

In Alarm setting mode (after pressing **MODE** twice), press the **START/STOP** and **RESET** buttons simultaneously to toggle the alarm ON or OFF. An alarm icon will appear on the display when the alarm is active.

### 4.5 Using the Stopwatch:

1. From the normal time display, press the **MODE** button once to enter Stopwatch mode. The display will show 00:00:00.
2. Press the **START/STOP** button to start the stopwatch.
3. Press the **START/STOP** button again to pause the stopwatch.
4. Press the **RESET** button to reset the stopwatch to 00:00:00.
5. Press the **MODE** button to return to the normal time display.

### 4.6 Backlight Function:

# LUMINOUS DISPLAY

Use import EL Lamp, Press 'LIGHT' button to see the time clearly in the light.



Image 3: The watch display with various backlight colors.

- Press the **LIGHT** button (top left) to illuminate the display for a few seconds.
- To change the backlight color, press and hold the **LIGHT** button for approximately 3 seconds. The color will cycle through dark blue, green, red, sky blue, orange, pink, and purple. Release the button when your desired color is displayed.

## 4.7 Hourly Chime:

To activate or deactivate the hourly chime, press the **MODE** button and the **START/STOP** button simultaneously while in the normal time display. A small icon (often a bell or signal) will appear or disappear to indicate the chime status.

## 5. WATER RESISTANCE

This watch is rated for 3 ATM (30 meters) water resistance. This means it is suitable for daily use and can withstand splashes, rain, hand washing, and brief immersion in water such as showering or swimming. It is not suitable for diving or prolonged underwater activities.

## Water-Resistant



Sweat



Hand-wash



Shower



Raining



Image 4: Icons demonstrating the watch's water resistance capabilities.

### Important Note:

- **DO NOT** press any buttons while the watch is submerged in water.
- Avoid exposing the watch to extreme hot or cold temperatures, as this can compromise the water resistance seals.
- Excessive water contact or improper use may shorten the watch's lifespan.

## 6. MAINTENANCE AND CARE

To ensure the longevity and proper functioning of your Kavie Kids Digital Unicorn Watch, follow these care guidelines:

- **Cleaning:** Wipe the watch with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the watch in a dry place away from direct sunlight and extreme temperatures when not in use.
- **Impact:** While the watch is designed to be shockproof, avoid unnecessary drops or impacts to prevent damage.
- **Strap Care:** The silicone strap is durable and non-toxic. Clean it regularly to prevent accumulation of dirt or sweat.

# Comfortable & Safe For Kids



Image 5: Details of the comfortable and safe silicone strap with adjustable buckle.

## 7. TROUBLESHOOTING

If you encounter issues with your watch, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Display is dim or blank.	Low or dead battery.	Replace the CR2 battery.
Cannot set time/alarm.	Incorrect button sequence.	Refer to Section 4.1 and 4.3 for detailed instructions. Ensure you are in the correct mode before pressing buttons.
Alarm sounds unexpectedly.	Alarm is active.	Refer to Section 4.4 to turn off the alarm.
Hourly chime beeps.	Hourly chime is active.	Refer to Section 4.7 to deactivate the hourly chime.

Problem	Possible Cause	Solution
Water inside the watch.	Buttons pressed underwater, or seals compromised.	Stop using the watch immediately. Seek professional repair. Avoid pressing buttons underwater.

## 8. SPECIFICATIONS



Image 6: Detailed dimensions of the Kavie Kids Digital Unicorn Watch.

- **Model Number:** KV-33-UCP
- **Product Dimensions:** 3.2 x 3.2 x 2.7 inches
- **Item Weight:** 1.59 ounces
- **Water Resistance:** 3 ATM (30 meters)
- **Battery:** 1 x CR2 (included)
- **Clasp Type:** Buckle
- **Strap Material:** Silicone
- **Display Type:** Digital LED

## 9. WARRANTY AND SUPPORT

---

For warranty information or technical support regarding your Kavie Kids Digital Unicorn Watch, please contact the manufacturer directly through their official channels. Retain your purchase receipt as proof of purchase.