

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [SUPALAND](#) /

› [SUPALAND FOBIK Replacement Remote Control User Manual](#)

SUPALAND 2008-2010commander

SUPALAND FOBIK Replacement Remote Control User Manual

Model: IYZ-C01C

1. INTRODUCTION

Thank you for choosing the SUPALAND FOBIK Replacement Remote Control. This manual provides essential information for the proper use, programming, and maintenance of your new key fob. This product is an aftermarket replacement and does not feature original manufacturer branding or logos.

Important Compatibility Note:

- This key fob is designed exclusively for vehicles equipped with a regular key/keyed ignition system.
- It is **NOT compatible** with vehicles that feature a push-button start system.
- It **DOES NOT WORK** for vehicles with Passive Entry (also known as PEPS, Push-button Ignition, Smart Key, or proximity system).

100% BRAND NEW REMOTE KEY FOB

-BATTERIES AND ELECTRONICS ARE INSTALLED-

Every Single Keyless Entry Remote Control Car Key Fob is Fully Pre-tested by Professional Locksmith Tools before Shipping.

Please NOTE:

1.This is Aftermarket Remote Key Fob/Non-OEM, and It Doesn't Come with LOGO or Badge.

2.All product logos, brands, names and or other trademarks within our sales information are the property of their respective owners. Vehicles brands, names, Logos or other trademarks are used to simplify the identification of the proper parts for a particular vehicle. None of the companies or trademarks affiliate with, endorse or sponsor us or our products.

Image: Two SUPALAND FOBIK replacement key fobs, emphasizing their new condition and the fact that batteries and electronics are pre-installed and tested.

2. COMPATIBILITY

This replacement key fob is compatible with specific Jeep models and part numbers. Please verify your vehicle's make, model, and year, as well as the FCC ID and part numbers of your original key fob, to ensure proper compatibility.

Compatible Jeep Models:

- Jeep Grand Cherokee: 2008, 2009, 2010, 2011, 2012, 2013
- Jeep Commander: 2008, 2009, 2010

Compatible FCC ID and Part Numbers:

- FCC ID: IYZ-C01C / M3N5WY783X
- Replacement Part Numbers:
 - 68066849 (including variants: 68066849AA, 68066849AB, 68066849AC, 68066849AD, 68066849AE,

68066849AF)

- 68043895 (including variants: 68043895AA, 68043895AB, 68043895AC)
- 05026309 (including variants: 05026309AD, 05026309AB, 05026309AF, 05026309AE, 05026309AC)
- 68079516 (including variants: 68079516AA, 68079516AB, 68079516AC)

COMPATIBILITY

Compatible with **Jeep** Models:

Grand Cherokee 2008-2013

Commander 2008-2010

**Please confirm the model
before purchasing!**



Image: A visual guide confirming compatibility with Jeep Grand Cherokee (2008-2013) and Commander (2008-2010) models.

3. SPECIFICATIONS

The SUPALAND FOBIK Replacement Remote Control is manufactured to meet specific technical standards for reliable performance.

Feature	Specification
FCC ID	IYZ-C01C / M3N5WY783X

Feature	Specification
Frequency	433 MHz
Battery Type	CR2 Coin / Button Cell
Battery Material	3V Lithium Battery
Number of Buttons	5 (4+1 configuration)
Item Weight	24 grams
Product Dimensions (L x W x H)	7.5 x 3.2 x 2 cm
Maximum Range	10 Meters (approx. 33 feet)

SPECIFICATION

FCC ID: IYZ-C01C / M3N5WY783X

Part Numbers: 68043895 (AA, AB; AC)

68079516 (AA, AB, AC)

05026309 (AD; AB; AF; AE; AC)

68066849 (AA, AB, AC, AD, AE, AF)

Frequency: 433 Mhz

Battery Type: Coin / Button Cell

Battery Material: Lithium 3v Battery

4+1 Button Remote



Image: A detailed overview of the key fob's technical specifications, including FCC ID, compatible part numbers, frequency, and battery information.

4. SETUP AND PROGRAMMING

Programming your new key fob is a crucial step for it to function with your vehicle. The method of programming depends on your vehicle's model year and the number of working keys you currently possess.

Programming Requirements:

1. **For Vehicles Manufactured Before 2010:** If you have two existing, working keys for your vehicle, you may be able to perform self-programming. If you only have one working key or no working keys, professional assistance from a locksmith or dealership will be required.
2. **For Vehicles Manufactured in 2010 or Later:** All programming for these vehicles must be performed by a professional locksmith. Self-programming is not supported for these model years.
3. **Key Blade Cutting:** The uncut key blade included with your new fob must be cut by a local locksmith or hardware store to match your vehicle's ignition.

Self-Programming Instructions (if applicable):

A link to detailed self-programming instructions will be provided with your order. You can also find general instructions on the following websites:

www.keyfobprogram.com

www.programyourremote.com

Note: When accessing these sites, you may encounter advertisements. Simply close any pop-ups or ads to view the instructions. No credit card information or account creation is required.

PROGRAMMING

1. It Requires Two Working Keys to Perform Self-Programming for Vehicles before 2010, Otherwise Locksmiths or Dealership is Required. 2010+ Vehicles Must be Programmed by Locksmith. Uncut Key Blade Needs to Be Cut by Local Locksmith or Hardware Shop.
2. This Key Fob Only Supports Regular Key/Keyed Ignition Vehicles. **It Doesn't Support Push Start Button Vehicles.**

3. The Programming Instructions:

Here is the links:

www.keyfobprogram.com

www.programyourremote.com

(Note: no need to input credit card or create account, just close the ad and you will see the instructions.)



Image: A visual summary of the programming process, highlighting the need for two working keys for self-programming on older vehicles and professional programming for newer models.

5. OPERATING INSTRUCTIONS

Once successfully programmed and the key blade cut, your SUPALAND FOBK remote control will provide convenient access and control over your vehicle's functions.





Image: A single SUPALAND FOBIK key fob, showing the main body and the separate, uncut key blade.

Button Functions:

- **Lock Button (🔒):** Press once to lock all vehicle doors.

- **Unlock Button (🔑):** Press once to unlock the driver's door. Press twice within a few seconds to unlock all vehicle doors.
- **Panic Button (Red "PANIC" button):** Press and hold for a few seconds to activate the vehicle's alarm system (horn and lights). Press again to deactivate.
- **Remote Start Button (Circular arrow with "x2"):** Press twice within a few seconds to remotely start your vehicle. The vehicle will run for a preset time (usually 10-15 minutes) before shutting off. Press again to turn off the engine remotely. *(Note: Vehicle must be equipped with remote start feature for this button to function.)*
- **Trunk/Rear Hatch Release Button (Car with open trunk and "x2"):** Press twice within a few seconds to open the trunk or rear hatch. *(Note: Vehicle must be equipped with a power trunk/hatch release for this button to function.)*

Insert the cut key blade into your vehicle's ignition to start the engine manually.

6. MAINTENANCE

To ensure the longevity and optimal performance of your key fob, follow these simple maintenance guidelines:

- **Battery Replacement:** The key fob uses a CR2 coin/button cell battery. When the remote's range decreases or it stops responding, it's likely time to replace the battery. Refer to your vehicle's owner's manual or a professional for specific instructions on opening the fob and replacing the battery without damaging the internal components.
- **Keep Dry:** Avoid exposing the key fob to water or excessive moisture, as this can damage the internal electronics.
- **Avoid Extreme Temperatures:** Do not leave the key fob in direct sunlight or in extremely hot or cold environments for extended periods.
- **Handle with Care:** Avoid dropping the key fob or subjecting it to strong impacts.
- **Cleaning:** Clean the exterior of the fob with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.

7. TROUBLESHOOTING

If you encounter issues with your SUPALAND FOBIK remote control, consider the following troubleshooting steps:

- **Remote Not Responding:**
 - Check the battery. A low or dead battery is a common cause. Replace it if necessary.
 - Ensure you are within the operating range (approximately 10 meters) of the vehicle.
 - Verify that the key fob was programmed correctly. If unsure, attempt reprogramming or consult a professional locksmith.
- **Vehicle Does Not Start with Fob Present (Push-Button Start Vehicles):**
 - As stated in the introduction, this key fob is **NOT compatible** with push-button start or passive entry systems. If your vehicle has these features, this product will not allow for keyless ignition. You would typically need to insert the key fob into a specific ignition slot or use the physical key blade to start the vehicle.
- **Buttons Not Functioning Correctly:**
 - Ensure the buttons are not stuck or obstructed.
 - If only certain buttons fail, it might indicate internal damage or a programming issue specific to that function.
- **Reduced Range:**
 - Replace the battery.
 - Environmental interference (e.g., strong radio signals, large metal objects) can affect range. Try operating the fob in a different location.

If these steps do not resolve the issue, it is recommended to contact a professional locksmith or the seller for further assistance.

8. WARRANTY AND SUPPORT

For information regarding the product warranty, please refer to the terms and conditions provided by your retailer or contact the seller directly. SUPALAND is committed to providing quality products and customer satisfaction.

For technical support or inquiries not covered in this manual, please reach out to the seller through your purchase platform.