

[Manuals.plus](#) /

› [Emeril Lagasse](#) /

› Emeril Power Grill 360 User Manual

Emeril Lagasse ELPG

Emeril Power Grill 360 User Manual

Model: ELPG

1. INTRODUCTION

The Emeril Power Grill 360 is a versatile 6-in-1 countertop convection toaster oven designed to enhance your cooking experience. This appliance combines the functions of an indoor grill, air fryer, roaster, toaster, baker, and dehydrator, offering a wide range of culinary possibilities. Its compact design and multiple features make it an ideal addition to any kitchen.

Please read this manual thoroughly before operating the appliance to ensure safe and efficient use. Keep this manual for future reference.



Figure 1.1: Front view of the Emeril Power Grill 360, showcasing its sleek stainless steel design and glass door.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury.

- Always ensure the appliance is unplugged from the outlet when not in use and before cleaning.
- Do not immerse the cord, plug, or housing in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.

- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use attachments not recommended by the appliance manufacturer; this may cause injuries.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off,” then remove plug from wall outlet.
- Do not use appliance for other than intended household use.
- Surfaces may become hot during use. Do not touch hot surfaces. Use handles or knobs.
- Ensure adequate ventilation around the appliance during operation.

3. INCLUDED COMPONENTS

Your Emeril Power Grill 360 package includes the following items:

- Emeril Power Grill 360 Unit
- User Manual (this document)
- Crumb Tray
- Wire Rack
- Other accessories for specific functions (e.g., Air Fry Basket, Grill Plate, Baking Pan)

4. SETUP AND FIRST USE

4.1 Unpacking

Carefully remove all components from the packaging. Remove any protective film or packaging materials from the appliance and accessories. Retain the packaging for future storage or shipping.

4.2 Placement

Place the unit on a stable, level, heat-resistant surface. Ensure there is at least 6 inches of clearance on all sides of the appliance for proper ventilation. Do not place the unit directly against a wall or under cabinets that may be damaged by heat or steam.

4.3 Initial Cleaning

Before first use, wipe the exterior of the unit with a clean, damp cloth. Wash all removable accessories (crumb tray, wire rack, air fry basket, grill plate, baking pan) in warm, soapy water. Rinse thoroughly and dry completely. Do not immerse the main unit in water.

4.4 Power Connection

Plug the power cord into a grounded 120V AC electrical outlet. The display will illuminate, indicating the unit is ready for use.

5. OPERATING INSTRUCTIONS

The Emeril Power Grill 360 features intuitive touch controls and a rotary dial for setting temperature and time. The digital display provides clear feedback on current settings.

5.1 General Controls

- **Function Buttons:** Select desired cooking mode (Grill, Air Fry, Roast, Toast, Bake, Dehydrate).
- **Temperature/Time Dial:** Rotate to adjust temperature or cooking time. Press to confirm selection or switch between temperature and time adjustment.
- **Start/Pause Button:** Initiates or pauses the cooking cycle.
- **Light Button:** Activates the interior light for viewing food.

5.2 Cooking Functions

5.2.1 Grill Function

Use the top grilling surface for searing meats, vegetables, and more. Ensure the glass lid is in place during grilling to minimize splatter and retain heat.

1. Place the grill plate on the top surface of the unit.
2. Select the 'Grill' function.
3. Adjust temperature and time as needed using the dial.
4. Allow the grill to preheat.
5. Place food directly on the grill plate.
6. Close the glass lid.



Figure 5.1: Top view of the appliance demonstrating the grilling function with steaks and bell peppers.

5.2.2 Air Fry Function

Achieve crispy results with little to no oil. Ideal for fries, chicken wings, and other fried favorites.

1. Place food in the air fry basket.
2. Insert the air fry basket into the oven cavity on the designated rack level.
3. Select the 'Air Fry' function.
4. Set desired temperature and time.

5. Press Start. Shake the basket halfway through cooking for even crisping.



Figure 5.2: The appliance air frying chicken wings, showing the air fry basket inside the oven cavity.

5.2.3 Roast Function

Perfect for roasting vegetables, small cuts of meat, or casseroles.

1. Place food in a suitable roasting pan or on the wire rack.
2. Insert into the oven cavity.
3. Select the 'Roast' function.
4. Set temperature and time.
5. Press Start.



Figure 5.3: The appliance simultaneously grilling chicken on the top surface and roasting mixed vegetables in a pan within the oven cavity.

5.2.4 Toast, Bake, and Dehydrate Functions

Follow similar steps for Toast, Bake, and Dehydrate functions, selecting the appropriate function button and adjusting temperature and time as required for your recipe.



Figure 5.4: The appliance performing both air frying (fries) and grilling (steaks) functions simultaneously, demonstrating its multi-functionality.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your appliance. Always unplug the unit and allow it to cool completely before cleaning.

6.1 Interior and Exterior Cleaning

- Wipe the exterior with a damp cloth and mild detergent. Do not use abrasive cleaners or scouring pads.
- For the interior, wipe down with a damp cloth. For stubborn stains, use a non-abrasive cleaner designed for oven interiors.

6.2 Accessory Cleaning

- The crumb tray, wire rack, air fry basket, grill plate, and baking pan are generally dishwasher safe. Refer to the specific accessory instructions for confirmation.
- For manual cleaning, wash in warm, soapy water, rinse thoroughly, and dry completely before storing or reassembling.



Figure 6.1: Various accessories of the Emeril Power Grill 360, including racks and trays, placed in a dishwasher for cleaning.

7. TROUBLESHOOTING

If you encounter issues with your Emeril Power Grill 360, please consult the following common problems and solutions before contacting customer support.

Problem	Possible Cause	Solution
Unit does not turn on.	Not plugged in; power outlet malfunction.	Ensure power cord is securely plugged into a working outlet. Check circuit breaker.

Problem	Possible Cause	Solution
Food is not cooking evenly or taking too long.	Incorrect temperature/time setting; overcrowding; preheating not completed.	Verify settings. Do not overcrowd the basket/tray. Allow unit to preheat fully before adding food. Adjust cooking time as needed.
Smoke coming from the unit.	Food residue/grease buildup; fatty foods.	Clean the unit and accessories thoroughly. For fatty foods, use the drip tray and ensure proper ventilation.
Grill function not heating.	Lid not properly closed; function not selected.	Ensure the glass lid is fully closed. Confirm 'Grill' function is selected and temperature/time are set.

8. SPECIFICATIONS

- **Model Name:** ELPG
- **Product Dimensions:** 20 x 15 x 10 inches
- **Item Weight:** 27 pounds
- **Power Source:** Electric
- **Control Type:** Touch Control
- **Door Style:** Dropdown Door
- **Material:** Stainless Steel
- **UPC:** 752356840013

9. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your purchase or visit the official Emeril Lagasse website. If you require technical support or have questions not covered in this manual, please contact customer service through the contact information provided on the product packaging or the official brand website.

© 2024 Emeril Lagasse. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I make the Emeril Lagasse ELPG Power Grill 360 stop beeping when it displays the 'Add Food' prompt?

On the Emeril Lagasse Power Grill 360 (Model ELPG), the "Add Food" prompt and accompanying beeping occur after the preheating cycle is complete. To stop the beeping and begin the cooking cycle, follow these...

[Read full answer](#)