

[Manuals.plus](#) /

› [Melchioni](#) /

› Melchioni Family Frosty Ice Cream Maker Instruction Manual

## Melchioni 118700200

# Melchioni Family Frosty Ice Cream Maker Instruction Manual

Model: 118700200

## 1. INTRODUCTION

---

Thank you for choosing the Melchioni Family Frosty Ice Cream Maker. This fully automatic appliance is designed to prepare delicious ice cream, sorbets, frozen yogurt, and other specialties quickly and efficiently. With its integrated compressor, you can enjoy homemade frozen treats in approximately 60 minutes without the need for pre-cooling ingredients or the mixing bowl. Please read this manual thoroughly before first use to ensure safe and optimal operation.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

- Always ensure the appliance is placed on a stable, flat, and dry surface.
- Do not immerse the main unit in water or any other liquid. Clean only with a damp cloth.
- Keep the appliance out of reach of children.
- Do not operate the appliance with a damaged cord or plug. Contact customer support for repairs.
- Unplug the appliance from the power outlet before cleaning, assembling, or disassembling parts.
- Avoid touching moving parts during operation.
- Do not block ventilation openings on the appliance.
- This appliance is for household use only.
- Ensure the voltage indicated on the appliance matches your local power supply before connecting.

## 3. PRODUCT OVERVIEW

---

Familiarize yourself with the components of your Melchioni Family Frosty Ice Cream Maker.



Figure 1: Overall view of the Melchioni Family Frosty Ice Cream Maker.



Figure 2: The transparent lid features a convenient opening for adding ingredients during mixing and houses the stirring paddle.



Figure 3: The removable non-stick inner bowl and stirring paddle, designed for easy cleaning.



Figure 4: The digital control panel with LCD display, Power, Start/Stop, and Timer buttons.

## Components:

- Main Unit with Integrated Compressor
- Removable Non-Stick Inner Bowl (1.5 L capacity)
- Stirring Paddle
- Transparent Lid with Ingredient Opening
- Digital Control Panel with LCD Display

## 4. SETUP

---

1. Unpack all components and remove any packaging materials.
2. Clean the removable inner bowl, stirring paddle, and lid with warm soapy water. Rinse thoroughly and dry completely.
3. Place the main unit on a clean, dry, and stable surface. Ensure there is adequate ventilation around the appliance.
4. Insert the clean, dry inner bowl into the main unit.
5. Place the stirring paddle into the center of the inner bowl, ensuring it is properly seated.
6. Place the transparent lid onto the inner bowl and secure it.
7. Plug the power cord into a grounded electrical outlet. The LCD display will illuminate.

## 5. OPERATING INSTRUCTIONS

---

### Preparing Ice Cream, Sorbets, or Frozen Yogurt:

1. Prepare your desired ice cream, sorbet, or frozen yogurt mixture. Ensure the mixture is chilled for best results, though pre-cooling is not strictly necessary due to the integrated compressor.
2. Pour the mixture into the removable inner bowl through the ingredient opening in the lid. Do not fill above the maximum fill line to prevent overflow during expansion.
3. Press the 'POWER' button to turn on the appliance.
4. Use the 'TIMER' button to set the desired processing time. The digital timer can be set from 10 to 60 minutes in increments. A typical processing time for ice cream is around 60 minutes.
5. Press the 'START/STOP' button to begin the mixing and cooling process. The stirring paddle will rotate, and the compressor will activate.
6. You can add additional ingredients, such as chocolate chips, nuts, or fruit pieces, through the lid opening during the last 5-10 minutes of the cycle.
7. Once the set time has elapsed, the appliance will automatically stop. The ice cream should have a soft-serve consistency. For a firmer consistency, transfer the ice cream to an airtight container and freeze for an additional 1-2 hours.
8. Press the 'POWER' button to turn off the appliance and unplug it from the outlet.

### Using the Hot and Cold Function (for Yogurt):

This appliance also features a hot and cold function, allowing for yogurt preparation. Specific instructions for yogurt making may vary based on recipes. Generally, the hot function is used for heating milk to the required temperature for cultures, and the cold function maintains the optimal fermentation temperature. Refer to your yogurt recipe for precise temperature and timing requirements.

## 6. MAINTENANCE AND CLEANING

---

Regular cleaning ensures the longevity and hygiene of your ice cream maker.

1. Always unplug the appliance before cleaning.
2. Remove the lid, stirring paddle, and inner bowl from the main unit.
3. Wash the inner bowl, stirring paddle, and lid with warm water and a mild dish soap. These components are removable and washable. Rinse thoroughly and dry completely with a soft cloth.
4. Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or scourers.
5. Never immerse the main unit in water or place it under running water.
6. Ensure all parts are completely dry before reassembling or storing the appliance.

## 7. TROUBLESHOOTING

| Problem                          | Possible Cause                                                        | Solution                                                                                                                                                                          |
|----------------------------------|-----------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Appliance does not turn on.      | Not plugged in; power outage; faulty power cord.                      | Ensure the appliance is securely plugged into a working outlet. Check your circuit breaker. Contact customer support if the cord is damaged.                                      |
| Ice cream is not firm enough.    | Processing time too short; mixture not cold enough; too much mixture. | Increase processing time. Ensure ingredients are chilled before adding. Do not exceed the maximum fill line. For firmer results, freeze in a separate container after processing. |
| Stirring paddle is not rotating. | Paddle not correctly installed; mixture too thick; motor overload.    | Ensure the paddle is properly seated. Check if the mixture is too thick; thin it slightly if necessary. Turn off and restart the machine.                                         |
| Loud noise during operation.     | Appliance not on a flat surface; parts not assembled correctly.       | Ensure the appliance is on a stable, flat surface. Check that the inner bowl and stirring paddle are correctly installed.                                                         |

## 8. SPECIFICATIONS

- **Brand:** Melchioni
- **Model Name:** Frosty
- **Model Number:** 118700200
- **Color:** White
- **Capacity:** 1.5 Liters
- **Power:** 150 W
- **Power Supply:** AC 220-240V ~ 50-60Hz
- **Refrigerant:** R600a
- **Noise Level:** 55dB(A)
- **Operating Mode:** Automatic
- **Digital Timer Settings:** 10, 20, 30, 40, 50, 60 minutes
- **Material:** Stainless steel (inner bowl), Plastic (housing, lid)
- **Included Components:** Removable inner bowl, stirring paddle
- **Recommended Uses:** Preparation of ice cream, sorbets, frozen yogurt, smoothies, and other specialties

- **Country of Origin:** China

## 9. WARRANTY AND SUPPORT

---

For warranty information, product support, or service inquiries, please refer to the warranty card included with your purchase or contact Melchioni customer service directly. Keep your proof of purchase for warranty claims.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

#### Name

Anonymous

#### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

#### Question

Example: How do I reset this device or fix this error?

#### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**

---

Open the live page

<https://manuals.plus/asin/B0B3Z2K1C7>

More documents and user manuals: <https://manuals.plus/>