

[Manuals.plus](#) /

› [Frigidaire](#) /

› Frigidaire FHTC142WA2 Wall Air Conditioner User Manual

Frigidaire FHTC142WA2

Frigidaire FHTC142WA2 Wall Air Conditioner

User Manual

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Frigidaire FHTC142WA2 Wall Air Conditioner. Please read all instructions carefully before installation and use. Keep this manual for future reference.



Front view of the Frigidaire FHTC142WA2 Wall Air Conditioner, showcasing its white finish and control panel.

SAFETY INFORMATION

WARNING: To reduce the risk of fire, electrical shock, or injury, observe the following basic precautions:

- Ensure the unit is properly grounded.
- Do not operate the air conditioner with a damaged cord or plug.
- Do not insert fingers or foreign objects into the air discharge area.
- Always disconnect power before cleaning or servicing.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

WHAT'S IN THE BOX

- Universal Trim Kit
- Remote Control
- Frigidaire FHTC142WA2 Wall Air Conditioner Unit

SETUP AND INSTALLATION

The Frigidaire FHTC142WA2 is designed for through-the-wall installation and is not suitable for window use. It features a slide-out chassis for ease of installation and maintenance. Ensure the wall opening meets the required dimensions for proper fit and operation.

The unit's dimensions are approximately 14.5" (H) x 24" (W) x 21.5" (D). Proper installation is crucial for optimal performance and drainage. It is recommended to consult a qualified installer for through-the-wall mounting.

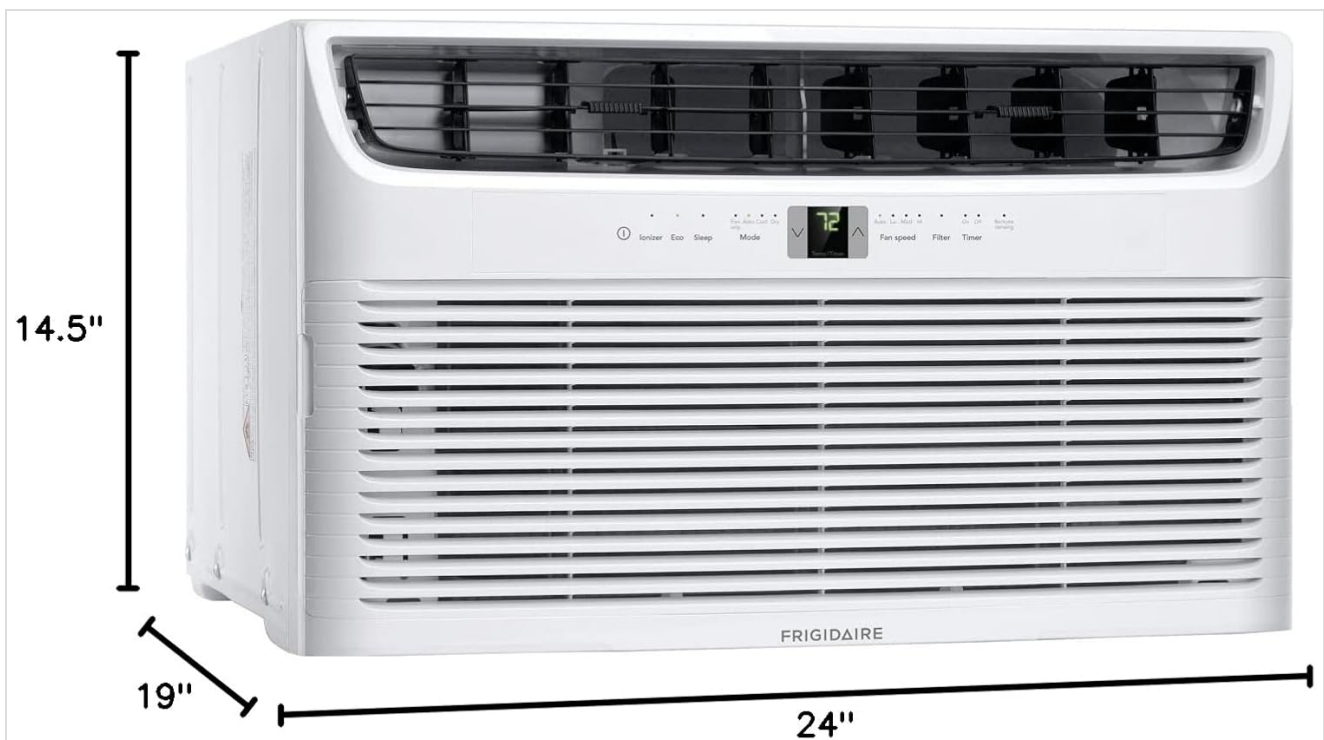


Diagram showing the dimensions of the Frigidaire FHTC142WA2 Wall Air Conditioner: 14.5 inches height, 24 inches width, and 19 inches depth.




The Frigidaire FHTC142WA2 Wall Air Conditioner seamlessly installed in a living room setting, demonstrating its compact and integrated appearance.

OPERATING INSTRUCTIONS

Your Frigidaire FHTC142WA2 Wall Air Conditioner offers various modes and settings for personalized comfort. The unit can be controlled via the intuitive control panel on the unit or the included remote control.

Control Panel Overview

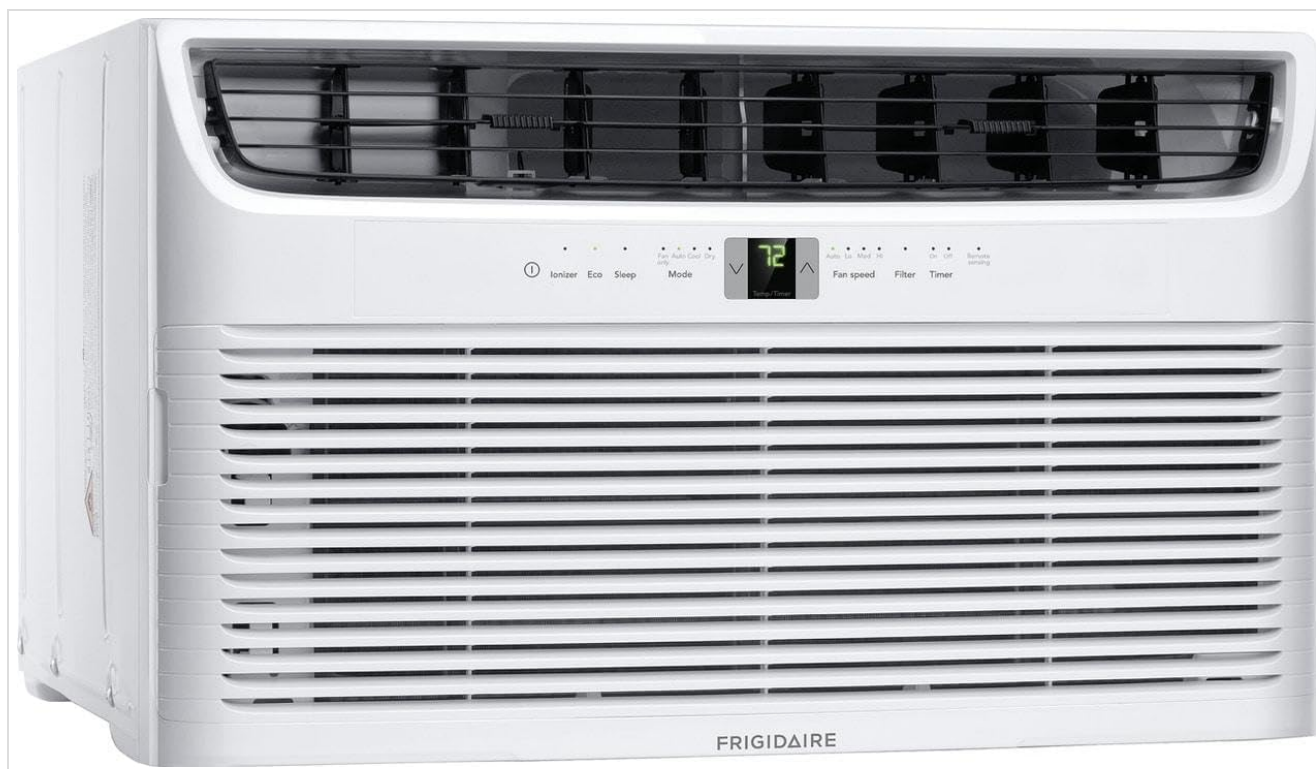

Close-up view of the control panel on the Frigidaire FHTC142WA2, showing buttons for Ionizer, Eco, Sleep, Mode, Fan Speed, Filter, and Timer, along with the digital temperature display.

- **Power Button:** Turns the unit on or off.
- **Mode Selection:** Cycle through Fan, Auto, Cool, and Dry modes.
- **Temperature Adjustment:** Use the up/down arrows to set your desired temperature.
- **Fan Speed:** Adjust fan speed settings (Auto, Low, Medium, High).
- **Programmable Timer:** Utilize the 24-hour on/off timer for convenience.
- **Sleep Mode:** Activates a quiet, energy-saving operation for nighttime.
- **Auto Restart:** The unit automatically resumes operation with previous settings after a power interruption.

Using the Remote Control

The remote control provides convenient access to all functions from a distance. Ensure there are no obstructions between the remote and the unit's receiver.

Note: No official seller videos are available for embedding at this time.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your air conditioner.

Cleaning the Washable Filter

The unit features an easy-to-clean mesh filter that captures dust from the air. It is recommended to clean the filter regularly, typically every two weeks, or more often depending on usage and air quality.

1. Disconnect power to the unit before cleaning.
2. Locate and remove the air filter from the front panel.

- 3. Wash the filter with warm, soapy water. Rinse thoroughly.
- 4. Allow the filter to air dry completely before reinserting it into the unit.

General Cleaning

- Wipe the exterior of the unit with a soft, damp cloth.
- Do not use harsh cleaners, waxes, or polishes.
- Ensure the air intake and exhaust vents are clear of obstructions.

TROUBLESHOOTING

If your air conditioner is not operating correctly, refer to the following common issues before contacting customer support.

Problem	Possible Cause	Solution
Unit does not turn on	No power, tripped circuit breaker, loose plug	Check power supply, reset breaker, ensure plug is secure.
Insufficient cooling	Dirty air filter, blocked air vents, room too large, doors/windows open	Clean filter, clear vents, ensure proper room size, close doors/windows.
Unit is noisy	Loose parts, unit not level, normal operating sounds	Check for loose components, ensure unit is level. Some noise is normal.
Water dripping outside	Normal condensation	This is normal during cooling operation. Ensure proper drainage setup.

For issues not listed or if problems persist, please contact Frigidaire Customer Support.

SPECIFICATIONS

Feature	Detail
Brand	Frigidaire
Model Number	FHTC142WA2
Cooling Capacity	14,000 BTU
Coverage Area	Up to 700 sq. ft.
Voltage	230 Volts
Wattage	1220 watts
Noise Level	58 dB
Dimensions (H x W x D)	14.5" x 24" x 21.5"
Item Weight	50 pounds
Efficiency (SEER)	9.3
Special Features	Auto restart, Dust Filter, Fan speed control, Remote Controlled, Sleep Mode

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Frigidaire website. You can also find assistance through the customer support link provided by your retailer.

For direct support, visit the [Frigidaire Store on Amazon](#).