

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [YOOREAL](#) /

› YOOREAL Digital Countdown Timer YR-HM202A User Manual

## YOOREAL YR-HM202A

# YOOREAL Digital Countdown Timer YR-HM202A User Manual

Model: YR-HM202A

## 1. INTRODUCTION

---

The YOOREAL Digital Countdown Timer YR-HM202A is a versatile device designed for precise time tracking. It supports both countdown and count-up functions, with a maximum range of 9999 days, 23 hours, 59 minutes, and 59 seconds. Its large LCD display ensures easy readability, and the integrated loud alarm provides clear notifications. The timer features a magnetic design for convenient placement and independent buttons for straightforward operation. This manual provides detailed instructions for setup, operation, and maintenance.

# RETIREMENT COUNTDOWN TIMER

Large LCD, Independent display.



Image 1.1: YOOREAL Digital Countdown Timer in use, showing its large display.

## 2. PACKAGE CONTENTS

---

Upon opening the package, verify that all components are present:

- 1 x YOOREAL Digital Countdown Timer YR-HM202A
- 1 x Instruction Manual
- 2 x CR2032 Lithium Metal Batteries (pre-installed or included separately)

Video 2.1: Unboxing and overview of the YOOREAL Digital Countdown Timer, demonstrating package contents and initial setup.

## 3. PRODUCT OVERVIEW

---

The timer features a clear LCD display and several control buttons on the back for easy configuration. It also includes magnetic panels for mounting and a sound output for alarms.

### 3.1. Controls and Features

- ▲ **(Up) Button:** Increases the selected value during setting.
- ▼ **(Down) Button:** Decreases the selected value during setting.
- **(Power) Button:** Turns the timer on or off.
- **SET Button:** Used to enter setting mode and confirm selections.
- **S/S (Start/Stop) Button:** Starts or stops the timer.
- **Magnetic Panels:** Two large area magnets on the back for secure attachment to metal surfaces.
- **Sound Hole:** Emits the alarm sound.



Image 3.1: Back of the timer highlighting the control buttons and features.

## 4. SETUP

### 4.1. Battery Installation

The timer requires two CR2032 210 mAh lithium metal batteries. If the display is blank or dim, replace the batteries.

1. Locate the battery compartment cover on the back of the timer.
2. Slide the cover downwards to open the compartment.
3. Remove any old batteries. If new, remove the protective plastic tabs from the pre-installed batteries.
4. Insert two new CR2032 batteries, ensuring the positive (+) side faces upwards.
5. Replace the battery compartment cover by sliding it upwards until it clicks into place.
6. The timer display should now activate.



Image 4.1: Detailed view of battery installation for the timer.

## 5. OPERATING INSTRUCTIONS

### 5.1. Setting a Countdown

The timer can be set for a countdown up to 9999 days, 23 hours, 59 minutes, and 59 seconds.

1. Press the **SET** button to enter setting mode. The 'Days' value will flash.
2. Use the **▲ (Up)** and **▼ (Down)** buttons to adjust the 'Days' value.
3. Press **SET** again to move to 'Hours', then 'Minutes', and finally 'Seconds', adjusting each value as needed.

4. After setting the 'Seconds', press **SET** one more time to exit setting mode.
5. Press the **S/S (Start/Stop)** button to begin the countdown. The 'D' indicator will appear on the display.
6. To pause the countdown, press **S/S** again. Press **S/S** to resume.
7. To reset the timer to zero, press and hold the **SET** button while the timer is paused.

## 5.2. Alarm Reminder

When the countdown reaches zero, the timer will emit a loud alarm. To silence the alarm, press any button.



Image 5.1: Timer displaying an alarm reminder.

## 5.3. Using the Count-Up Function

The timer can also function as a stopwatch, counting up from zero.

1. Ensure the timer is reset to '0000 00 00 00'. If not, press and hold **SET** while paused.
2. Press the **S/S (Start/Stop)** button to begin counting up. The 'D' indicator will disappear.
3. To pause the count-up, press **S/S** again. Press **S/S** to resume.

4. To reset the count-up timer to zero, press and hold the **SET** button while the timer is paused.

## 6. FEATURES

### 6.1. Magnetic Adsorption

The timer is equipped with strong magnets on its back, allowing it to be securely attached to various metal surfaces such as refrigerators, whiteboards, or oven doors. This provides convenient placement and easy visibility.



Image 6.1: Timer demonstrating magnetic attachment to a refrigerator.

### 6.2. Integrated Stand

For non-magnetic surfaces, the timer includes a foldable stand on its back, allowing it to be placed upright on a desk, countertop, or shelf.

## 7. APPLICATIONS

The YOOREAL Digital Countdown Timer is suitable for a wide range of applications:

- **Personal Milestones:** Track countdowns for retirement, weddings, baby births, or other significant life events.
- **Travel & Leisure:** Countdown to vacations or holidays.
- **Home & Kitchen:** Use as a kitchen timer for cooking, baking, or other household tasks.
- **Education & Work:** Manage study sessions, project deadlines, or work breaks.
- **Fitness:** Time exercise routines or rest periods.

## Retirement



## Wedding



## Baby birth



## Vacation



## Exercise



## Study



Image 7.1: Examples of various applications for the digital timer.

## 8. SPECIFICATIONS

<b>Model Number</b>	YR-HM202A
<b>Color</b>	Black
<b>Material</b>	Acrylonitrile Butadiene Styrene

<b>Timing Range</b>	9999 Days, 23 Hours, 59 Minutes, 59 Seconds
<b>Power Source</b>	2 x CR2032 Lithium Metal Batteries (included)
<b>Product Dimensions</b>	4.29 x 0.51 x 1.85 inches (109 x 13 x 47 mm)
<b>Item Weight</b>	2.39 ounces (67.7 grams)
<b>Manufacturer</b>	Ningbo Yooreal Electronics Co.,Ltd



Image 8.1: Dimensions of the YOOREAL Digital Countdown Timer.

## 9. TROUBLESHOOTING

If you encounter issues with your YOOREAL Digital Countdown Timer, refer to the following common solutions:

- **Display is blank or dim:** Replace the CR2032 batteries. Ensure they are inserted with the correct polarity (+ side up).
- **Alarm is not sounding:** Check if the volume is set appropriately (if applicable, though this model has a fixed loud alarm). Ensure the countdown has reached zero.

- **Buttons are unresponsive:** Try removing and reinserting the batteries to perform a soft reset. If the issue persists, the unit may require replacement.
- **Timer not counting:** Ensure the timer is not paused. Press the **S/S** button to start or resume.
- **Magnetic attachment is weak:** Ensure the surface is clean and flat. The magnets are designed for typical metal surfaces.

## 10. WARRANTY AND SUPPORT

---

YOOREAL products come with a 2-year after-sales service. If you experience any quality problems with the product within this period, YOOREAL provides free replacement service.

### 10.1. Contacting Support

For any product issues or concerns, please contact YOOREAL customer service via the Amazon Platform. The YOOREAL Care Team offers 7\*24H professional online services to assist you.

