

[Manuals.plus](#) /

› [MKSY](#) /

› MKSY 10FT Artificial Christmas Tree Instruction Manual

## MKSY LJ518

# MKSY 10FT Artificial Christmas Tree Instruction Manual

Model: LJ518

### PRODUCT OVERVIEW

The MKSY 10FT Artificial Christmas Tree is designed to provide a lush and natural appearance for your holiday decorations. Featuring 2150 green branch tips, it offers ample space for ornaments. Constructed from environment-friendly and non-flammable PVC material, this tree is a durable and safe alternative to a real tree. Its hinged composition and sturdy metal stand ensure easy assembly, disassembly, and stability.



*Image: A fully decorated 10-foot MKSY artificial Christmas tree stands tall in a spacious room, adorned with various ornaments, ribbons, and a star on top. Gift boxes are placed at its base.*

## SETUP INSTRUCTIONS

Follow these steps for proper assembly of your artificial Christmas tree:

1. **Unpack Components:** Carefully remove all tree sections and the metal stand from the packaging. Ensure all parts are present.
2. **Assemble the Stand:** Open the metal stand and secure it firmly on a flat, stable surface.
3. **Insert Bottom Section:** Insert the largest tree section (usually marked 'A' or the lowest section) into the center hole of the metal stand. Ensure it is seated securely.
4. **Attach Middle Sections:** Proceed to attach the middle sections of the tree, working your way up. The hinged

branches will fall into place.

5. **Attach Top Section:** Finally, insert the smallest section (the top) into the uppermost part of the tree.
6. **Fluff the Branches:** Once all sections are assembled, gently spread out and shape each branch tip to achieve a full and natural appearance. This process may take some time but is crucial for the tree's aesthetic.

## INSTALLATION STEPS



*Image: A visual guide illustrating the four main steps for assembling the artificial Christmas tree, from setting up the stand to attaching the sections and fluffing the branches.*

Image: Close-up of hands demonstrating the process of fluffing and shaping the PVC branch tips to achieve a fuller look.

## OPERATING INSTRUCTIONS (DECORATION)

Your MKSY Artificial Christmas Tree is designed to be a beautiful centerpiece for your holiday decorations. With 2150 branch tips, it provides ample space for a wide variety of ornaments.

- **Ornament Placement:** Distribute your ornaments evenly across the branches, starting from the inside and working your way out for a balanced look.
- **Included Accessories:** The tree comes with a silver decorative ribbon, a Christmas star for the treetop, and a "Merry Christmas" sign. Integrate these accessories as desired to enhance the festive atmosphere.
- **Lighting:** If adding lights, wrap them around the tree before hanging ornaments, ensuring even distribution.

### DECORATION



Treetop star



Letter pendant



Mesh Ribbon



*Image: A display of the decorative accessories included with the tree: a golden star for the top, a "Merry Christmas" letter pendant, and a roll of white mesh ribbon.*



*Image: A full view of the artificial Christmas tree highlighting its dense appearance with 2150 branch tips, alongside a magnified view of the realistic pine needles.*

## MAINTENANCE

Proper care and maintenance will ensure the longevity of your MKSY Artificial Christmas Tree.

- **Cleaning:** To clean the tree, gently wipe the branches with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these may damage the PVC material.
- **Storage:** After the holiday season, disassemble the tree by reversing the setup steps. Store the tree sections and stand in their original packaging or a suitable storage bag in a cool, dry place away from direct sunlight. This helps

preserve the color and integrity of the branches.

- **Branch Shaping:** Over time, branches may become compressed. Re-fluffing the branches each season will help maintain the tree's full appearance.




**OURS : Includes Decoration**



**OTHERS : No Decoration**



**OURS : Thick PVC Branches**

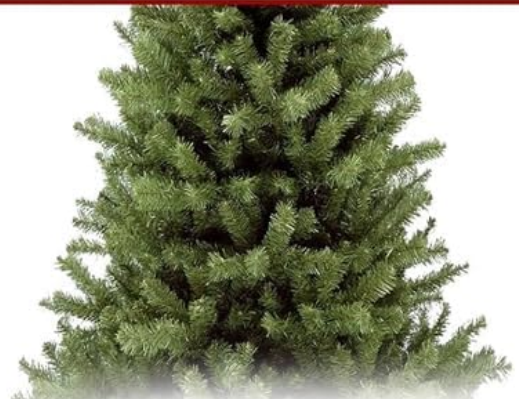

**OTHERS : Sparse Branches**



**OURS : Durable Metal Base**



**OTHERS : Plastic Base**

*Image: A visual comparison highlighting the thick PVC branches and the durable metal base of the MKSY tree, emphasizing its quality and stability.*

## TROUBLESHOOTING

Most issues with artificial Christmas trees are related to assembly or branch shaping. If you encounter any problems, please review the setup instructions carefully.

- **Tree Not Full Enough:** Ensure all branches are fully fluffed and spread out. This process significantly impacts the tree's overall fullness.
- **Tree Wobbles:** Verify that the metal stand is fully opened and securely tightened. Ensure the tree sections are properly seated in the stand and each other.

- **Damaged Branches:** While the tree is designed for durability, if any branches appear damaged, gently try to reshape them. If damage is significant upon arrival, please contact customer support.

For any issues not covered here, please refer to the Warranty and Support section for contact information.

## SPECIFICATIONS

| Feature               | Detail                             |
|-----------------------|------------------------------------|
| Brand                 | MKSY                               |
| Product Dimensions    | 55"D x 55"W x 120"H (10 feet tall) |
| Color                 | Green                              |
| Material              | Polyvinyl Chloride (PVC)           |
| Item Weight           | 32 Pounds                          |
| Item Package Quantity | 1                                  |
| Recommended Uses      | Christmas Tree                     |
| Occasion              | Christmas                          |
| Special Feature       | Pull Down Branch (Hinged)          |
| Tree Type             | Pine                               |
| Base Type             | Metal Stand                        |
| Built-in Light        | No                                 |
| Tip Count             | 2150                               |
| Model Number          | LJ518                              |
| Date First Available  | June 14, 2022                      |



Image: A diagram illustrating the dimensions of the 10-foot tree, showing its height and 55-inch base width, alongside icons highlighting its life-like tips and fire-resistant, durable materials.

## WARRANTY AND SUPPORT

For product support, warranty inquiries, or to report any issues, please contact MKSY customer service. While specific warranty details are not provided in this manual, MKSY is committed to customer satisfaction.

You can find more information and contact details by visiting the official MKSY store on Amazon:

[Visit the MKSY Store on Amazon](#)

Please have your model number (LJ518) and purchase details ready when contacting support.

## Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question