

[Manuals.plus](#) /

› [RegiisJoy](#) /

› RegiisJoy Pandora's Box 78S Retro Arcade Game Console User Manual

RegiisJoy Pandoras Box 78S

RegiisJoy Pandora's Box 78S Retro Arcade Game Console User Manual

Model: 78S

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your RegiisJoy Pandora's Box 78S Retro Arcade Game Console. Please read this manual thoroughly before use to ensure optimal performance and longevity of your device.

PRODUCT OVERVIEW

The RegiisJoy Pandora's Box 78S is an advanced retro arcade gaming system featuring an H3 processor and a 128GB TF card. It offers a vast library of 32,000 games, including 3D, cheat, and modified versions, categorized for easy navigation. The console supports up to 4 players (with additional USB controllers) and provides extensive customization options for an enhanced gaming experience.



Image: The RegiisJoy Pandora's Box 78S console with two joysticks and multiple buttons, connected to a television displaying a game selection screen.

INCLUDED COMPONENTS

- RegiisJoy Pandora's Box 78S Arcade Console (main unit)
- Second Player Controller (connects to main unit)
- HDMI Cable
- VGA Cable
- USB Cable (for connecting controllers or external devices)
- Power Adapter
- User's Guide
- Replacement Buttons (x2)
- Detachable Joystick Balls (x2)



Image: All components included in the package, laid out on a surface. This includes the main console, USB cable, HDMI cable, power adapter, VGA cable, user's guide, and two spare buttons.

SETUP INSTRUCTIONS

1. **Assemble Joysticks:** If the joystick balls are detached, carefully screw them onto the joystick shafts on both controllers.

Video Description: A short video demonstrating the assembly of the detachable joystick ball onto the arcade console.

2. **Connect Second Player Controller:** Use the provided cable (VGA-like connector) to link the second player controller to the main console. This cable also supplies power to the second controller.
3. **Connect to Display:**
 - For modern displays (4K TV, PC monitor, projector): Use the provided HDMI cable. Connect one end to the HDMI port on the main console and the other end to an available HDMI input on your display device.
 - For older displays: Use the provided VGA cable. Connect one end to the VGA port on the main console and the other end to an available VGA input on your display device.



Image: A visual guide illustrating the connection of the arcade console to a projector, monitor, or television via HDMI or VGA ports. It also shows connecting an external USB joystick.

4. **Power Connection:** Connect the power adapter to the DC 12V input on the main console, then plug the adapter into a power outlet.
5. **Power On:** Locate the power switch (usually a red rocker switch) on the back of the main console and turn it to the 'ON' position.
6. **Select Input on Display:** On your TV or monitor, switch the input source to the corresponding HDMI or VGA channel where the console is connected.

OPERATING INSTRUCTIONS

Navigating the Menu

The main menu categorizes games for easy access. Use the joystick to navigate and the action buttons to select. The system features 12 grid classifications for games.

- **Recent:** View recently played games.
- **Search:** Quickly find games by name.
- **Favorite List:** Add games to your personal favorites for quick access.
- **12 Grid Classification:** Browse games by genre (e.g., 3D Games, Fighting, Action, Shooting, Sports, Puzzle).



Image: A screenshot of the console's main menu interface, displaying various game categories and navigation options.

Playing Games

- **Game Selection:** Use the joystick to highlight a game and press the designated 'OK' or 'A' button to start.
- **Multiplayer:** The console supports 2 players directly. For 3-4 player games, additional USB controllers are required and can be connected via the USB ports on the back of the main console.
- **In-Game Functions:**
 - **Pause/Save/Load:** Access these options during gameplay to pause, save your progress, or load a previous save state.
 - **Cheat Function:** Utilize the newly added in-game cheating function for certain games.
 - **One-Button Combo:** Execute fighting combos with a single press (Start+A) in supported games.

Customization

Access the settings menu using the 'Setting Key' located behind the console to personalize your experience.

- **Button/Controller Customization:** Remap buttons and configure controllers to your preference.
- **Language Settings:** Choose from English, Spanish, Korean, or Chinese.
- **Difficulty Levels:** Adjust game difficulty as needed.
- **Audio:** Adjust volume using the volume control knob. A headphone jack is available for private listening.

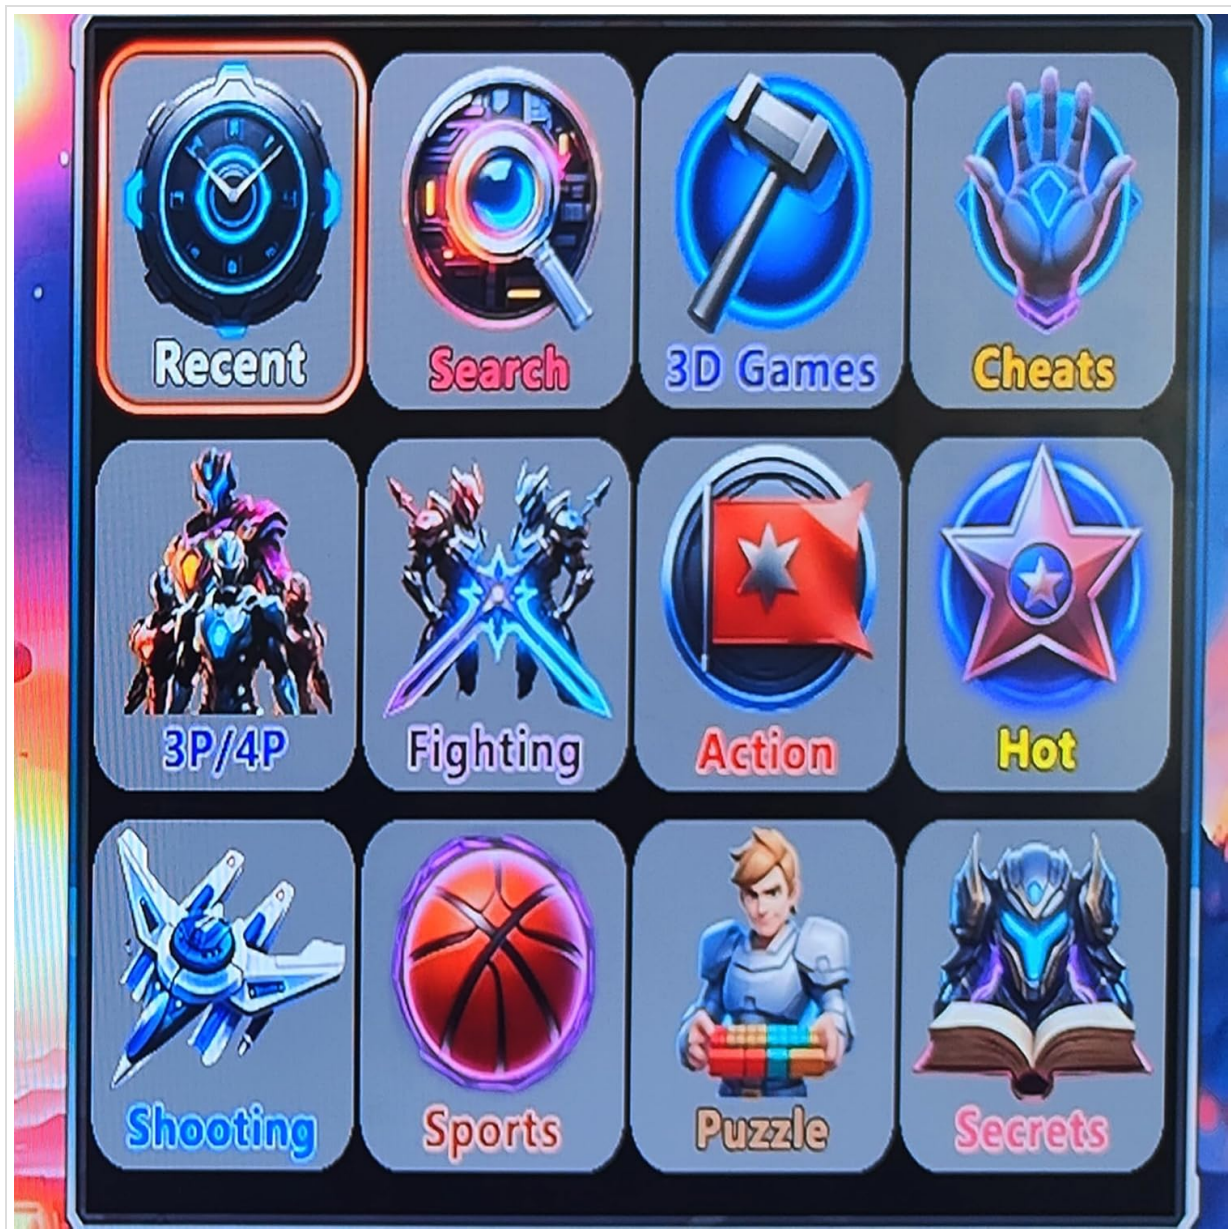


Image: A screenshot of the console's settings menu, detailing options for key customization, system configuration, game settings, language selection, and save/restore settings.

MAINTENANCE

- **Protective Film:** The console surface has a transparent protective film. This can be peeled off for a flawless pattern.
- **Cleaning:** Use a soft, dry cloth to clean the console surface. Avoid abrasive cleaners or solvents.

TROUBLESHOOTING

- **System Malfunctions:** For common system malfunctions, you can reset the machine by removing and reinserting the memory card (128G TF card).
- **No Display/Incorrect Display:** Ensure the HDMI or VGA cable is securely connected to both the console and the display. Verify that your TV/monitor is set to the correct input source (HDMI 1, HDMI 2, VGA, etc.).
- **Game Performance Issues:** Some graphically demanding games may experience slowdowns. Ensure the console is adequately ventilated.
- **Adding/Deleting Games:** The console supports adding and deleting games. If experiencing issues with the download site or SD card space, ensure a stable internet connection and sufficient storage.

- **Button/Joystick Issues:** If buttons or joysticks become unresponsive or worn, use the provided replacement buttons.

SPECIFICATIONS

Feature	Detail
Product Dimensions	25"L x 8.6"W x 2.7"H
Controller Type	Button Control, Joystick
Screen Size (Reference)	25 Inches (for console surface)
Power Source	Corded Electric
Hardware Interface	HDMI, VGA, USB
Age Range (Description)	Adult (Manufacturer recommended: 12 years and up)
Display Type	LCD or LED (compatible)
Material	Metal (base)
Item Weight	8.23 pounds
Processor	H3 Chip
Storage	128G TF Card
Games Included	32,000 in 1 (including 3D, cheat, and modified versions)

WARRANTY AND SUPPORT

For any questions about the product or to inquire about replacement card service, please visit the official RegiisJoy website or contact customer support through your retailer.

RegiisJoy is committed to providing quality products and support. If you encounter any issues, please refer to the troubleshooting section or reach out for assistance.