

Midea SF 3.60N Pro

Midea SF 3.60N PRO Dishwasher User Manual

Model: SF 3.60N Pro

Brand: Midea

1. INTRODUCTION AND SAFETY INFORMATION

Thank you for choosing the Midea SF 3.60N PRO Dishwasher. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read this manual thoroughly before using the dishwasher and keep it for future reference.

1.1 Important Safety Instructions

- Always disconnect the appliance from the power supply before cleaning or performing any maintenance.
- Do not operate the dishwasher if it is damaged or malfunctioning. Contact authorized service personnel.
- Keep children away from the dishwasher, especially when it is operating. Detergents are corrosive.
- Ensure proper grounding to avoid electrical shock.
- Do not use abrasive cleaners or solvents on the appliance.
- Only use detergents and rinse aids specifically designed for automatic dishwashers.

2. PRODUCT OVERVIEW AND FEATURES

The Midea SF 3.60N PRO is a versatile dishwasher designed for efficient and convenient dish cleaning. It offers a 14-place setting capacity and smart features for modern households.



Figure 2.1: Front view of the Midea SF 3.60N PRO Dishwasher in stainless steel finish.

Vielfältige Beladungsmöglichkeiten



Figure 2.2: Interior view showcasing the spacious racks and cutlery basket.

2.1 Key Features

- **14 Place Settings Capacity:** Accommodates a large volume of dishes, ideal for families.
- **Flexible Loading System:** Features a multi-functional cutlery basket, height-adjustable upper basket (RackMatic), and foldable tines for versatile loading of various kitchenware.
- **Dual Water Leak Protection:** Built-in Aqua-Stop and overflow sensor detect leaks early to prevent water damage.
- **5 Wash Programs:** Offers Intensive, Universal, ECO, 90 min, and Glass cycles for optimal cleaning results.
- **Smart Home Connectivity (WiFi):** Control the dishwasher remotely via smartphone or tablet, including program selection and delayed start.
- **Freestanding & Built-under Design:** Can be used as a freestanding appliance or integrated into kitchen cabinetry by removing the top cover.

14 Gedekte Fassungsvermögen

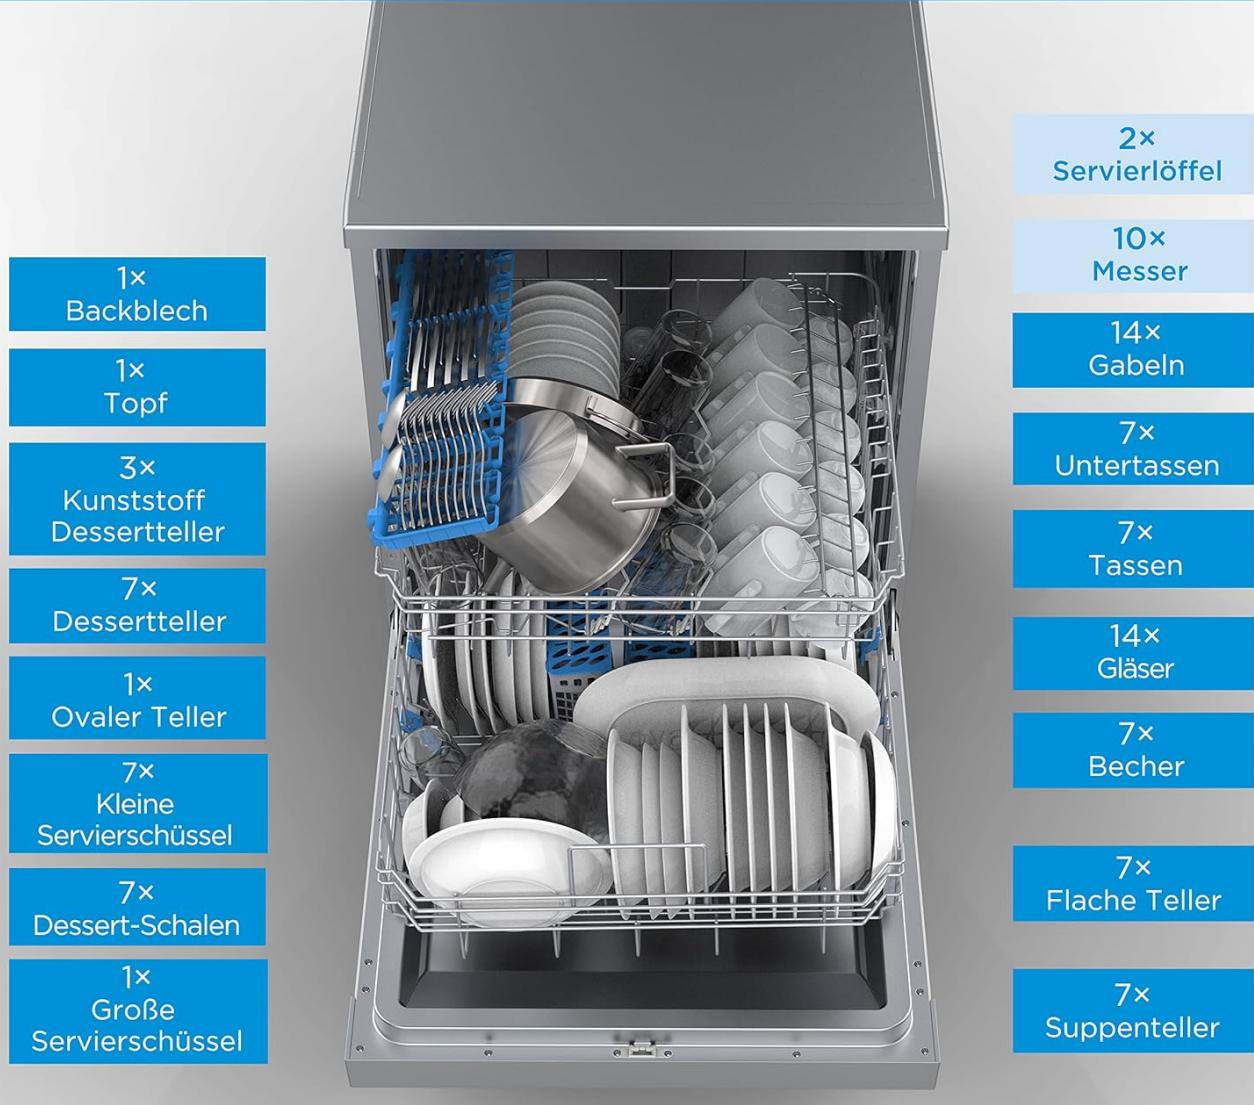


Figure 2.3: Visual representation of the 14 place settings capacity, illustrating various dish types that can be loaded.

RackMatic



Figure 2.4: RackMatic system allows the upper basket to be adjusted by 5 cm, accommodating larger items in the lower basket.

Freistehend & Unterbaufähig



Figure 2.5: Illustration of flexible loading options, including a removable cutlery basket and foldable tines for various dish sizes.

MSmartHome App



Figure 2.6: The double leak protection system features a floor pan sensor and an Aqua-Stop mechanism to prevent water leaks.

3. INSTALLATION

Proper installation is crucial for the performance and safety of your dishwasher. It can be installed as a freestanding unit or integrated into your kitchen cabinetry.

3.1 Positioning the Appliance

The Midea SF 3.60N PRO is designed for flexible placement. For built-in installation, the top cover of the appliance must be removed. Ensure adequate space and ventilation around the unit.



Figure 3.1: The dishwasher can be used as a freestanding unit or installed under a counter by removing its top panel.

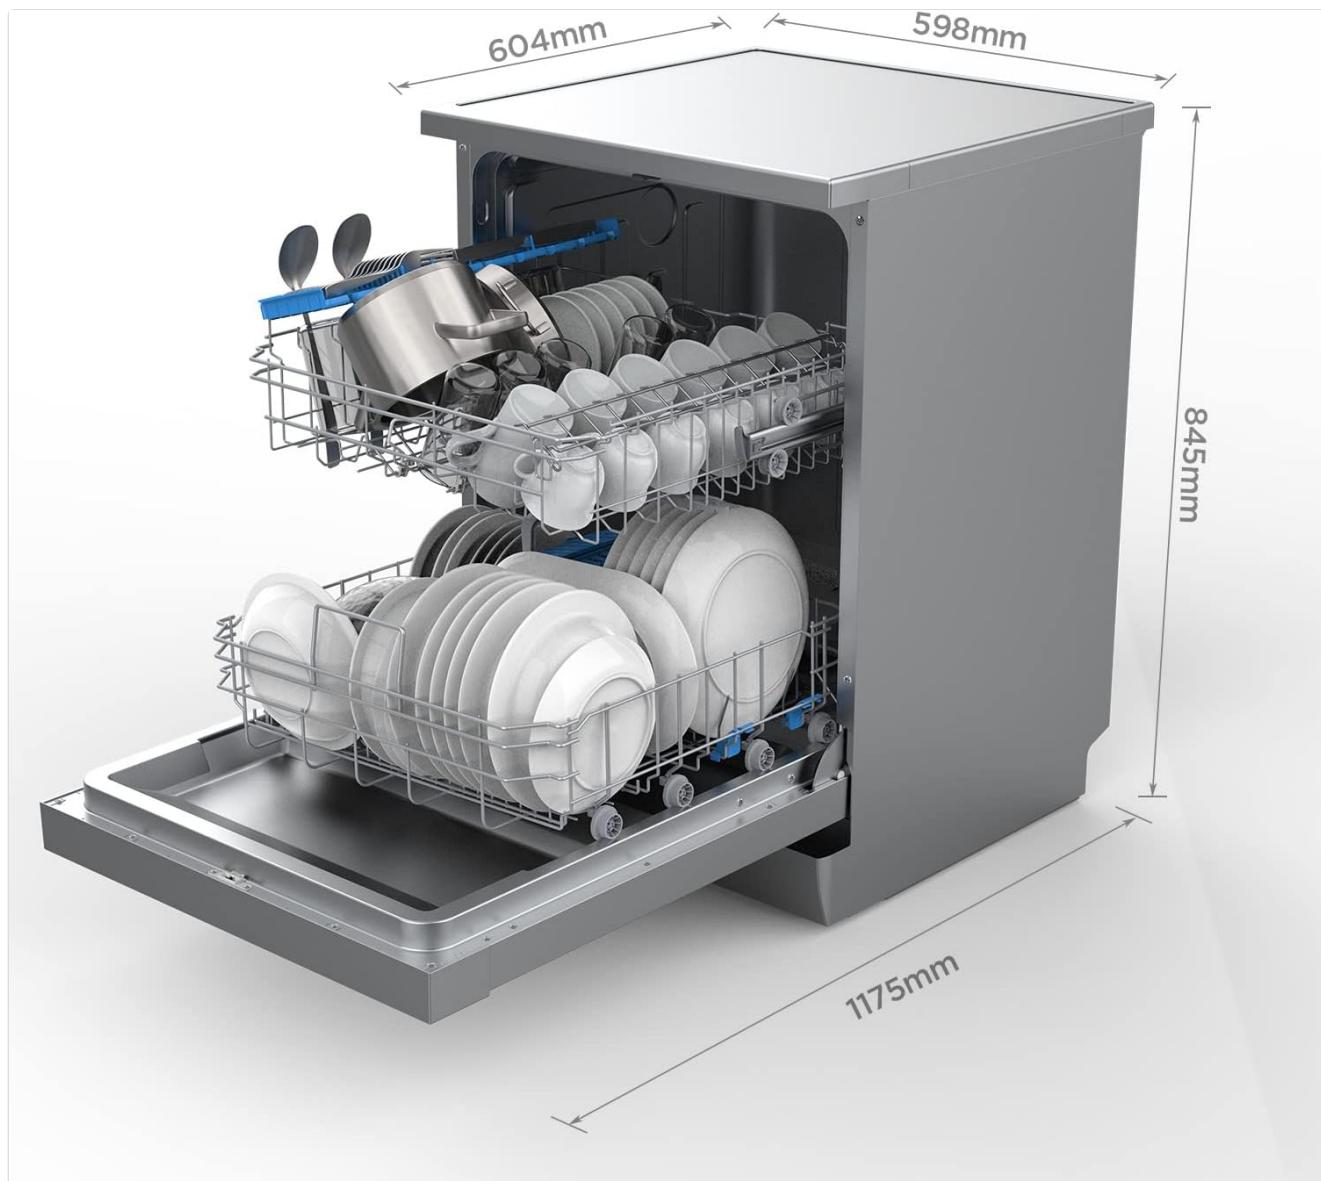


Figure 3.2: Product dimensions: 598mm (width) x 845mm (height) x 604mm (depth). Total depth with door open is 1175mm.

3.2 Water and Electrical Connections

- Connect the water inlet hose to a cold water supply with a minimum pressure of 0.04 MPa and a maximum of 1 MPa. The Aqua-Stop feature provides additional safety against leaks.
- Ensure the drain hose is properly connected to a suitable drain pipe or sink trap, preventing kinks or blockages.
- Plug the power cord into a grounded electrical outlet (230 Volts). Do not use extension cords or adapters.

4. OPERATING INSTRUCTIONS

Operating your Midea dishwasher is straightforward, with both manual controls and smart app integration.

4.1 Loading the Dishwasher

Arrange dishes to allow water spray to reach all surfaces. Scrape off large food particles before loading. Place larger items in the lower basket and delicate items in the upper basket. Utilize the adjustable upper basket and foldable tines for optimal space.

4.2 Adding Detergent and Rinse Aid

Fill the detergent dispenser with the appropriate amount of dishwasher detergent. Check the rinse aid indicator and refill the rinse aid dispenser as needed for optimal drying results and to prevent water spots.

4.3 Selecting a Wash Program

The dishwasher offers 5 wash programs:

- **Intensive:** For heavily soiled dishes and pots.
- **Universal:** Standard program for normally soiled dishes.
- **ECO:** Energy-efficient program for daily use.
- **90 min:** Quick program for lightly soiled dishes.
- **Glass:** Gentle program for delicate glassware.

Select the desired program using the control panel buttons.

4.4 Delayed Start Function

You can delay the start of a wash cycle by 3, 6, or 9 hours. This feature is useful for running the dishwasher during off-peak electricity hours or when you are away from home.

4.5 Smart Control with MSmartHome App

The Midea SF 3.60N PRO can be controlled remotely via the MSmartHome app on your smartphone or tablet. This allows you to:

- Select and start wash programs.
- Monitor the wash cycle progress.
- Set delayed start times.
- Receive notifications.



Figure 4.1: The MSmartHome app provides remote control and monitoring capabilities for your dishwasher.

5. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

5.1 Cleaning the Filters

The filter system should be cleaned regularly to prevent food particles from recirculating and affecting wash

performance. Refer to the appliance diagram for filter location and removal instructions.

5.2 Cleaning the Spray Arms

Periodically check the spray arm nozzles for blockages caused by food particles or mineral deposits. Remove the spray arms and rinse them under running water if necessary.

5.3 Exterior and Interior Cleaning

Wipe the exterior of the dishwasher with a damp cloth. For the interior, use a dishwasher cleaner periodically to remove grease and limescale buildup.

5.4 Salt and Rinse Aid

Ensure the salt reservoir is filled with dishwasher salt, especially in areas with hard water, to prevent limescale buildup and improve cleaning results. Keep the rinse aid dispenser filled for streak-free drying.

6. TROUBLESHOOTING

Before contacting service, please check the following common issues and their solutions:

Problem	Possible Cause	Solution
Dishwasher does not start	Power supply issue; Door not closed properly; Program not selected.	Check power connection; Ensure door is latched; Select a program and press start.
Dishes are not clean	Improper loading; Clogged spray arms/filters; Insufficient detergent; Incorrect program.	Reload dishes correctly; Clean filters and spray arms; Add more detergent; Select appropriate program.
Water remaining in the tub	Clogged drain hose/filter; Drain pump malfunction.	Clean drain filter and check hose for kinks; If problem persists, contact service.
Excessive noise	Dishes rattling; Foreign object in pump; Improper installation.	Rearrange dishes; Check for foreign objects; Ensure dishwasher is level.

7. TECHNICAL SPECIFICATIONS

Detailed specifications for the Midea SF 3.60N PRO Dishwasher:

Parameter	Value
Model Name	SF 3.60N Pro

Parameter	Value
Manufacturer	Midea
Installation Type	Integrated, Freestanding
Capacity	14 Place Settings
Product Dimensions (W x D x H)	59.8 x 60 x 84.5 cm
Product Weight	43.5 Kilograms
Voltage	230 Volts
Number of Programs	5 (Intensive, Universal, ECO, 90 min, Glass)
Water Consumption (ECO program)	11.0 Liters/cycle
Noise Level	47 dB
Control Type	Push Button
Material	Stainless steel
Special Features	Adjustable rack, automatic detergent dispenser, automatic temperature control, water softener, sound reduction system, water sprayer
First Available	June 17, 2022
Country of Origin	China

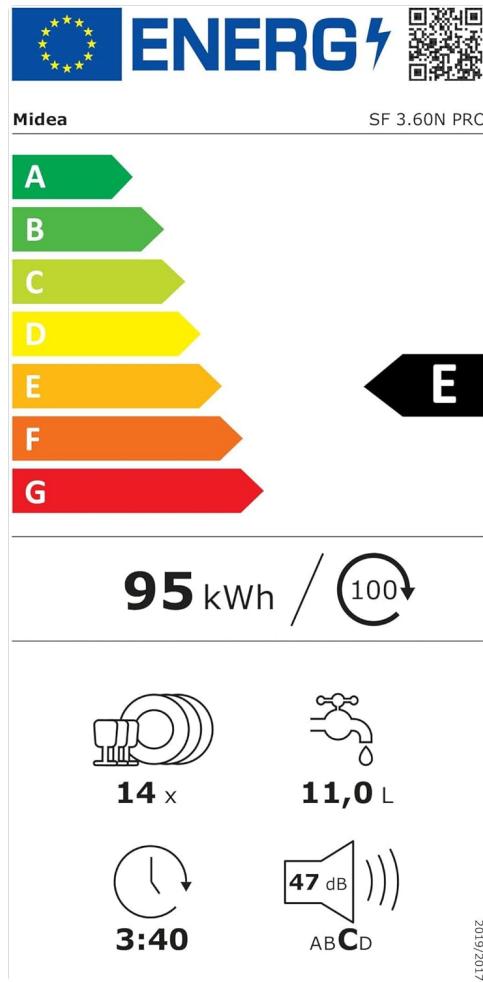


Figure 7.1: EU Energy Label for the Midea SF 3.60N PRO, showing energy efficiency class E, 95 kWh/100 cycles, 14 place settings, 11.0 L water consumption, 47 dB noise level, and 3:40 program duration.

8. WARRANTY AND SUPPORT

8.1 Warranty Information

The Midea SF 3.60N PRO Dishwasher comes with a minimum guarantee period of **24 months** provided by the supplier. Please retain your proof of purchase for warranty claims.

8.2 Product Information and Support

For additional information and support, you can visit the supplier's website:

[Midea Official Website](#)

[EPREL Product Database \(EU Energy Label Information\)](#)

For technical assistance or service requests, please contact Midea customer support through their official website or your local authorized service center.

