

[Manuals.plus](#) /

› [Primy](#) /

› Primy Drafting Chair User Manual

Primy 934-Z Black

Primy Drafting Chair User Manual

Model: 934-Z Black | Brand: Primy

INTRODUCTION

This user manual provides essential information for the assembly, operation, maintenance, and troubleshooting of your Primy Drafting Chair. Designed for comfort and versatility, this chair features adjustable height, lumbar support, flip-up armrests, and a footrest ring, making it suitable for various work environments, including standing desks and drafting tables.

SETUP AND ASSEMBLY

For detailed assembly instructions, please refer to the included installation manual (PDF) provided with your product. The following outlines key components and general steps.

Components Overview

- Chair Base with Casters
- Gas Lift Cylinder
- Footrest Ring
- Seat Plate Mechanism
- Seat Cushion
- Backrest
- Armrests (Left and Right)
- Hardware (Screws, Washers, Allen Wrench)


General Assembly Steps

1. Insert casters into the chair base.
2. Place the gas lift cylinder into the center hole of the base.
3. Slide the footrest ring onto the gas lift cylinder and secure it at the desired height.
4. Attach the seat plate mechanism to the underside of the seat cushion using the provided screws.
5. Attach the backrest to the seat plate mechanism.

6. Attach the armrests to the seat cushion and backrest.
7. Place the assembled seat and backrest onto the gas lift cylinder.

Ergonomic Design


Body language tells what they need

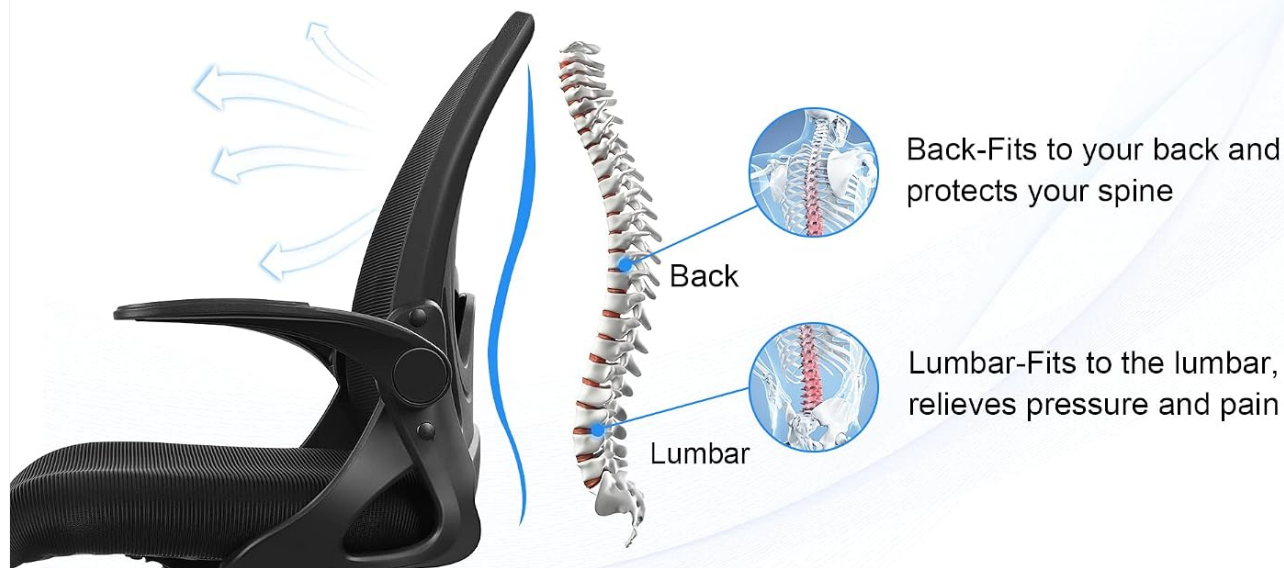

Fully Support



Adjustable Lumbar Support

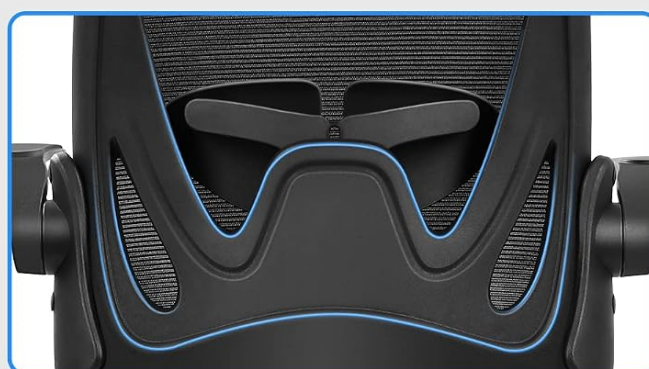

Stable & Comfortable Backrest

Detailed diagram illustrating the various dimensions of the Primy Drafting Chair, including height, width, and depth measurements for different components. This information is crucial for ensuring the chair fits your workspace.





This image shows the Primy Drafting Chair in black, highlighting its overall design, mesh back, and adjustable footrest ring.

OPERATING INSTRUCTIONS

Your Primy Drafting Chair offers several adjustment features to ensure optimal comfort and ergonomic support.

Chair Height Adjustment

To adjust the chair's height, locate the lever under the right side of the seat. While seated, pull the lever up to lower the chair. To raise the chair, stand up slightly to remove weight from the seat, then pull the lever up. Release the lever at your desired height. The chair offers approximately 8 inches of height adjustment.



This illustration demonstrates the lever used to adjust the chair's height, indicating an approximate 8-inch range for vertical movement.

Adjustable Lumbar Support

The chair features an adjustable lumbar support on the backrest. Gently push or pull the lumbar support mechanism to

adjust its position vertically (approximately 2 inches or 5 cm) to best fit the curve of your lower back and relieve pressure.



This image focuses on the ergonomic design of the chair's backrest, specifically showcasing the adjustable lumbar support mechanism that can be moved up or down to provide tailored back support.

Flip-up Armrests

The armrests can be flipped up by rotating them upwards 90 degrees. This feature allows the chair to be pushed closer to a desk or to save space when not in use.

Adjustable Footrest Ring

The footrest ring can be adjusted along the gas lift cylinder to accommodate different user heights and desk configurations. Loosen the knob on the footrest ring, slide it to your preferred height, and then tighten the knob securely. This helps maintain a comfortable leg position and reduces pressure on the back of your thighs.

MULTI-DIMENSIONAL ADJUSTMENT

What you get is a flexible chair



BREATHABLE & COMFY

-  Ergonomic Design
-  High-elastic Mesh
-  High-density Cushion
-  frame made of FSC-Certified wood



This image illustrates how the footrest ring can be adjusted in height, providing support for users at various desk heights and promoting comfortable leg positioning.

360° Swivel and Mobility

The chair features a 360-degree swivel function for easy rotation and smooth-rolling casters for effortless movement across hard floor surfaces. The five-claw base ensures stability during movement and use.

Adjust Chair 8" Height

When you need to adjust the height of the chair just lift the button up



A composite image detailing the chair's multi-dimensional adjustments, including 360-degree swivel, 90-degree flip-up armrests for space-saving, and overall height adjustment.



The Primy Drafting Chair is shown in an office setting, demonstrating its suitability for use with standing desks and its overall aesthetic appeal.

MAINTENANCE

Regular maintenance will help prolong the life and performance of your Primy Drafting Chair.

- **Cleaning:** For general cleaning, wipe surfaces with a damp cloth. For more thorough cleaning, the manufacturer recommends to "scrub" the chair. Use a mild soap solution if necessary, and dry immediately. Avoid harsh chemicals or abrasive cleaners.
- **Mesh Back:** The breathable mesh back can be gently wiped down with a damp cloth. For deeper cleaning, a soft brush can be used with a mild detergent solution, then wiped clean.
- **Cushion:** The seat cushion, filled with high-density foam, can be spot cleaned.
- **Casters:** Periodically check casters for hair or debris and clean as needed to ensure smooth rolling.
- **Hardware:** Occasionally check all screws and bolts to ensure they are tight. Retighten if necessary to maintain stability.

TROUBLESHOOTING

If you encounter any issues with your Primy Drafting Chair, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Chair does not stay at desired height / Sinks down	Gas lift cylinder malfunction or improper installation.	Ensure the gas lift cylinder is correctly seated in the base and seat mechanism. If the issue persists, the gas lift may need replacement. Contact customer service.
Squeaking or creaking noises	Loose hardware or friction between components.	Check and tighten all screws and bolts, especially those connecting the seat plate to the seat and backrest. A small amount of silicone lubricant can be applied to moving parts if needed.
Casters not rolling smoothly	Debris (hair, lint) caught in casters or damaged casters.	Turn the chair over and carefully remove any debris from the caster wheels. If casters are damaged, they may need to be replaced.
Lumbar support not adjusting	Mechanism jammed or broken.	Gently try to move the lumbar support. Do not force it. If it remains stuck, contact customer service.

SPECIFICATIONS

Feature	Detail
Brand	Primy
Model Number	PR934-Parent (934-Z Black)
Color	Black
Product Dimensions (D x W x H)	21"D x 8"W x 20"H (Note: These dimensions seem to be for a component, not the full chair. Refer to diagram for full chair dimensions.)
Maximum Weight Recommendation	250 Pounds
Back Style	Ergonomic
Special Feature	Adjustable
Product Care Instructions	Scrub
Recommended Uses	Office, Drafting
Fill Material	Foam
Furniture Base Movement	Swivel
Surface Recommendation	Hard Floor
Item Weight	28.6 pounds

Note: Some product dimensions provided in the specifications may refer to packaging or specific components. For overall chair dimensions, please refer to the detailed product size diagram in the Setup section.

WARRANTY AND SUPPORT

Primy provides a warranty for your drafting chair. The period of coverage is **one year for repairs and replacements** from the date of purchase.

If you have any questions, require assistance with assembly, or experience any issues with your Primy Drafting Chair, please do not hesitate to contact our customer support team. We are committed to providing the best service. Please refer to your purchase documentation or the Primy official website for specific contact information.

© 2024 Primy. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question