

manuals.plus /

› [HWR](#) /

› [HWR S55-T Portable Karaoke Machine User Manual](#)

HWR S55-T

HWR S55-T Portable Karaoke Machine User Manual

Model: S55-T

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your HWR S55-T Portable Karaoke Machine. Please read this manual thoroughly before use and retain it for future reference.



Image: The HWWR S55-T Portable Karaoke Machine, showcasing the main unit with a tablet in its stand, three wireless microphones, a remote control, and various connection cables.

INCLUDED COMPONENTS

Verify that all items are present in the package:

- HWWR S55-T Karaoke Machine
- 3 Wireless Microphones
- Remote Control
- AUX-in Cable
- USB Charging Cable
- Shoulder Strap

SETUP

1. Charging the Karaoke Machine

1. Connect the provided USB charging cable to the charging port on the karaoke machine.
2. Connect the other end of the USB cable to a compatible 5V/1A USB power adapter (not included).
3. The charge indicator light will be RED while charging and turn BLUE when fully charged.

2. Microphone Preparation

- Each wireless microphone requires AA batteries (not included). Insert batteries according to polarity markings.
- The microphones are designed to connect automatically to the karaoke machine upon power-on.

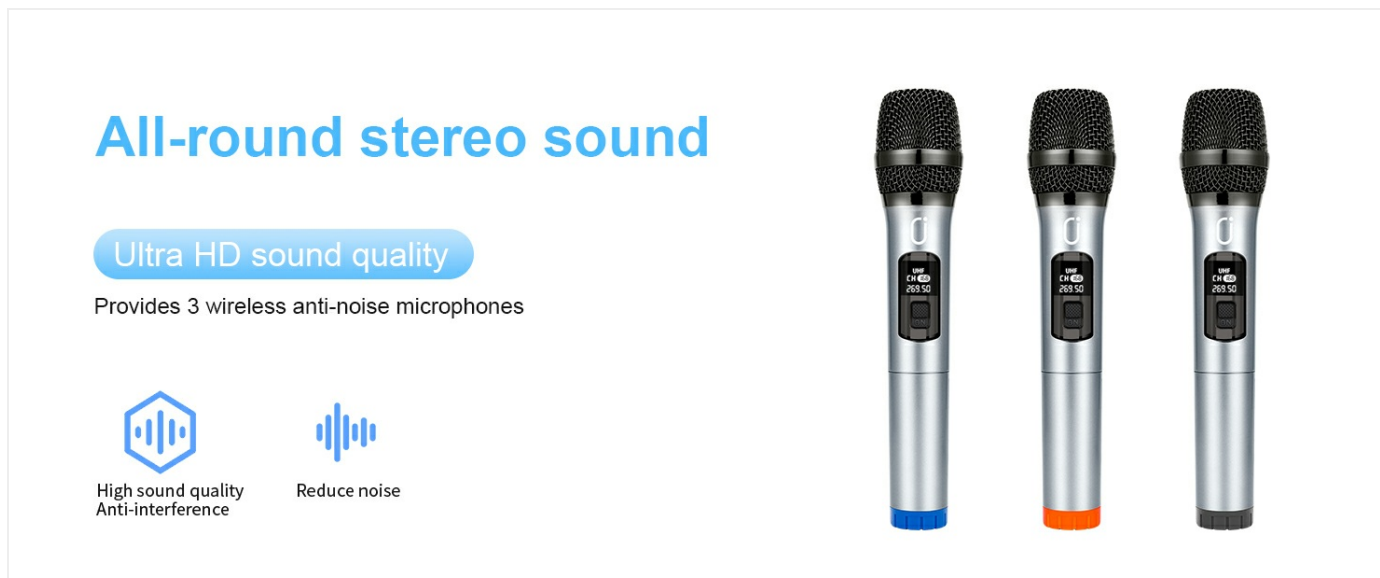


Image: Close-up of three wireless microphones, highlighting their UHF channel displays and anti-noise features.

OPERATING INSTRUCTIONS

1. Power On/Off

Press and hold the Power button on the karaoke machine to turn it on or off.

2. Bluetooth Connection

1. Turn on the karaoke machine. It will automatically enter Bluetooth pairing mode.
2. Enable Bluetooth on your mobile device (smartphone, tablet, etc.).
3. Search for "HWWR S55-T" in the list of available devices and select it to pair.
4. A confirmation sound will indicate successful pairing.

3. TWS (True Wireless Stereo) Pairing

To achieve 360° surround stereo sound, you can connect two identical HWWR S55-T speakers wirelessly:

1. Ensure both HWWR S55-T speakers are powered on and not connected to any Bluetooth device.
2. On one speaker, press and hold the TWS button (refer to control panel diagram).
3. The speakers will automatically search and pair with each other. A confirmation sound will indicate successful TWS pairing.
4. Once paired, connect your mobile device to one of the speakers via Bluetooth as described above.

Two speakers automatically interconnect TWS Wireless Stereo Function

TWS(TWINS)interconnect technology.2 speakers can be interconnected wirelessly
Automatically divide channels.Enjoy a completely new sound system
No cable limits between left and right channels

12 Hours Playing time
5200mAh Battery



Image: Illustration of two HWWR S55-T speakers wirelessly interconnected via TWS technology, providing stereo sound from a connected device.

4. Microphone Usage and Controls

- **Microphone Volume:** Adjust the "MIC VOL" knob on the control panel to increase or decrease microphone volume.
- **Echo Effect:** Adjust the "ECHO" knob to add or reduce reverberation to your voice.
- **Bass/Treble:** Use the "BASS" and "TREBLE" knobs to fine-tune the audio output.



Image: Detailed diagram of the karaoke machine's control panel, showing knobs for microphone volume, echo, bass, treble, and various input ports.

5. Input Modes (AUX, USB, TF Card)

The machine supports multiple input sources:

- **AUX-IN:** Connect external audio devices (e.g., TV, guitar) using the provided AUX cable.
- **USB Play Mode:** Insert a USB drive with audio files. The machine will automatically play content. Recording function is available in this mode.
- **TF Card Play Mode:** Insert a TF (microSD) card with audio files. The machine will automatically play content. Recording function is available in this mode.



Image: Visual representation of the multiple connectivity options for the karaoke machine, including Bluetooth, AUX-IN, SD Card, and USB.

6. Disco Lights

The integrated disco lights can be activated and changed to various effects. The lights can synchronize with the music rhythm.

7 DISCO LIGHTING

Lights that bounce to the rhythm of the music, a totally reimagined rainbow light show that pulses, phases, and shines to the beat of your music.



Image: A visual demonstration of seven distinct disco lighting patterns available on the karaoke machine, illustrating dynamic light effects.

7. Remote Control

The included infrared remote control allows for convenient operation of all functions from a distance.

8. Guitar Amplifier Function

The karaoke machine can also function as a guitar amplifier. Connect your guitar to the AUX-in jack. Use the Bass and Treble controls on the machine to adjust your guitar's tone.



Image: A user playing an acoustic guitar connected to the karaoke machine via the AUX-in port, demonstrating its guitar amplifier capability.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the machine. Do not use liquid cleaners or abrasive materials.
- **Battery Care:** To prolong battery life, fully charge the machine before first use and recharge it regularly, even if not in use. Avoid extreme temperatures.
- **Storage:** Store the machine in a cool, dry place away from direct sunlight and moisture when not in use for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery depleted; Power button not pressed.	Charge the machine; Press and hold the Power button.
No sound from speaker	Volume too low; Incorrect input mode; Device not connected.	Increase master volume; Select correct input mode (Bluetooth, AUX, USB, TF); Ensure device is paired/connected.
Microphone not working	Microphone batteries low/dead; Microphone not powered on; MIC VOL too low.	Replace microphone batteries; Turn on microphone; Increase "MIC VOL" knob.
Excessive microphone echo	"ECHO" knob set too high.	Adjust the "ECHO" knob counter-clockwise to reduce the effect.
Bluetooth pairing failure	Device too far; Interference; Machine already paired.	Move device closer; Restart both devices; Disconnect from other Bluetooth devices.

SPECIFICATIONS

- **Model:** S55-T
- **Brand:** HWWR
- **Product Dimensions:** 7.09 x 11.42 x 16.14 inches
- **Item Weight:** 6.52 pounds
- **Speaker Configuration:** 5.25" Woofer, 2" Tweeter
- **Peak Power:** 400W
- **Bluetooth Version:** 5.3
- **Microphone Type:** Wireless UHF (3 included)
- **Wireless Microphone Range:** Up to 30 meters (98 feet)
- **Battery Capacity:** 5200mAh
- **Playtime:** Up to 8-10 hours (depending on usage)
- **Power Source:** Battery Powered
- **Special Features:** PA System, Adjustable Microphone Sensitivity, Stereo Pairing (TWS), Disco Lights, Guitar Amplifier Function, Recording Function
- **Input Options:** Bluetooth, AUX-in, USB, TF Card



Image: Technical diagram illustrating the speaker's internal components, including the 5.25-inch subwoofer and 2-inch tweeter, and highlighting its 400W peak power output.

**Compact and lightweight ,
Enjoy your favorite music**




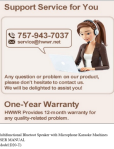




Image: The HWWR S55-T Karaoke Machine with its dimensions (12.6in H x 9.8in W x 5.1in D) and weight (6.52 lbs) indicated, demonstrating its compact and portable design.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact the manufacturer directly. Keep your proof of purchase for warranty claims.



Related Documents - S55-T

	<p>HWWR D28-T Bluetooth Karaoke Machine User Manual</p> <p>Comprehensive user manual for the HWWR D28-T portable Bluetooth karaoke machine. Learn about product specifications, features, button operations, and usage instructions for this kid-friendly karaoke device.</p>
	<p>HWWR Multifunctional Bluetooth Speaker with Microphone Karaoke Machines User Manual (Model: D20-T)</p> <p>User manual for the HWWR Multifunctional Bluetooth Speaker with Microphone Karaoke Machines, Model D20-T. This guide provides detailed instructions on product features, Bluetooth and TWS connection, charging, troubleshooting, technical specifications, and package contents.</p>
	<p>HWWR D10-T Portable Bluetooth Speaker User Manual</p> <p>User manual for the HWWR D10-T portable Bluetooth speaker, detailing product features, connection instructions, troubleshooting, and specifications.</p>
	<p>Karaoke Machine D17 Wireless Version User Manual</p> <p>User manual for the HWWR Karaoke Machine D17 Wireless Version. This guide provides detailed specifications, button operations for the main unit and wireless microphone, instructions for Bluetooth, TF card, and AUX modes, information on indicator lights, and usage tips for a superior audio experience.</p>
	<p>HWWR Wireless Lavalier Microphone K38 User Manual</p> <p>User manual for the HWWR Wireless Lavalier Microphone K38, detailing product introduction, operating methods, indicator light descriptions, and package contents for professional recording, live streaming, and vlogging.</p>
	<p>JYX T19-T Karaoke Machine User Manual - Setup, Operation, and Features</p> <p>This user manual provides comprehensive instructions for the JYX T19-T Karaoke Machine. Learn how to set up, connect, operate, and troubleshoot your device, including features like wireless microphones and DJ lighting effects. Optimized for ease of use and accessibility.</p>