

AN-MR19BA

User Manual: Generic Replacement Voice TV Remote Control AN-MR19BA

Compatible with LG W8, E8, C8, B8 OLED Smart TVs

1. INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your new Generic Replacement Voice TV Remote Control, model AN-MR19BA. This remote is designed to be compatible with various LG OLED Smart TV models, including W8, E8, C8, and B8 series. Please read these instructions carefully before use to ensure proper functionality.

2. PACKAGE CONTENTS

- 1x Replacement Voice TV Remote Control (AN-MR19BA)

Note: Batteries and a printed user manual are not included in the package.

3. SETUP

3.1 Battery Installation

To power your remote control, you will need two (2) 1.5V AA alkaline batteries (not included).

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Figure 1: Battery installation in the remote control. Ensure correct polarity.

3.2 Pairing the Magic Remote with Your TV

Before using the Magic Remote, it must be paired with your LG Smart TV.

1. Ensure batteries are correctly installed in the Magic Remote and turn on your LG TV.

2. Point the Magic Remote directly at your TV screen.
3. Press the **Wheel (OK)** button located in the center of the remote control.

If the TV fails to register the Magic Remote, turn the TV off and then back on, and repeat the pairing steps.

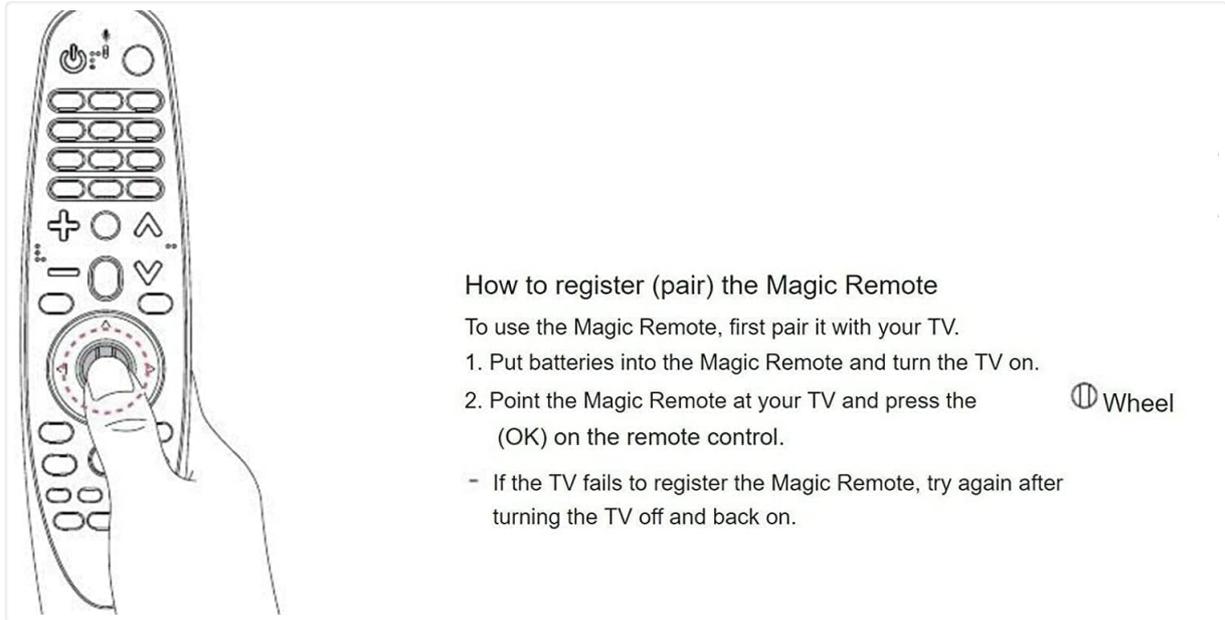


Figure 2: Pairing the Magic Remote by pressing the Wheel (OK) button.

4. OPERATING INSTRUCTIONS

4.1 Deregistering (Unpairing) the Magic Remote

To unpair the Magic Remote from your TV:

- Press and hold the **HOME** () and **BACK** () buttons simultaneously for five seconds. This will unpair the remote from your TV.
- Alternatively, pressing and holding the **GUIDE** button will allow you to cancel and re-register the Magic Remote at once.



Figure 3: Deregistering the Magic Remote by holding Home and Back buttons.

4.2 Using the Pointer Function

The Magic Remote features a pointer function for intuitive navigation.

- To make the pointer appear on the screen, gently shake the Magic Remote to the right and left, or press the **HOME** (🏠), **INPUT** (📺), or **Q. Settings** (⚙️) buttons.
- On some TV models, the pointer may appear when you turn the **Wheel (OK)** button.
- If the pointer has not been used for a certain period or if the Magic Remote is placed on a flat surface, the pointer will disappear.
- If the pointer is not responding smoothly, you can reset it by moving it to the edge of the screen.
- Due to its additional features, the Magic Remote may deplete batteries faster than a normal remote.

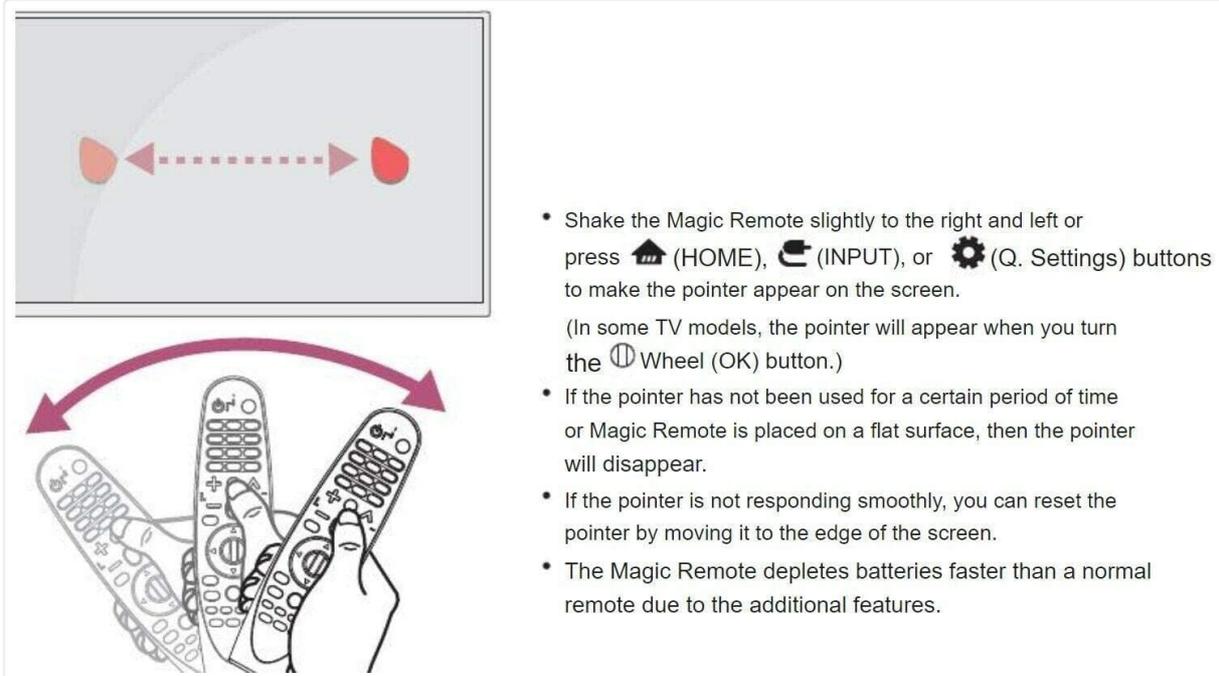


Figure 4: Activating and using the pointer function.

4.3 Voice Control

This remote supports voice control functionality. Once paired, you can use voice commands to interact with your LG Smart TV. Refer to your TV's user manual for specific voice command instructions.

5. MAINTENANCE

5.1 Battery Replacement

When the remote's performance degrades or it stops responding, it's time to replace the batteries. Follow the battery installation steps in Section 3.1.

5.2 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.

6. TROUBLESHOOTING

- **Remote fails to register (pair) with the TV:**
Ensure batteries are fresh and correctly inserted. Turn the TV off and then back on, then attempt the pairing process again (Section 3.2). Make sure there are no obstructions between the remote and the TV.

- **Pointer not appearing or responding:**

Shake the remote gently or press the HOME, INPUT, or Q. Settings buttons to activate the pointer. If it's still unresponsive, try moving the pointer to the edge of the screen to reset it. Check battery levels.

- **Buttons are unresponsive:**

Check battery levels and replace if necessary. Ensure the remote is pointed directly at the TV.

7. SPECIFICATIONS

- **Model:** AN-MR19BA
- **Compatible Devices:** LG W8, E8, C8, B8 OLED Smart TVs
- **Connectivity Technology:** Infrared
- **Controller Type:** Button Control, Voice Control
- **Power Supply:** 2x 1.5V AA Alkaline Battery
- **Special Feature:** Ergonomic design

8. WARRANTY AND SUPPORT

For any issues, questions, or support regarding your Generic Replacement Voice TV Remote Control, please contact the seller directly through your purchase platform. Please retain your proof of purchase for warranty claims, if applicable.