

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Geekee](#) /
- › [Geekee CG6 Wireless Outdoor Security Camera User Manual](#)

Geekee CG6

Geekee CG6 Wireless Outdoor Security Camera User Manual

Model: CG6

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Geekee CG6 Wireless Outdoor Security Camera. Please read this manual thoroughly before using the product to ensure proper function and safety. Keep this manual for future reference.



The Geekee CG6 camera, designed for outdoor use, featuring a robust, weatherproof casing.

WHAT'S IN THE BOX

- Geekee CG6 Wireless Security Camera
- Mounting Bracket
- USB Charging Cable
- Mounting Screws and Wall Anchors
- Reset Pin
- User Manual (this document)



A visual guide detailing the simple setup process: downloading the VicoHome app, fully charging the device, and connecting the camera to your phone.

PRODUCT OVERVIEW

The Geekee CG6 is a 100% wireless, battery-powered security camera designed for both indoor and outdoor surveillance. It features 2K HD video, full-color night vision, AI motion detection, two-way audio, and an IP65 weatherproof rating.

Key Features:

- **2K HD Video:** Captures clear, high-resolution footage.
- **Full-Color Night Vision:** Provides detailed color images even in low-light conditions.
- **AI Motion Detection:** Intelligently identifies humans, pets, packages, and vehicles.
- **Two-Way Talk:** Communicate with visitors or deter intruders remotely.
- **Spotlight & Siren Alarm:** Active deterrence features.
- **IP65 Weatherproof:** Durable design for outdoor use in various weather conditions.
- **5200mAh Rechargeable Battery:** Long-lasting power for wireless operation.

100% True Wireless

Low power consumption, built-in 5200mAh rechargeable battery.

A single charge can trigger up to 3,300 times.



Built-in 5200mAh
rechargeable battery

A detailed view of the camera's internal battery, emphasizing its wireless operation and long-lasting power.



Outdoor & Indoor

Place, stand or mount it anywhere



This image showcases the camera's versatility, suitable for monitoring both outdoor areas like driveways and indoor spaces such as living rooms.

SETUP INSTRUCTIONS

1. Charge the Camera

Before initial use, fully charge the camera using the provided USB cable. Connect the cable to the camera's charging port and a standard 5V/1A USB power adapter (not included). The indicator light will show charging status.

2. Download the VicoHome App

Search for 'VicoHome' in the Apple App Store (for iOS devices) or Google Play Store (for Android devices) and download the application. Register for a new account or log in if you already have one.

3. Connect to Wi-Fi

1. Open the VicoHome app and tap 'Add Device' or the '+' icon.
2. Follow the on-screen prompts to select your camera model.
3. Ensure your smartphone is connected to a **2.4GHz Wi-Fi network**. This camera does not support 5GHz Wi-Fi.

- The app will generate a QR code. Position your camera approximately 6-8 inches (15-20 cm) in front of your phone screen so the camera can scan the QR code.
- Once connected, the camera will indicate successful pairing, and you can name your device in the app.

4. Mounting the Camera

Choose a suitable location for your camera, ensuring it has a clear field of view and good Wi-Fi signal strength. Use the provided mounting bracket, screws, and wall anchors to securely attach the camera to a wall or ceiling. Adjust the camera angle as needed.



The camera is shown functioning reliably in various weather conditions, including rain and snow, confirming its IP65 weatherproof construction.


OPERATING INSTRUCTIONS

1. Live Video Viewing

Open the VicoHome app and select your camera from the device list to view live 2K HD video. You can switch between day and night vision modes, and zoom in for more detail.

2K HD Day and Night

Full color, even at night

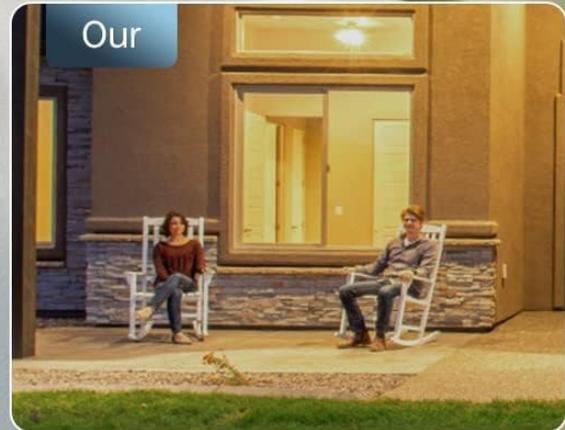

This image illustrates the superior clarity and full-color detail provided by the camera's 2K HD night vision, compared to traditional black and white infrared.

2. Two-Way Talk

While viewing live footage, tap the microphone icon in the app to activate two-way audio. You can speak through the camera's built-in speaker and hear audio from the camera's microphone.



Hi! Your package has arrived

Two-way Voice Intercom

Talk to anyone anytime, anywhere



Put it at the door, thank you

The image depicts the two-way audio function, allowing users to speak with visitors or delivery personnel remotely through the camera.

3. Motion Detection and Alerts

The camera features a PIR motion sensor for accurate detection. When motion is detected, you will receive instant notifications on your smartphone via the VicoHome app. You can customize the monitoring range and sensitivity settings within the app.

Secure Your Home Without Blind Spot




Flashlight Alarm (Auto or Manual)



Siren Alert (Auto or Manual)



Motion Detection Notification Push

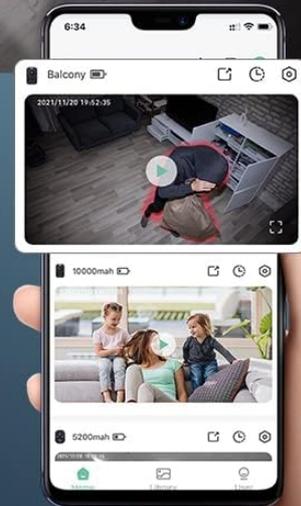

This graphic demonstrates how the camera detects motion, activates a flashlight, and sounds a siren to deter intruders, providing comprehensive coverage.

4. Spotlight and Siren Alarm

In response to detected motion, the camera can automatically activate its built-in spotlight and siren alarm to deter unwanted visitors. These features can also be manually triggered through the VicoHome app.

5. Storage Options

The camera supports dual storage modes:

- **SD Card Storage:** Insert a Micro SD card (up to 128GB, not included) into the camera's SD card slot to store recorded video locally.
- **Cloud Storage:** Enjoy free rolling 3-day cloud storage for video history. Advanced cloud memory and AI recognition features are available with a subscription after a 30-day free trial.

6. AI Intelligent Recognition and Activity Zones

Utilize the VicoHome app to define custom activity zones, focusing motion detection on specific areas. The camera's AI can differentiate between humans, pets, packages, and vehicles, reducing false alerts.



This image highlights the advanced AI capabilities of the camera, which can differentiate between various objects and events for more precise alerts and playback.

MAINTENANCE

1. Battery Charging

Monitor the battery level through the VicoHome app. When the battery is low, remove the camera and recharge it using the USB cable. Battery life varies based on usage and environmental factors.

2. Cleaning the Lens

Periodically clean the camera lens with a soft, dry cloth to ensure optimal image clarity. Avoid using abrasive cleaners or solvents.

3. Weatherproofing

While the camera is IP65 weatherproof, ensure all ports and covers are securely closed to maintain its water and dust resistance, especially after charging or accessing the SD card slot.

TROUBLESHOOTING

- **Camera not connecting to Wi-Fi:** Ensure your router is broadcasting a 2.4GHz Wi-Fi signal. Check Wi-Fi signal strength at the camera's location. Restart your router and the camera.
- **Poor video quality:** Ensure the lens is clean. Check your Wi-Fi connection speed. Adjust video resolution settings in the app if necessary.
- **Motion detection not working or too sensitive:** Adjust PIR sensitivity settings in the VicoHome app. Define custom activity zones to reduce unwanted alerts. Ensure there are no obstructions blocking the sensor.
- **Short battery life:** Frequent motion detection events, live viewing, or use of spotlight/siren will consume more battery. Reduce sensitivity, limit live viewing, or consider a solar panel accessory (if available for your model).
- **Two-way audio issues:** Ensure your phone's microphone and speaker are enabled for the VicoHome app. Check camera's microphone and speaker for obstructions.

SPECIFICATIONS

Feature	Specification
Model Number	CG6
Video Capture Resolution	2K
Effective Video Resolution	1080 Pixels
Viewing Angle	110 Degrees
Connectivity Technology	Wireless (Wi-Fi 2.4GHz only)
Power Source	Battery Powered
Battery Capacity	5200 mAh Lithium Polymer
Indoor/Outdoor Usage	Indoor, Outdoor
International Protection Rating	IP65
Special Features	Motion Sensor, Night Vision (Full Color/Infrared), Two-Way Talk, Spotlight, Siren Alarm
Compatible Devices	Smartphone (Android, iOS)
Dimensions (L x W x H)	5.9 x 3.9 x 4.72 inches
Item Weight	11.2 ounces

WARRANTY INFORMATION

Geekee products are designed for reliability and performance. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Geekee website. Keep your proof of purchase for warranty claims.

SUPPORT

For technical assistance, troubleshooting, or any product-related inquiries, please contact Geekee customer support:

- **Email:** support@getgeekee.com
- Our support team aims to reply within 24 hours.

Top-notch Tech Support



High-quality service,
professional service,
feel free to inquire



Lifetime technical help,
always by your side



Reply within 24 Hour
support@getgeekee.com

Details about the available technical support, emphasizing professional assistance and a direct email contact for inquiries.