

AKB75095307

# Generic Replacement Remote Control User Manual

For LG Smart TVs (Models: 24LM530S-PU, 24LM500S-PU, 24LM520S-WU, 28LM520S-WU, and others)

## INTRODUCTION

---

This manual provides instructions for the Generic Replacement Remote Control, designed for various LG Smart TV models. This remote offers a direct replacement solution without the need for complex programming, allowing for immediate use upon battery installation.





Image: Front view of the Generic Replacement Remote Control, showing all buttons and their labels.

## SETUP: BATTERY INSTALLATION

---

The remote control requires two 1.5V AAA alkaline batteries (not included). No programming or pairing is necessary; simply install the batteries, and the remote will be ready for use.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards and remove it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Image: Rear view of the remote control with the battery cover removed, showing the two AAA battery slots.

Your browser does not support the video tag.

Video: Demonstration of battery installation and basic handling of the remote control.

## OPERATING INSTRUCTIONS

---

This remote control is designed for intuitive use. Once batteries are installed, it functions immediately with compatible LG Smart TVs.

### Basic Functions

- **Power Button:** Located at the top left, used to turn the TV on or off.
- **Number Buttons (0-9):** For direct channel selection.
- **Volume Up/Down (VOL):** Adjusts the TV's audio level.
- **Channel Up/Down (CH PAGE):** Changes TV channels sequentially.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used to navigate menus and select options.
- **Back Button:** Returns to the previous screen or menu.
- **Exit Button:** Exits the current menu or application.
- **Netflix / Amazon Buttons:** Direct access to streaming services.
- **Settings (Gear Icon):** Accesses TV settings menu.
- **Home Button (House Icon):** Returns to the TV's home screen.

### Compatible LG TV Models

This remote control is compatible with the following LG Smart TV models, among others:

- 24LM530S-PU
- 24LM500S-PU
- 24LM520S-WU
- 28LM520S-WU
- 43LJ550M, 43LJ5500-UA, 43LJ550M-UB, 43LJ5550-UC, 43LJ5500, 43LJ5550
- 32LJ550M, 32LJ550M-UB
- 49LJ550M, 49LJ5500, 49LJ5550
- 55LJ550M, 55LJ5500, 55LJ5550

## MAINTENANCE

---

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always use new 1.5V AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.
- **Cleaning:** Wipe the remote control with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage.

## TROUBLESHOOTING

---

- **Remote not responding:** Ensure batteries are correctly installed with the correct polarity. Replace old batteries with new ones. Check for any obstructions between the remote and the TV's infrared sensor.
- **Intermittent response:** This may indicate low battery power. Replace batteries. Ensure you are within the effective range and line of sight of the TV.

- **Specific buttons not working:** Check if there is any debris or stickiness around the button. If replacing batteries does not resolve the issue, the remote may require replacement.

## SPECIFICATIONS

---

Feature	Detail
Model Number	AKB75095307
Brand	Generic
Power Supply	2 x 1.5V AAA Alkaline Batteries
Connectivity Technology	Infrared
Controller Type	Button Control
Special Feature	Ergonomic Design
Compatible Devices	LG Smart Televisions (listed above)

## WARRANTY AND SUPPORT

---

Specific warranty details and direct manufacturer support information were not provided with this product. For any issues, please refer to the retailer where the product was purchased.

---

This manual is for informational purposes only. Product specifications are subject to change without notice.

© 2023 Generic. All rights reserved.