

XYJ-01

Generic Mini Foldable Washing Machine XYJ-01 User Manual

Model: XYJ-01

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your Generic Mini Foldable Washing Machine, model XYJ-01. Please read this manual thoroughly before using the appliance and retain it for future reference.

The XYJ-01 is a compact and portable washing machine designed for washing small, delicate items such as baby clothes, underwear, and socks. Its foldable design makes it suitable for small living spaces, travel, and camping.

2. SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury when using your appliance, follow these basic precautions:

- Ensure the power supply voltage matches the rating label on the appliance.
- Do not immerse the main unit in water or other liquids.
- Unplug the appliance from the outlet when not in use or before cleaning.
- Keep the appliance out of reach of children. Close supervision is necessary when the appliance is used by or near children.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only attachments and accessories recommended by the manufacturer.
- Do not wash large or heavy items that may damage the machine. This machine is designed for small, delicate laundry loads.
- Avoid overfilling the washing machine with water or clothes.
- Ensure the drain hole is properly sealed during washing cycles to prevent leaks.
- The dehydration function is not a drying function. Clothes will remain damp after dehydration and require air drying.

3. PRODUCT OVERVIEW

The Generic Mini Foldable Washing Machine XYJ-01 features a compact design and simple controls for

convenient use.



Figure 3.1: Product dimensions and folded state of the Mini Foldable Washing Machine XYJ-01. The machine measures 11.22 x 11.22 x 10 inches (28.5 x 28.5 x 25.5 cm) when expanded and 11.22 x 11.22 x 3.5 inches (28.5 x 28.5 x 9 cm) when folded. It is suitable for washing small items like underwear, socks, and baby bibs.



01 **Hidden Drain Hole**



02 **Touch Button**



03 **Portable Handle**



04 **Draining Basket**

Figure 3.2: Detailed view of the Mini Foldable Washing Machine XYJ-01 components. This image highlights the hidden drain hole (01), the touch button control panel (02), the portable handle (03), and the detachable draining basket (04).

Key Features:

- **Foldable Design:** Compact for storage and portability.
- **Material:** Constructed from durable and environmentally friendly ABS material.
- **Washing Capacity:** 1.2 gallons (4.5 liters) volume.
- **Operation:** One-button touch control with 1, 5, and 10-minute wash cycles.
- **Washing Method:** Positive and negative wave washing for effective cleaning.
- **Drainage:** Features a hidden drain hole and a detachable drain basket for dehydration.
- **Low Noise:** Operates with low noise levels.

4. SETUP

1. **Unpack:** Carefully remove the washing machine and all accessories from the packaging. Verify that all components listed in the package contents are present: Folding Washing Machine, Drain Basket,

US Plug, and English Manual.

2. **Unfold the Machine:** Place the folded washing machine on a flat, stable surface. Gently press down on the top edge while pulling up the sides to expand the machine to its full height. Ensure the soft glue folds are fully extended and stable.
3. **Positioning:** Place the washing machine on a level, non-slip surface, preferably near a water source and a drain. The four-point non-slip and suction cup support will help stabilize the unit.
4. **Power Connection:** Connect the US plug to a suitable power outlet. Ensure the outlet voltage matches the machine's requirements.

5. OPERATING INSTRUCTIONS

5.1 Washing Cycle

1. **Load Laundry:** Place a small amount of delicate items (e.g., baby clothes, underwear, socks) into the washing machine. Do not overload the machine; it is designed for small loads to ensure effective cleaning and prevent damage.
2. **Add Water:** Fill the washing machine with an appropriate amount of water. The maximum capacity is 1.2 gallons (4.5 liters). For enhanced cleaning, you may add water heated to 40°C-60°C and soak items before starting the wash cycle.
3. **Add Detergent:** Add a small amount of suitable laundry detergent.
4. **Start Washing:** Press and hold the power button for 2 seconds to turn on the machine. The touch button panel offers three cycle options: 1 minute, 5 minutes, or 10 minutes. Select your desired washing time by pressing the button. The machine will begin the positive and negative wave washing action.
5. **Monitor:** The machine operates with low noise. Allow the cycle to complete.

Positive and Negative Wave Washing

✓ 35DB low noise intelligent work.

✓ Wash baby clothes separately, more hygienic.



Detachable Drain Basket

Wash Advice:

- 1) Please don't put so many items at a time.
- 2) If you want the items to be washed cleaner, you can add 40°C-60°C warm water and soak them before washing.

Figure 5.1: Diagram illustrating the positive and negative wave washing action within the machine and the function of the detachable drain basket. The machine uses a turbine for efficient cleaning.



Figure 5.2: Control panel showing the 1, 5, and 10 minute wash cycle options. The machine is activated by a 2-second long press on the start/stop button.

5.2 Draining and Dehydration

- 1. Drain Water:** Once the washing cycle is complete, unplug the machine. Locate the hidden drain hole at the bottom side of the machine. Open the drain plug to allow the water to empty.
- 2. Prepare for Dehydration:** After draining, place the washed clothes into the detachable drain basket. Insert the basket into the washing machine.
- 3. Dehydration Cycle:** Close the drain plug. Plug the machine back in. Press and hold the power button for 2 seconds to turn on. Select a short cycle (e.g., 1 minute) to activate the turbine for dehydration. The turbine will spin the clothes at high speed to remove excess water.
- 4. Remove Clothes:** After the dehydration cycle, unplug the machine. Remove the drain basket and take out the clothes. Note that this function removes excess water but does not fully dry the clothes; they will still be damp and require air drying.

6. MAINTENANCE

- Cleaning:** After each use, unplug the machine and drain any remaining water. Wipe the interior and exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

- **Storage:** Ensure the machine is completely dry before folding it for storage. To fold, gently push down on the top edge until the machine collapses to its compact size. Store in a cool, dry place.
- **Drain Basket:** Clean the drain basket regularly to prevent lint and debris buildup.
- **Power Cord:** Inspect the power cord periodically for any signs of damage. If damaged, discontinue use and contact customer support.



Figure 6.1: The washing machine folded and stored inside a suitcase, illustrating its compact design for travel and easy storage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power button not pressed for 2 seconds; power outage.	Ensure the machine is securely plugged into a working outlet. Press and hold the power button for 2 seconds. Check household power supply.

Problem	Possible Cause	Solution
Water leaks from the bottom.	Drain plug not properly sealed; machine overloaded; damaged unit.	Ensure the drain plug is securely closed before filling with water. Do not exceed the maximum load capacity. If damage is suspected, discontinue use.
Clothes are still very wet after dehydration.	Dehydration is not a drying function; clothes are too heavy/dense.	The dehydration function removes excess water, but clothes will remain damp and require air drying. Ensure the drain basket is not overloaded.
Machine stops during cycle.	Cycle completed; power interruption.	Check if the selected cycle time has elapsed. Verify power connection.

8. SPECIFICATIONS

Feature	Detail
Brand	Generic
Model	XYJ-01
Rated Power	9W
Washing Bucket Volume	4.5 Liters (1.2 Gallons)
Product Dimensions (Expanded)	11.22" D x 11.22" W x 9.84" H (28.5 x 28.5 x 25.5 cm)
Product Dimensions (Folded)	11.22" D x 11.22" W x 3.5" H (28.5 x 28.5 x 9 cm)
Item Weight	1.5 kg (3.3 pounds)
Material	ABS
Timing Options	1, 5, 10 minutes
Special Feature	Foldable

9. WARRANTY INFORMATION

Specific warranty information for the Generic Mini Foldable Washing Machine XYJ-01 is not provided in this manual. Please refer to the product packaging or contact the retailer/manufacturer for details regarding warranty coverage and terms.

10. SUPPORT

For technical support, service, or inquiries regarding your Generic Mini Foldable Washing Machine XYJ-01, please contact the seller or refer to the contact information provided with your purchase documentation. Please have your model number (XYJ-01) and purchase date available when seeking support.

